



amazon basics A2DP Bone Conduction Headphones User Manual

[Home](#) » [amazon basics](#) » amazon basics A2DP Bone Conduction Headphones User Manual 


amazon basics A2DP Bone Conduction Headphones User Manual



Contents

- 1 Product Instruction
- 2 Charge
- 3 Music Play
- 4 Answer the phone
- 5 Operating instruction
- 6 AI intelligent voice control
- 7 Indicator
- 8 Product parameter
- 9 Care and cleaning
- 10 Product warranty card
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Product Instruction

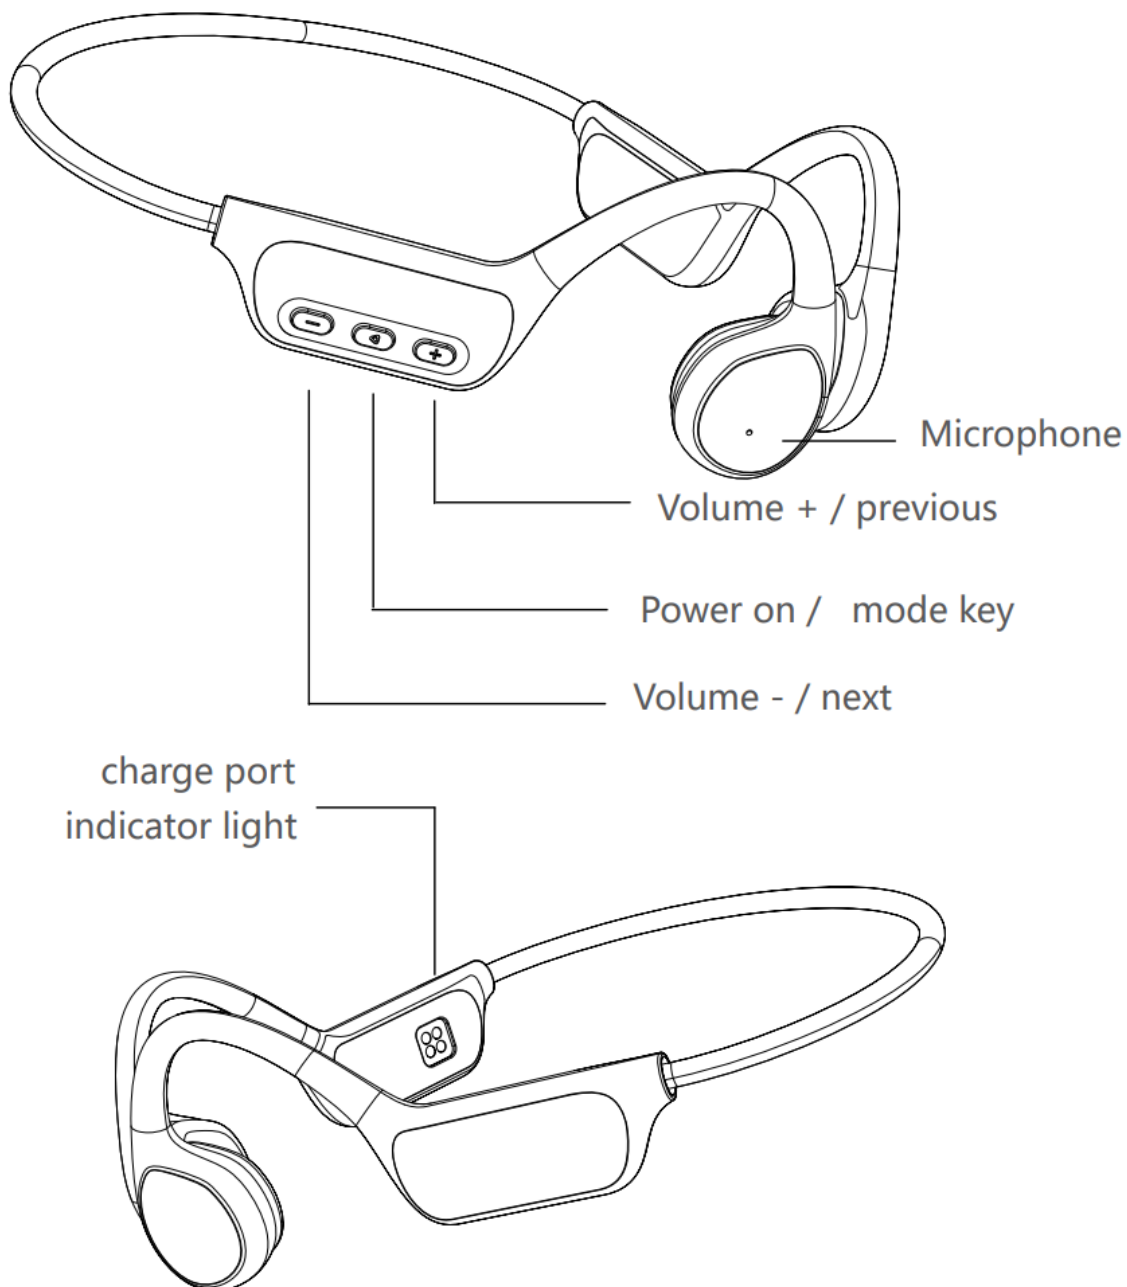



Charge








The headphone with a rechargeable battery , the first use of the headset must be fully charged to the battery . In use , if the voice “ Di-Di ” prompting low power , that the battery is low , then you need to charge the headset . the charging cable should be connected to the headset’s magnetic charging port , about 2 hours to fill . Charging status indicator flashing breathing light , full charge often blue light .

Note : Magnetic charging has a positive and negative pole corresponds to each other adsorption can be charged normally , mustual repulsion can not be charged or even cause a short circuit .






Warning : The rechargeable battery of this product must be properly disposed of for recycling . please do not put the battery into the fire ,so as not to cause an explosion

Function	Operation	Indicator
On	Press and hold “  ” (around 1-3 seconds)	Light is on
Off	Press and hold “  ”(around 1-3 seconds)	Light is off

Music Play

Function	Earphone status	Press and hold “  ”
Increase volume	Play music	click “  ”
Reduce volume	Play music	click “  ”
Next song	Play music	Press and Hold “  ”
Last song	Play music	Click and Hold “  ”
Pause	Play music	Click and Hold “  ”
Resume	Pause	Click and Hold “  ”

Answer the phone

Function	Earphone status	Press and hold “  ”
Answer the call	Phone calls in	Click “  ” to answer Click “  ” to hang up
Decline the call	Phone calls in	Double click “  ”
volume control	calling	click “+” / “-”
Phone / Bluetooth earphone switch	calling	Click and hold “  ” (around 2 second)

Operating instruction

How to pair with Bluetooth


Bluetooth pairing: In the off state, press and hold the The power button for 3 to 5 seconds, the indicator light will enter the red and blue light flashing state, and then enter the pairing state. Turn on the Bluetooth (mobile phone / computer) on the device and search for the device name “X7”, Click the device “X7” to pair and connect.

Bluetooth / MP3 mode switching: Double click the power button (mode) power button freeSwitch bluetooth and memory mode.

Note: Bluetooth mode is default for boot

AI intelligent voice control

(Phone needs to support voice wake-up function)

Function	Earphone status	Operation
Voice control	Bluetooth is connected	Press and hold the “  ” (around 1 second)

Note: In the Bluetooth connection status, touch the multi-function button on the right for 1 second to wake up. After hearing the prompt, you can voice control the phone, saving time to operate the phone, fast and smart

Indicator

Being charging	Red light (flash)
Charging completed	Blue light (remain on)
Waiting for connection	Flash in red and blue alternately
Bluetooth connected	Light is off

Product parameter

- **Charging time:** About 2 hours
- **Distance:** Bluetooth 10 meter
- **Battery:** 200mAh
- **Play:** More than 6 hours@65% volume
- **Agreement:** A2DP, AVRCP, HSP, HFP
- **Music format support:** MP3, WMA, WAV, APE, FLAC
- **Version:** 5.3
- **Input:** 5V/500mA

Care and cleaning

- The headset can not soak seawater / salt water for a long time , filling the magnetic suction part is easy to corrode .
- If not used for a long time , please at least once a month full of electricity .
- Please do not disassemble any parts of the product, if you find that the product has defects , that is ,stop using the product , contact the sales side after sales service.
- Please wipe the water on the surface of the headset after each movement , especially the charging port , to deal with clean in time to prevent port ,affecting the life of the charging port ,affecting the life of the product.
- Keep the product away from fire ,heat,freezing sources, chemicals, violent impact disassembly and extrusion products are strictly prohibited .
- Please use a charging head with an output of 5V1A or less .


Certificate of conformity

Q. C. Passed

Product warranty card

This card is a product warranty certificate, please keep it properly

Product name:		Product model:	
Purchase date:		Client's name:	
Contact:			
Date	Bad phenomenon		Solution

	amazon basics A2DP Bone Conduction Headphones [pdf] User Manual A2DP Bone Conduction Headphones, A2DP, Bone Conduction Headphones, Conduction Head phones, Headphones
---	--

References

- [User Manual](#)