

amber connect AIT 251 Advanced Plug and Track Device User Guide

Home » amber connect » amber connect AIT 251 Advanced Plug and Track Device User Guide 🖺



Contents


- 1 amber connect AIT 251 Advanced Plug and Track **Device**
- 2 Know your device
- 3 Set up your device
- 4 Mounting recommendations
- **5 LED indications**
- **6 Characteristics**
- 7 Safety information
- 8 Warranty
- 9 Documents / Resources
- **10 Related Posts**




amber connect AIT 251 Advanced Plug and Track Device



Know your device

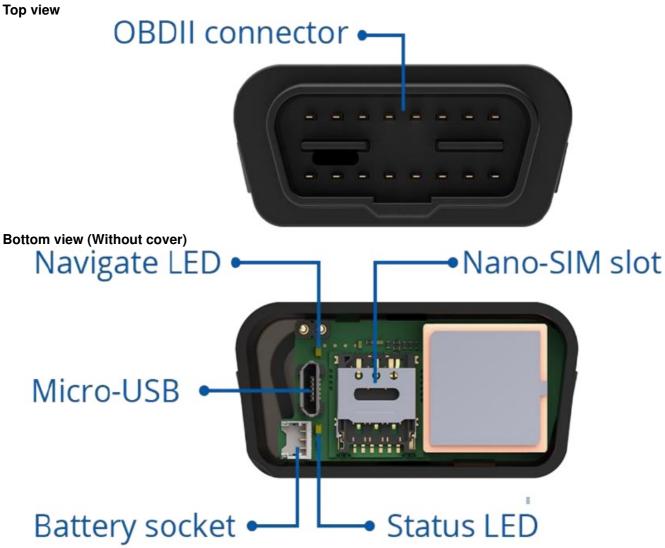


AIT 251 Device view Pinout

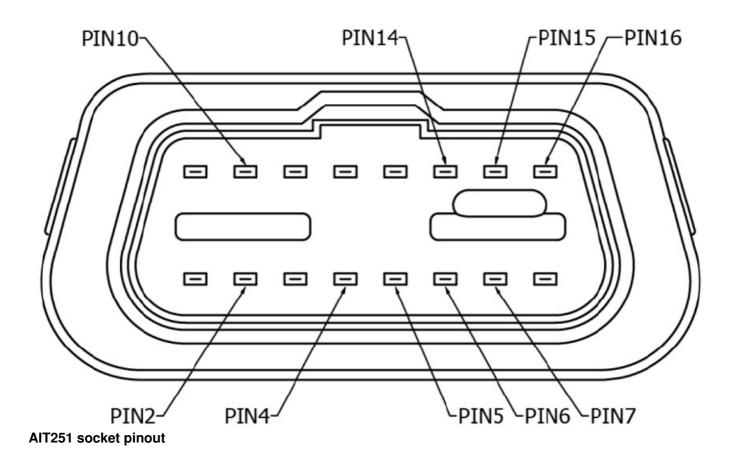


Pin numbe	Pin name	Description
2	PWM_BUS+/VPW	
4	GND (-)	Ground
5	GND (-)	Ground
6	CAN_H	CAN high
7	K-Line	
10	PWM_BUS-	
14	CAN_L	Ground pin. (10-30) V DC (—)
15	L-Line	CAN low
16	VCC (12 – 30)V DC(+)	Power supply (+12-30 V DC)


Set up your device

How to insert Micro-SIM card and connect the battery

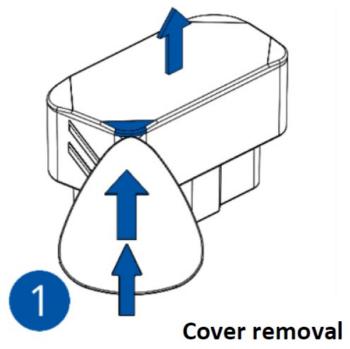


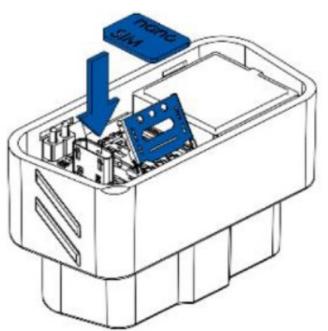

• Micro-SIM card insert

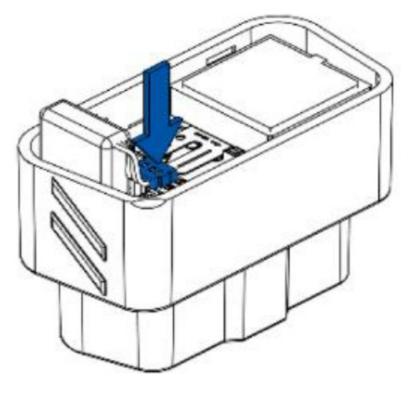

· Battery connection

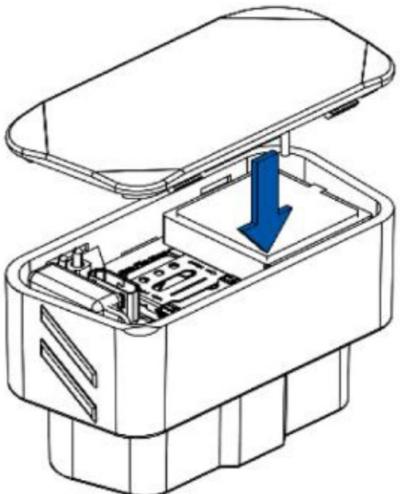

- Attaching cover back
- 1. Open the top cover of the device. Cover is opened by unclipping it at the recessed corner.
- 2. Insert Nano-SIM card as shown with PIN request disabled or read our Wiki how to enter it later in amber Configurator. Make sure that Nano-SIM card is fitted properly into the holder.
- 3. Connect the battery as shown in the figure.


4. After configuration, see "PC Connection (Windows)", attach device cover back.

Device is ready to be mounted.

Mounting recommendations

Connecting the device to the vehicle:

• Find OBDII connector in your

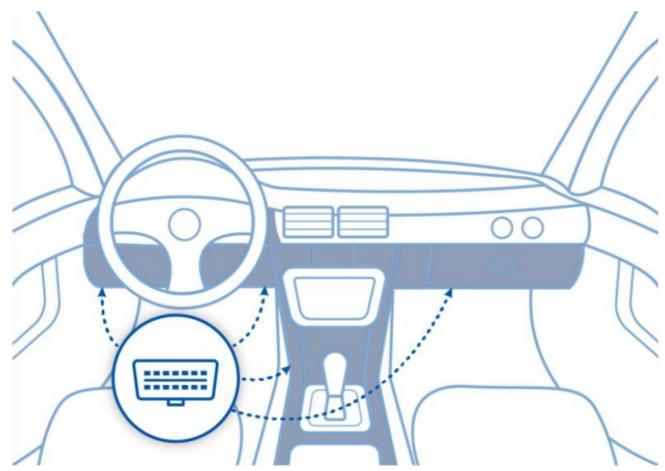

Most common AIT 251 connector locations.

LED indications

Navigation LED indications

Behaviour	Meaning
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because: Device is not working or Device is in sle ep mode
Blinking fast constantly	Device firmware is being flashed

Status LED indications

Behaviour	Meaning
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Off	Device is not working or Device is in boot mode

Characteristics

Basic characteristics

Module	
Name	AIT 251
Technology	GSM, GPRS, GNSS, BLUETOOTH

GNSS	
GNSS	GPS, GLONASS, GALILEO, BEIDOU, SBAS, QZSS, DGPS, AGP S
Receiver	33 channel
Tracking sensitivity	-165 dBM
Accuracy	< 3 m
Hot start	<1s
Warm start	< 25 s
Cold start	< 35 s

Cellular	
Technology	GSM
2G bands	Quad-band 850/900/1800/1900 MHz
Data transfer	GPRS Multi-Slot Class 12 (up to 240 kbps)
Data support	SMS (text/data)

Power		
Input voltage range	12 – 30 V DC with overvoltage protection	
Back-up battery	3.7 V 45 mAh	
Internal fuse	3 A, 125 V	
Power consumption	At 12V < 6 mA (Ultra Deep Sleep) At 12V < 8 mA (Deep Sleep) At 12V < 11 mA (Online Deep Sleep) At 12V < 20 mA (GPS Sleep) At 12V < 35 mA (nominal with no load)	
Bluetooth		
Specification	4.0 + LE	
Supported peripherals	Temperature and Humidity sensor, Headset, OBDII dongle, Inatec k Barcode Scanner, Universal BLE sensors support	
OBD INTERFACE		
Data	K-Line, CAN Bus data	
Data reading	Up to 32 vehicle onboard parameters, 9 supported OBD protocols	
Interface		
Connection	OBDII socket	
GNSS antenna	Internal High Gain	
GSM antenna	Internal High Gain	
USB	2.0 Micro-USB	
LED indication	2 status LED lights	
SIM	Nano-SIM	
Memory	128MB internal flash memory	
Physical specification		
Dimensions	52.6 x 29.1 x 26 mm (L x W x H)	

Operating environment	
Operating temperature (without battery)	-40 °C to +85 °C
Storage temperature (without battery)	-40 °C to +85 °C
Operating humidity	5% to 95% non-condensing
Ingress Protection Rating	IP41
Battery charge temperature	+10 °C to +45 °C

Battery discharge temperature	-20 °C to +60 °C	
Dette market and the second and the second	-20 °C to +45 °C for 1 month	
Battery storage temperature	-20 °C to +35 °C for 6 months	
Features		
Sensors	Accelerometer	
Scenarios	Green Driving, Over Speeding detection, Jamming detection, GNS S Fuel Counter, Excessive Idling detection, Unplug detection, Towing detection, Crash detection, Auto Geofence, Manual Geofence, Trip	
Sleep modes	GPS Sleep, Online Deep Sleep, Deep Sleep, Ultra Deep Sleep	
Configuration and firmware update	FOTA Web, FOTA, Amber Configurator (USB, Bluetooth), FMBT m obile application (Configuration)	
SMS	Configuration, Events, Debug	
GPRS commands	Configuration, Debug	
Time Synchronization	GPS, NITZ, NTP	
Fuel monitoring	OBDII	
Ignition detection	Accelerometer, External Power Voltage, Engine	

Safety information

This message contains information on how to operate AIT 210 safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

- The device uses SELV limited power source. The nominal voltage is +12 V DC. The allowed voltage range is +12...+30 V DC.
- To avoid mechanical damage, it is advised to transport the device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible. They show the status of device operation.
- Before unmounting the device from vehicle, ignition MUST be OFF.
- Do not disassemble the device. If the device is damaged, the power supply cables are not isolated or the isolation is damaged, DO NOT touch the device before unplugging the power supply.
- All wireless data transferring devices produce interference that may affect other devices which are placed nearby.
- Please consult representatives of your vehicle model regarding OBDII location on your vehicle. In case you are not sure about proper connection, please consult qualified personnel.
- The programming must be performed using a PC with autonomic power supply.
- Installation and/or handling during a lightning storm is prohibited.
- The device is susceptible to water and humidity.

• Amber is not responsible for any harm caused by wrong cables used for connection between PC and AIT 251

WARNING

Do not use AIT 251 device if it distracts driver or causes inconvenience due to OBDII placement. Device must not interfere with driver.

 Battery should not be disposed of with general household waste. Bring damaged or worn-out batteries to your local recycling center or dispose them to battery recycle bin found in stores.

Certification and Approvals

- AIT 251 CE / RED
- AIT 251 E-Mark
- AIT 251 EAC
- AIT 251 RoHS
- AIT 251 REACH
- AIT 251 Declaration of IMEI assignment
- AIT 251 Declaration of device operation temperature
- This sign on the package means that it is necessary to read the User's Manual before your start using the device. Full User's Manual version can be found in our Wiki.
- This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.
- Hereby, Amber declare under our sole responsibility that the above described product is in conformity with the relevant Community harmonization: European Directive 2014/53/EU (RED).

Warranty

Amber connect guarantees its products to be free of any manufacturing defects for a period of 24 months. With additional agreement we can agree on a different warranty period, for more detailed information please contact our sales manager.

All batteries carry a reduced 6 month warranty period.

If a product should fail within this specific warranty time, the product can be:

- Repaired
- · Replaced with a new product
- · Replaced with an equivalent repaired product fulfilling the same functionality
- Amber can also repair products that are out of warranty at an agreed cost.

Warranty Disclaimer

Amber products are intended to be used by persons with training and experience. Any other use renders the limited warranties expressed herein and all implied warranties null and void and same are hereby excluded. also excluded from this limited warranty are any and all incidental or consequential damages including but not limited to, loss of use or revenue, loss of time, inconvenience or any other economic loss.

Documents / Resources



amber connect AIT 251 Advanced Plug and Track Device [pdf] User Guide
AIT 251 Advanced Plug and Track Device, AIT 251, Advanced Plug and Track Device, Advance
d Plug, Plug, Track Device

Manuals+,