

# anden A77 Digital Dehumidifier Control Instruction Manual

Home » anden A77 Digital Dehumidifier Control Instruction Manual



Model A77
Dehumidifier Control
Installation & Operating Instructions



Installed by:

Installer phone: ———— Date installed: —————

#### **Contents**

- 1 **OVERVIEW**
- **2 SAFETY INSTRUCTIONS**
- **3 SPECIFICATIONS**
- **4 LOCATION**
- RECOMMENDATIONS
- **5 INSTALLATION**
- **6 SYSTEM CHECKOUT**
- **7 SEQUENCE OF OPERATION**
- **8 TROUBLESHOOTING**
- **9 LIMITED WARRANTY**
- **10 WARRANTY REGISTRATION**
- 11 Documents / Resources
  - 11.1 References
- **12 Related Posts**

# **OVERVIEW**

The control allows the user to set and adjust the humidity setting and turn dehumidification on or off from a convenient location. In this application, the Model A77 uses an onboard sensor to monitor the relative humidity (%RH) in the space in which it is located and displays the measured relative humidity on the digital display.

### **SAFETY INSTRUCTIONS**



- 1. Improper installation may cause property damage or injury. Installation, service, and maintenance must be performed by a qualified service technician.
- Line voltage may cause serious injury from electric shock. Disconnect electrical power before starting installation or servicing. Leave the power disconnected until installation/ service is completed. This control is not a 120 Volt (line voltage) device.



- 1. Read all instructions before beginning installation.
- 2. Do not use in pool applications. Pool chemicals can damage the control.
- 3. Do not use solvents or cleaners on or near the display and circuit board. Chemicals can damage components.

#### **SPECIFICATIONS**

ELECTRICAL		
Input Voltage and Current	Voltage: 24VAC +/-20% Current: 25mA (nominal), 50mA (max.) at 24VAC	
Output	Dry Contact, Normally Open	

CONTROL		
Control Range	35% – 80% RH	
Accuracy	+/-5% RH	
Differential	3%	
Low Limit	40°F Dew Point	
High Limit	99°F Dry Bulb	


# **LOCATION RECOMMENDATIONS**

# **MOUNT CONTROL**

- In the area where moisture levels need to be monitored and controlled.
- On an interior wall.
- At/near canopy height.
- At least 18" from an outside wall.


# DO NOT MOUNT CONTROL


- In the flow of a supply register.
- Behind doors, in corners, or other dead air spaces.
- Indirect sunlight, near lighting fixtures, or other appliances that give off heat.
- On an outside or unconditioned area wall.
- In stairwells or near outside doors.
- On a wall with concealed pipes or ductwork.

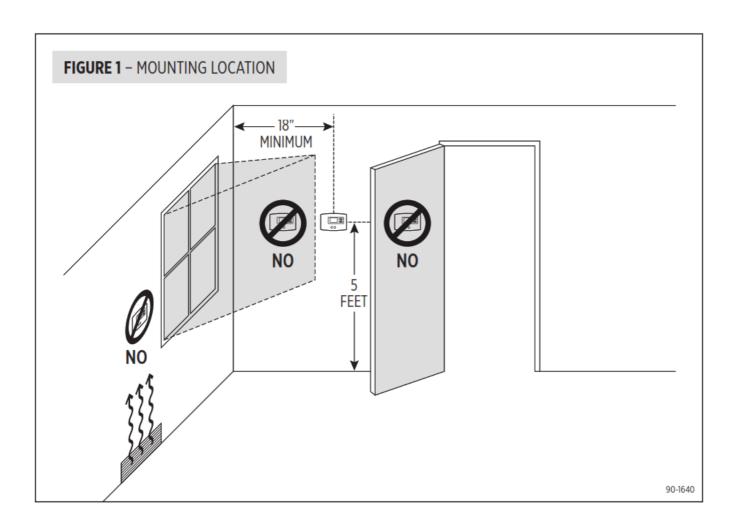

# **INSTALLATION**

**MOUNT CONTROL** 

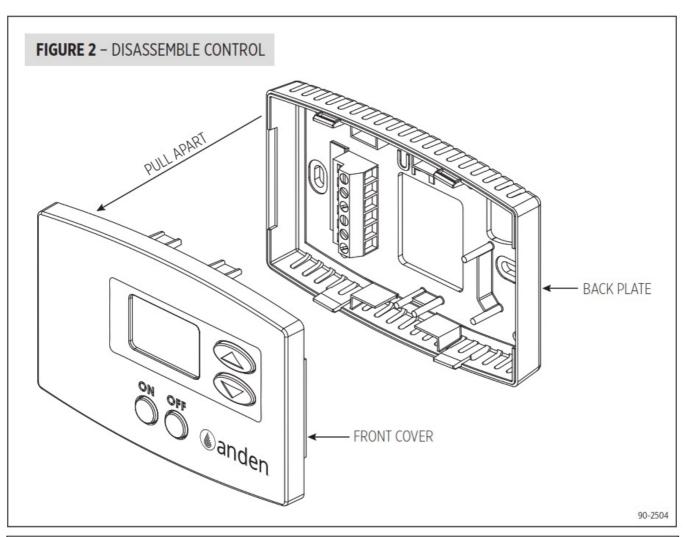

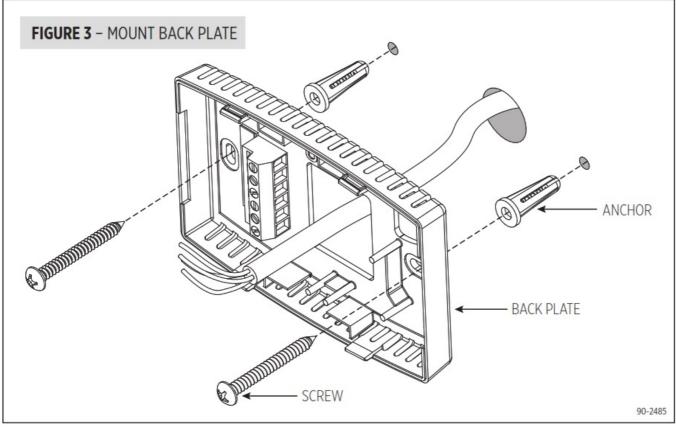


# **REQUIRED COMPONENTS**


• 18-22 gauge wire (field supplied), 4 wires required, run new cable as needed.

- (2) #8 x 1-1/2" mounting screws (supplied)
- (2) Anchors (supplied)
- 1. Level the backplate on the wall and mark the mounting holes and wire access location on the wall.
- 2. Drill two 3/16" mounting holes and a 3/4" wire access hole. See **FIGURE 3**.
- 3. Install the drywall anchors flush with the wall surface. **Note:** Mounting holes on the backplate are designed to fit on a horizontal J-box.
- 4. Run a 4-wire cable from the dehumidifier to the wall mount location and through the square hole in the backplate.
- 5. Secure the backplate to the wall using the two #8 x 1-1/2" screws.


# **WIRING A77 WITH ANDEN® DEHUMIDIFIERS**

- 1. Disconnect power to the dehumidifier and HVAC system.
- 2. Remove the wiring access cover next to the control on the dehumidifier. See FIGURE 4.
- 3. Wire the Model A77 to the dehumidifier as shown in FIGURE 5.
- 4. Ensure the NO/NC switch on the dehumidifier control is set to NO. See FIGURE 5.

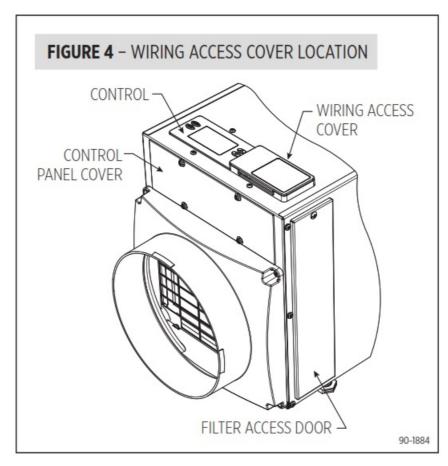


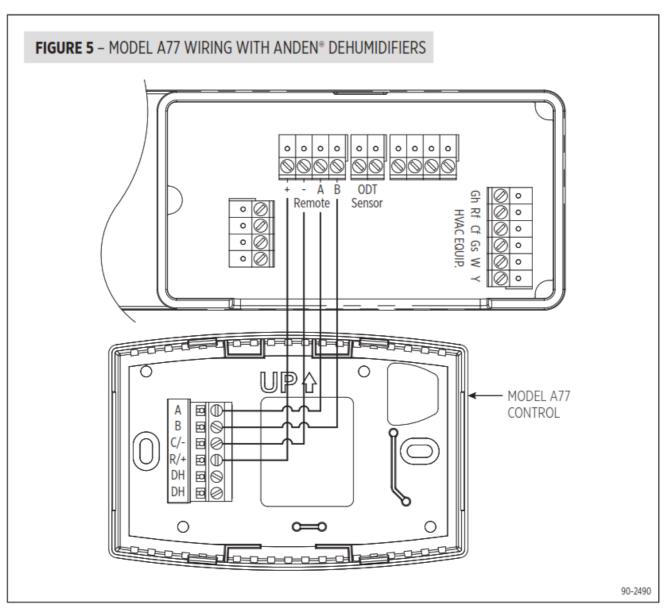

5. Snap the wiring access cover back into place, power up the dehumidifier and use the ON/OFF button to turn the unit OFF (if ON).

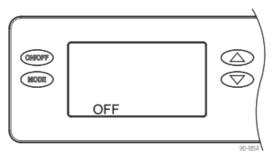

- 6. Press and hold the MODE button for 3 seconds to enter the Installer Set Up menu. REMOTE DISABLED will appear on the display when Installer Set-Up is entered.
- 7. Press the or button to change to REMOTE ENABLED.

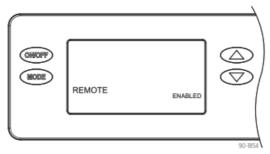


8. Repeatedly press the **MODE** button until **DONE** appears on the display.

# SYSTEM CHECKOUT

# **POWER UP**

- 1. Check all wiring.
- 2. Plugin a dehumidifier and restore power to the HVAC system.
- 3. Turn on/off switch on dehumidifier ON. After a 4-second start-up sequence, all buttons on the Model A77 will be functional.
  - The control will be OFF.
  - The humidity setting will be 60%.
  - The control will display the measured humidity.

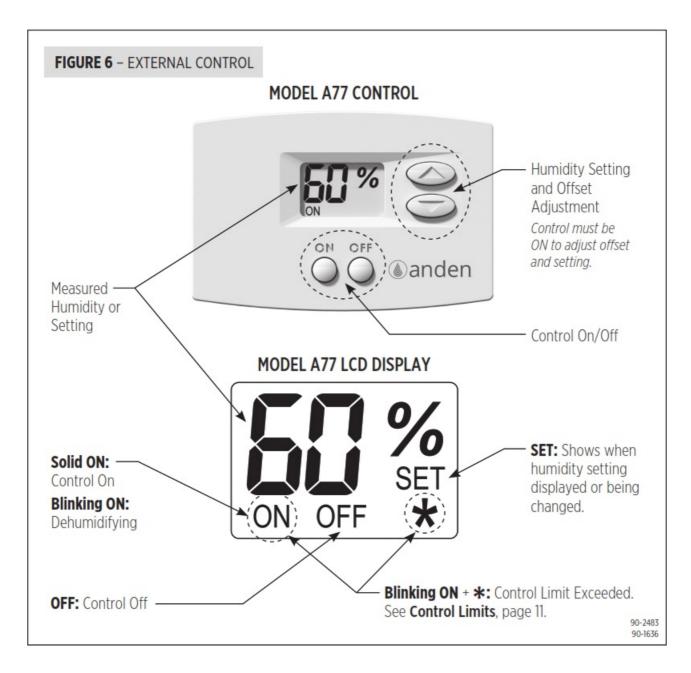

### **TEST MODE**

1. Press and hold the ON button for 5 seconds to enter Test Mode.

- a. Verify the measured humidity is displayed on the Model A77 screen.
- b. Verify **ON** blinks on the Model A77 screen.
- 2. After 5 minutes or after pressing the OFF button, the control will enter Off mode.
  - a. Verify the dehumidifier turns off.


#### **HUMIDITY SETTING**

- · The control must be ON to adjust the humidity setting.
- The (▲) and (▼) buttons are used to increase or decrease the setting.
- The first press of either button will display the current setting and SET on the LCD display.
- Each subsequent push of the ▲ or ▼ button will change the setting by 1% RH.
- If a button is held down, the setting will continually change by 1% every 1/2 second for as long as the button is pressed.
- The control will return to Normal Mode, displaying the measured humidity, 5 seconds after the last button press/release.

#### **OFFSET**

An offset can be applied to the humidity reading to avoid discrepancies with other humidity measuring devices. Allow 48 hours for the control to acclimate before applying an offset. The control must be ON to enter the Offset screen.

- Press and hold the OFF button for 5 seconds to enter the Offset screen.
- The buttons can be used to set an offset value between -5% RH and +5% RH.
- The control will return to Normal Mode, displaying the measured humidity, 5 seconds after the last button press/release.

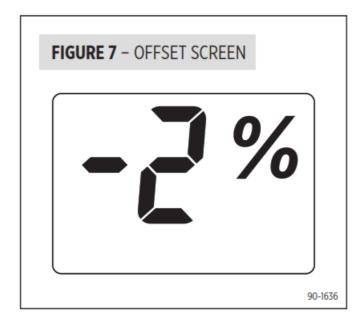

### **SEQUENCE OF OPERATION**

# **Normal Mode**

· When the measured humidity is greater than the setting, the control will activate the dehumidifier output, the

- dehumidifier will begin dehumidifying, and ON will blink on the LCD display.
- When the measured humidity falls 3% below the setting, the control will deactivate the dehumidifier output, the dehumidifier will stop dehumidifying and the LCD will display a solid ON.

#### **Control Limits**


- If the control measures a dew point below 40°F OR a temperature above 99°F, the control will deactivate the dehumidifier output if actively dehumidifying, the dehumidifier will stop dehumidifying, and **ON** and\*will blink on the LCD screen.
- The control will resume normal operation when the measured dew point is greater than 45°F or the measured temperature is below 94°F, whichever control limit was exceeded.

# **TROUBLESHOOTING**

Use the guide on the following page to help find and correct system faults. Contact Technical Support before replacing the control or for additional troubleshooting. Technical Support is available Monday through Friday, 7:00 a.m. to 5:00 p.m. CST, at (800) 972-3710.

### **ERROR CODES**

When the control detects an internal error, it will stop controlling, deactivate the dehumidifier output, and the LCD will display the Error Code. See FIGURE 8. The control will attempt to recover from the error every 10 minutes. The Error Code will continue to be displayed as long as the error condition exists. Button presses are not registered when in Error Mode. Cycling power to the control will not clear the code and the control will need to be replaced.

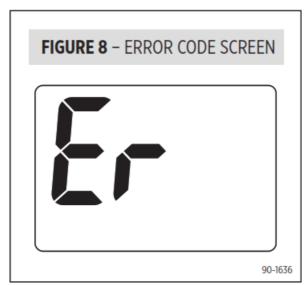

# **DEHUMIDIFIER DIAGNOSTIC CODES**

When a dehumidifier error occurs, the diagnostic code will be displayed on the A77 screen.

TABLE 1 – TROUBLESHOOTING GUIDE			
Symptom	Possible Reason	Troubleshooting Procedure	

No power to the con trol.	Incorrect wiring.	Verify wiring connections between control, dehumidifier, and HVAC system (where applicable).	
	No power to the dehumidifier.	<ul> <li>Verify that the dehumidifier power switch is ON.</li> <li>Verify the circuit breaker has not tripped.</li> </ul>	
	No power to HVAC equipment.	<ul> <li>Verify HVAC system switch is on.</li> <li>Verify the circuit breaker has not tripped.</li> </ul>	
Control does not tur n on dehumidifier o utput.	Incorrect wiring.	Verify wiring connections between control and dehumidi fier.	
The blank display or missing segments during Te st mode.	LCD error.	Replace control.	
The display shows <b>Er</b> .	Control detected an internal er ror.	The control will need to be replaced.	
	Control was recently installed after being stored in an uncont rolled temperature and humidit y environment.	Allow 48 hours for control to acclimate.	
Inaccurate humidity reading.	Offset has been applied to the humidity reading.	Change the offset.	
	Control is mounted in direct su nlight, above a heat or humidit y source, or in the path of a su pply register.	Relocate the control.	

# **TABLE 2** – DEHUMIDIFIER DIAGNOSTIC CODES

Diagnostic C ode	Failure Mode	Action	Reset
E1	Internal Humidity or Temperature Sensor Open or Shorted	1. If connection okay, replace User Interface, Part No . 5738.	Cycle Power
E3	Model A77 Remote Control Communicati on Loss	<ol> <li>Check connections between Model A77 and the dehumidifier control board. Terminals should be fully inserted and secured in the control board and Model A77 control terminals.</li> <li>If connections are correct and secure, turn off the dehumidifier and remove the Model A77. Use a short section of 4-wire cable to reconnect the Model A77 t o the control board. Turn the dehumidifier back on an d increase the dryness level setting on the Model A77. If the dehumidifier turns on, the problem is with the wiring between the dehumidifier and control.</li> <li>If the dehumidifier does not turn on, call Technica I Support.</li> </ol>	Self-Correcting

E4 Insufficient Capa	<ol> <li>Check the frost sensor connection at the power board. The terminal should be fully seated on the power board pins.</li> <li>Remove the side access panel and verify that the sensor is secured to the suction line.</li> <li>If the sensor is connected and secured to the refrigeration line proceed to the next step.</li> <li>Reset the fault by cycling power to the dehumidifier.</li> <li>Turn the humidity setting down (below room/home humidity level) to make a dehumidification call.</li> <li>Allow the fan and compressor to run for approximately 10-15 minutes and then enter diagnos tic test mode by simultaneously pressing the UP AR ROW and MODE buttons for 3 seconds. The LCD will display the temperature measured by the internal sensor while also displaying AIR SAMPLING and ON, the humidity measured by the internal sensor while also displaying ON. Scroll through these values and by using the UP/DOWN arrow butt ons.</li> <li>Record values and call Technical Support.</li> </ol>	Cycle Power
----------------------	--	-------------

E5	High-Temperature T hermistor Failure	<ol> <li>Check the high-temperature sensor connection a t the power board. The terminal should be fully seate d on the power board pins.</li> <li>Remove the side access panel and verify the sensor is not damaged and connected to the refriger ation line coming from the compressor.</li> <li>If the sensor is connected and secured to the refrigeration line, it may need to be replaced with Part N o. 5815 – contact Technical Support to confirm.</li> </ol>	Cycle Power
E6	Low-Temperature Th ermistor Failure	<ol> <li>Check the low-temperature sensor connection at the power board.</li> <li>Remove the side access panel and verify the sensor is not damaged and connected to the suction line.</li> <li>If the sensor is connected and secured to the refrigeration line, it may need to be replaced with Part No. 5814 – contact Technical Support to confirm.</li> </ol>	Self-Correcting
E7	Float Switch Open	<ol> <li>Empty the condensate pan.</li> <li>Check the float switch connection at the control board.</li> <li>If not using a float switch, verify jumper is betwee n float switch terminals on dehumidifier control board.</li> <li>If the problem persists, replace the float switch.</li> </ol>	Self-Correcting
E8	Inlet Air Temperature Out of 50°F – 104°F Range or Dew Point Below 36°F	<ol> <li>Verify all ductwork is properly sealed.</li> <li>If no signs of leak points, contact Technical Support.</li> </ol>	Self-Correcting
E9	Fan or Compressor Fault	Cycle power. If the problem persists, contact Tech nical Support.	Cycle Power

# **LIMITED WARRANTY**

Your Research Products Corporation Anden® Dehumidifier Control is expressly warranted for five (5) years from the date of installation to be free from defects in materials or workmanship.

Research Products Corporation's exclusive obligation under this warranty shall be to supply, without charge, a replacement for any control which is found to be defective within such five (5) year period and which is returned not later than thirty (30) days after said five (5) year period by you to either your original supplier or to Research Products Corporation, Madison, Wisconsin 53701, together with the model number and installation date of the control.

THIS WARRANTY SHALL NOT OBLIGATE RESEARCH PRODUCTS CORPORATIONS FOR ANY LABOR COSTS AND SHALL NOT APPLY TO DEFECTS IN WORKMANSHIP OR MATERIALS FURNISHED BY YOUR INSTALLER AS CONTRASTED TO DEFECTS IN THE CONTROL ITSELF.

IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE AFORESAID FIVE-YEAR PERIOD. RESEARCH PRODUCTS CORPORATION'S LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, OTHER THAN DAMAGES FOR PERSONAL INJURIES, RESULTING FROM ANY BREACH OF THE AFORESAID IMPLIED WARRANTIES OR THE THE ABOVE LIMITED WARRANTY IS EXPRESSLY EXCLUDED. THIS LIMITED WARRANTY IS VOID IF DEFECT(S) RESULT FROM FAILURE TO HAVE THIS CONTROL IS INSTALLED BY A QUALIFIED HEATING AND AIR CONDITIONING CONTRACTOR. IF THE LIMITED WARRANTY IS VOID DUE TO FAILURE TO USE A QUALIFIED CONTRACTOR, ALL DISCLAIMERS OF IMPLIED WARRANTIES SHALL BE EFFECTIVE UPON INSTALLATION.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages so the above exclusion or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

#### WARRANTY REGISTRATION

Visit us online at <u>anden.com</u> to register your Anden product. If you do not have online access, please mail a postcard with your name, address, phone number, email address, product purchased, model number, date of purchase, and dealer name and address to Research Products Corporation, P.O. Box 1467, Madison, WI 53701. **Your warranty registration information will not be sold or shared outside of this company.** 



#### anden.com

P.O. Box 1467 Madison, WI 53701-1467 800.972.3710 F: 608.257.4357 Printed in the USA

©2021 Anden – A Quality brand from Research Products Corporation 61001812 B2208531B 1.21

# **Documents / Resources**



anden A77 Digital Dehumidifier Control [pdf] Instruction Manual A77, Digital Dehumidifier Control, A77 Digital Dehumidifier Control

#### References

Anden | Humidity Control Built for Grow

Manuals+