


ASCONA PM 040-K Bed  
with Lifting Mechanism  
Relax

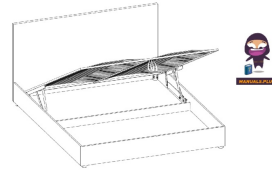

# ASCONA PM 040-K Bed with Lifting Mechanism Relax Instruction Manual


[Home](#) » [Ascona](#) » ASCONA PM 040-K Bed with Lifting Mechanism Relax Instruction Manual 

## Contents







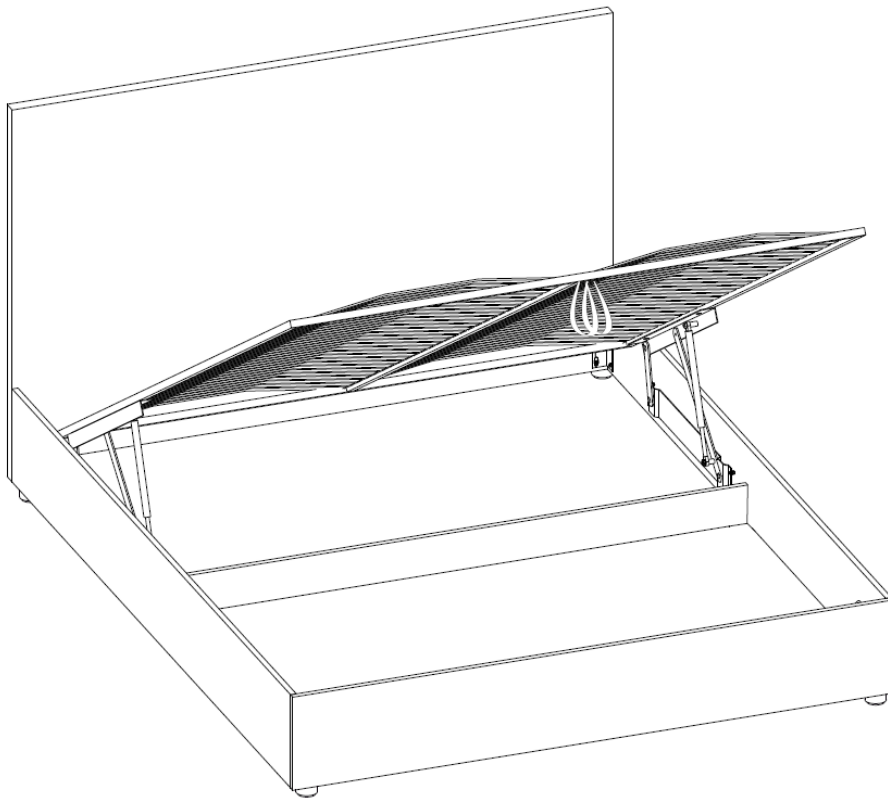













- [1 ASCONA PM 040-K Bed with Lifting Mechanism Relax](#)
- [2 Packing list for the bed](#)
- [3 Packing set for legs](#)
- [4 Prior to assembly](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)










# ASCONA

**ASCONA PM 040-K Bed with Lifting Mechanism Relax**











**Packing list for the bed**





















Package	Part	Item	Name	Quantity
Package No1		K01	Backrest	1
		K05	Linen box bottom (*may be packed separately)	1
			Instructions for use (certificate)	1
			Fabric sample (sewed in the cover for sidebars)	1
Package No2		K02	Lateral sidebar	2
		K03	Intermediate sidebar	1
		K04	Intermediate crosspiece	1
		K24	The rails complete set depending on the bed size	8
			Assembly instructions	1
Package No2 Accessories pack		KΦ81	Glidw self-adhesive 20x20	14
		KΦ23	Furniture angle piece 140*140*90	4
		KΦ20	Fngle piece 30*52 L-120 oval black	4
		KΦ19	Metal shelf 50*100*25	4
		K06	Strap	2
		KΦ12	Washer 6*1.6	4
		KΦ01	Screw M6*20	22
		KΦ57	Screw M6*25	8
		KΦ11	Nut M6	4
		KΦ08	Screw self-fapping 3.8*32	22
		Legs Legs variant depends on a bed model that is represented as a sample in showroom or on the website. (See Legs Delivery list)		1 set

Package	Part	Item	Name	Quantity
Package No3		P01	Bed base	1
		PΦ10	Lifting mechanism	1 set
		PΦ17	Gas shock absorbers	2
		PΦ14	Mattress holders (*may be of different variant)	2
		PΦ31		2
		PΦ101	Screw M6*16	8
		PΦ01	Bolt M8*45 (head)	4
		PΦ07	Washer M8	4
		PΦ06	Nut M8	4

Legs variant depends on bed model that is represented as a sample in showroom or on the website  
Complete set is shown on the label of Accessories Pack

### Packing set for legs

Package	Part	Item	Name	Quantity
Legs complete set No1		KΦ56	Leg d38*32 black	4
		KΦ08	Screw self-tapping 3,8*32	4
Legs complete set No2		KΦ77	Leg for beds chrome h-100	4
		KΦ39	Nut M8	4
		KΦ40	Washer M8	4
Legs complete set No3		KΦ54	Leg for beds chrome h-150 (pin 8mm)	4
		KΦ39	Nut M8	4
		KΦ40	Washer M8	4





Package	Part	Item	Name	Quantity
Legs complete set No4		KΦ130	Leg wooden conical 60*45*12 veneer oak pin M8	4
		KΦ40	Washer M8	4
		KΦ144	Nut M8	4
		KΦ81	Glide self adhesive felt 20x20	4
Legs complete set No5		KΦ129	Leg conical h-150	4
		KΦ40	Washer M8	4
		KΦ144	Nut M8	4
		KΦ81	Glide self adhesive felt 20x20	4
Legs complete set No6		KΦ122	Leg wooden h-100	4
		KΦ40	Washer M8	4
		KΦ144	Nut M8	4
		KΦ81	Glide self adhesive felt 20x20	4
Legs complete set No7		KΦ127	Leg wooden h-150	4
		KΦ40	Washer M8	4
		KΦ144	Nut M8	4
		KΦ81	Glide self adhesive felt 20x20	4
Legs complete set No8		KΦ148	Leg black matte	4
		KΦ40	Washer M8	12
		KΦ39	Nut M8	12
		KΦ149	Bolt M8*20	12

### Prior to assembly



1. Check all the parts for any damage before assembling. Any claim for them on assembled article is not accepted



- by Manufacturer. Package shall be kept until the end of assembly process.
2. When revealing any defect or incompleteness in the process of assembling, the package shall be kept until arepresentive of trading company arrives. Assembly and operation Instructions shall be kept during all the period of exploitation.
  3. Check the parts and accessories quantity against the list. Manufacturer retains the right to make structural changes into the article, change accessories and metalware for analogous that do not affect design and do not influence on functional properties of the article. If incompleteness or any damage, mark absent part number and inform the store to replace it.
  4. Maintain the assembly order given in these instructions! If the Assembly and Operation Instructions are not followed the manufacturer's warranty obligations are removed.
  5. To install sofa/armchair-bed/bed a flat floor zone shall be chosen! If the floor are curved may present deviations in the functioning of transformation mechanism of sofa/armchair-bed/bed, distortions of the article form. Any carpet presence is undesirable, because it makes transformation process difficult.
  6. Perform the sofa/armchair-bed/bed assembly by two. Move all the parts gently without any jump, place them steady, escape their falls and hits!
  7. Move furniture and their parts only slightly lifted. This will allow to exclude any deformation or damage.

**For assembling required**

			
Крестовая отвертка Cross-point screwdriver	Рожковый ключ №10, №13 Open-end wrench	Ножницы Scissors	Рулетка Tape-measure

1			
---	---	--	---

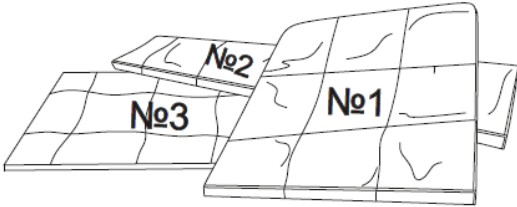

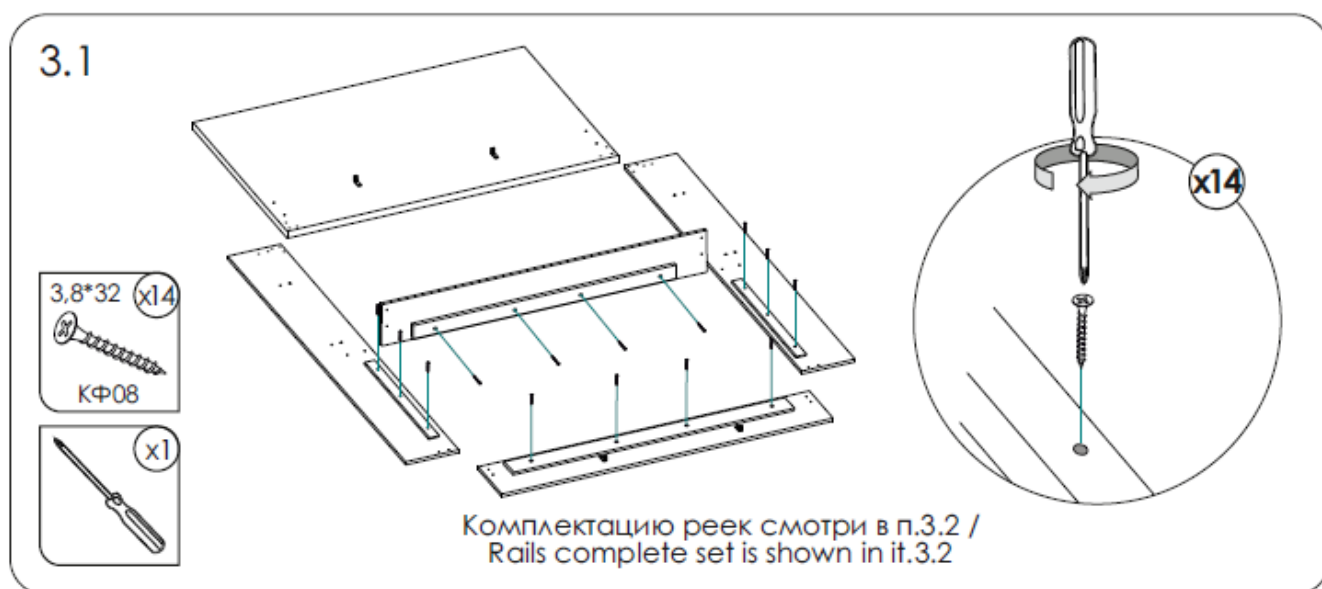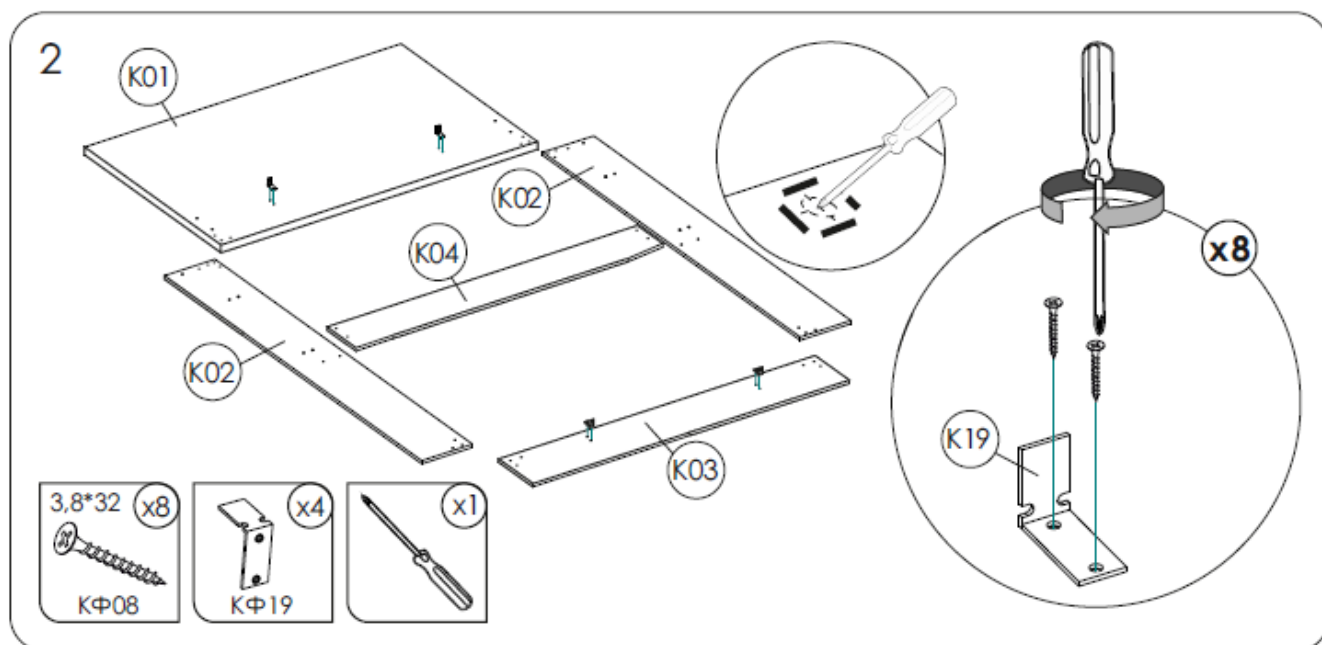
The rails complete set depends on the bed size

**A** — rail 60cm


**B** — rail 70cm

**C** — rail 130cm


090

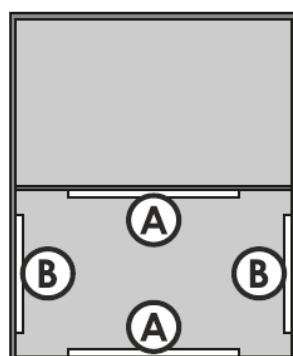

120; 140





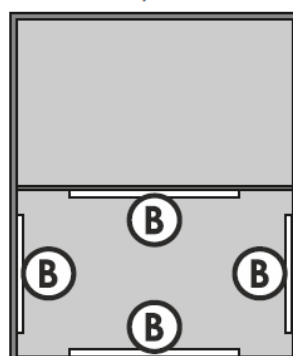


160; 180; 200






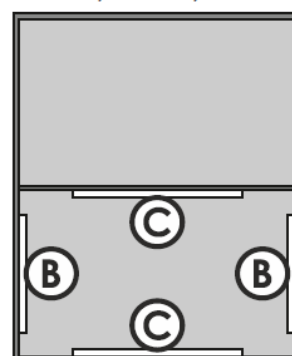


4






Вариант комплектации ножек №1 с опорами под саморез /  
Legs complete set option №1 with under self-tapping screw

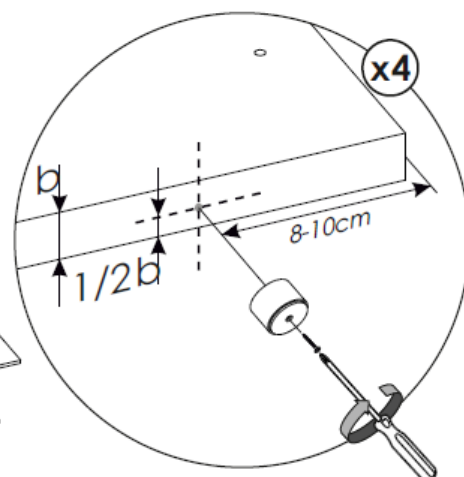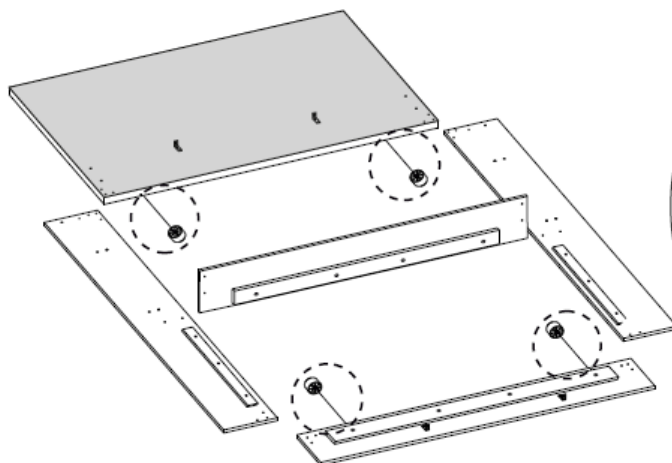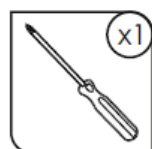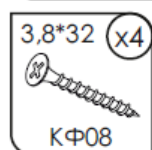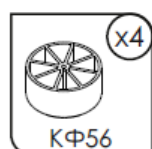

5

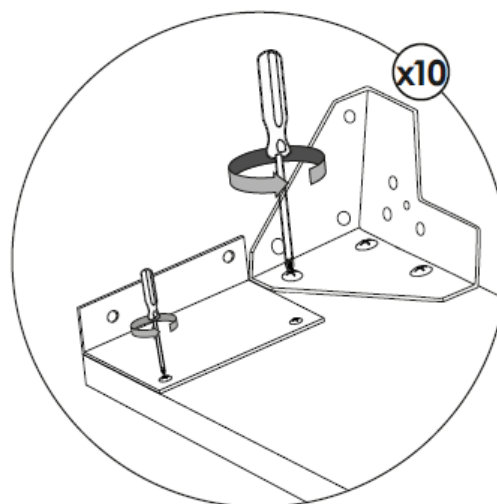
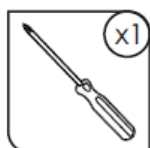
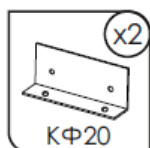
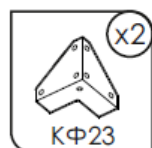
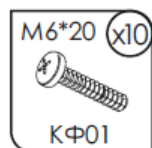
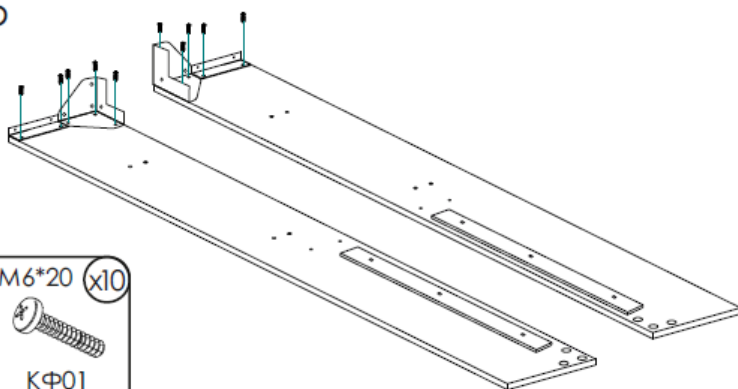


6

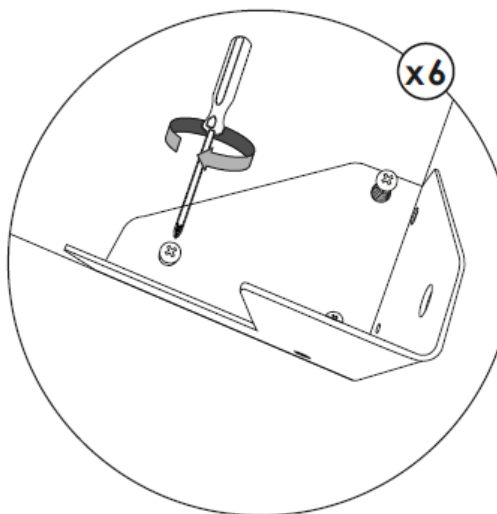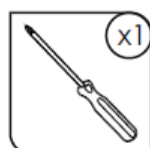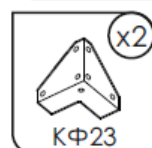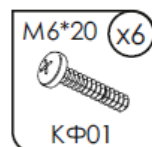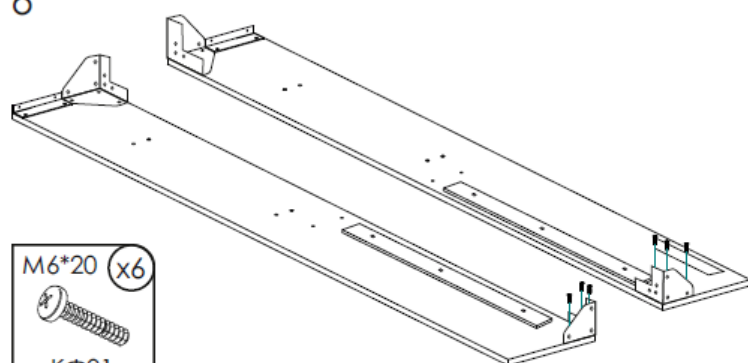




7

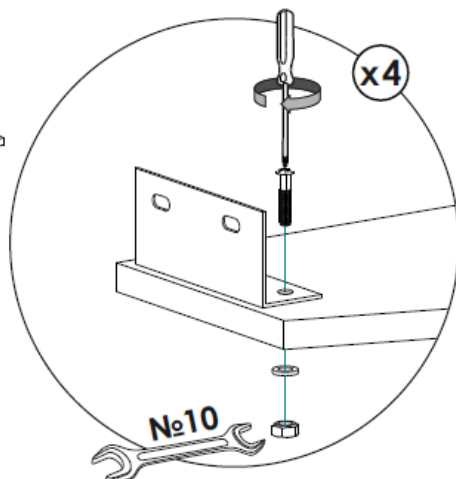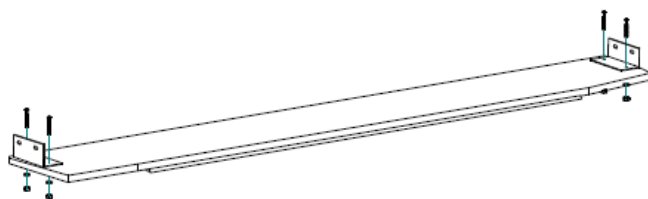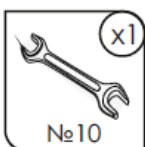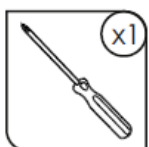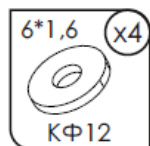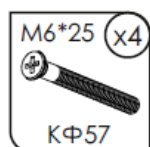




8

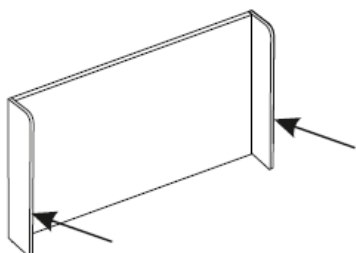


Если у вашей кровати спинка с «ушами»  
перейти к п.11-13/

If your bad has a backrest with "ears"  
move on to it.11-13




9

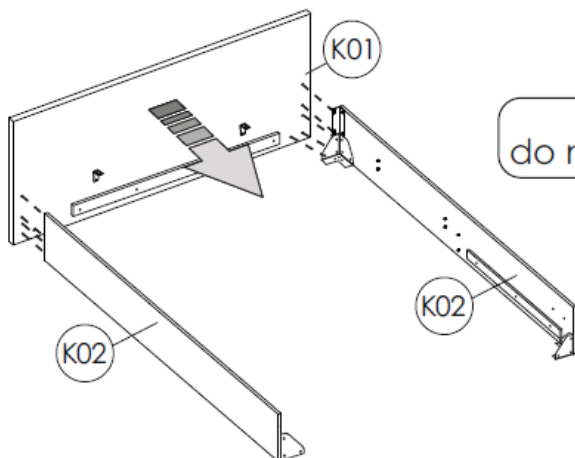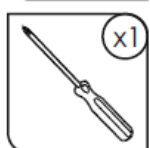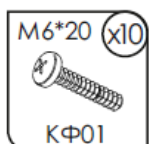


do not tighten

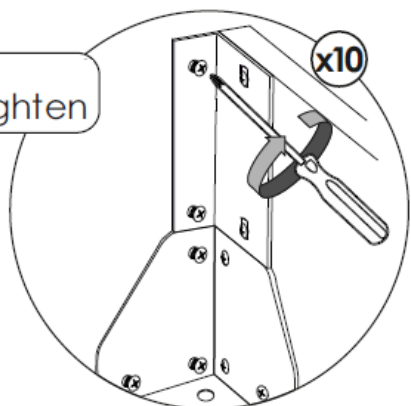

10

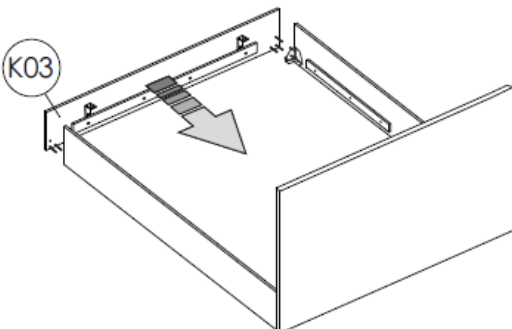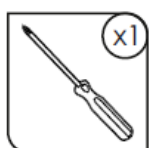
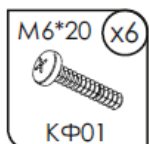


do not tighten


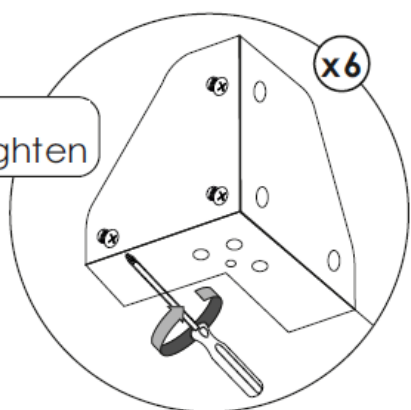


After this pass to the item on mounting legs





11

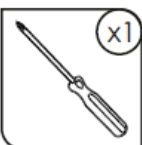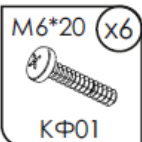




Bed assembly sequence if backrest with "ears"

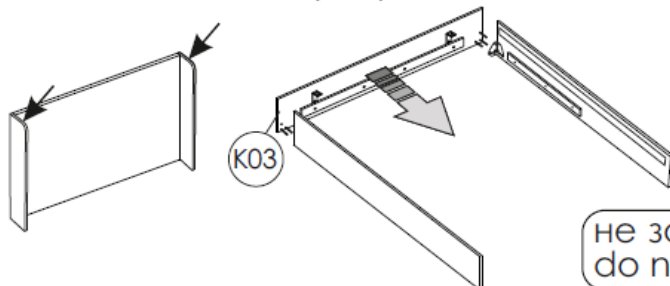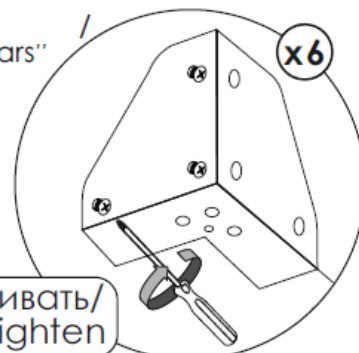НЕ ЗАТЯГИВАТЬ/  
do not tighten

12

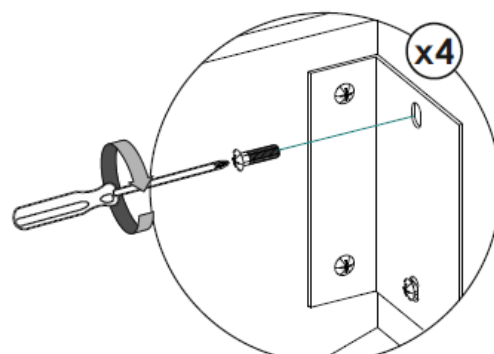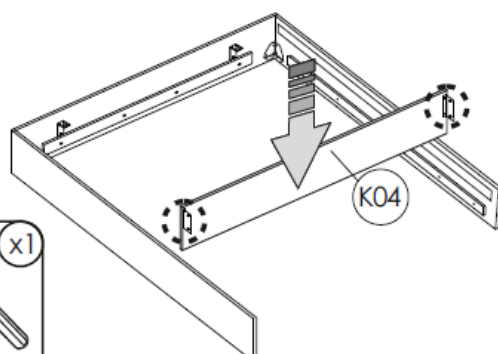
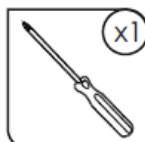
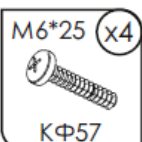


13

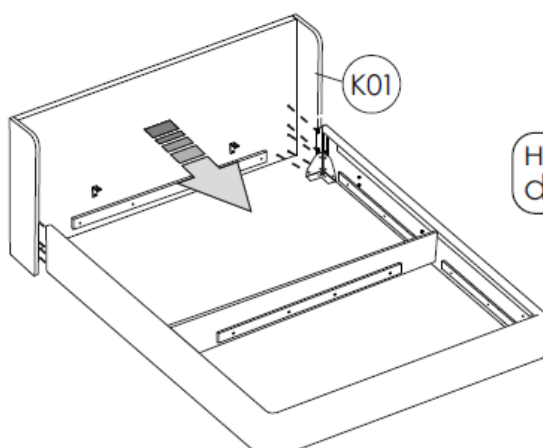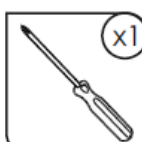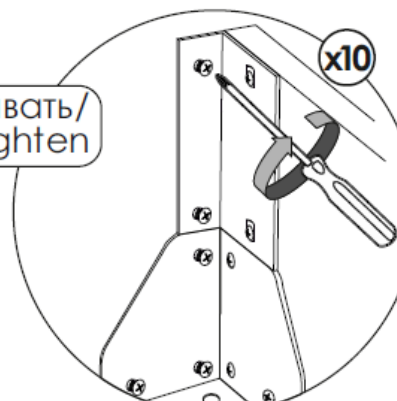НЕ ЗАТЯГИВАТЬ/  
do not tighten


14

Вариант комплектации ножек №2, №3 / Legs complete set option №2, №3

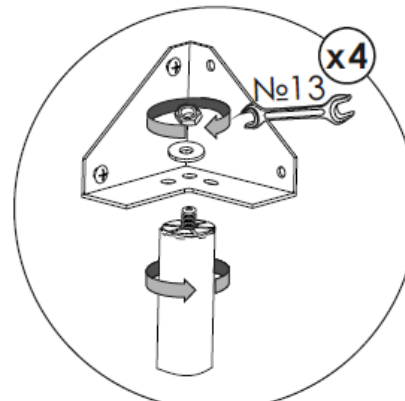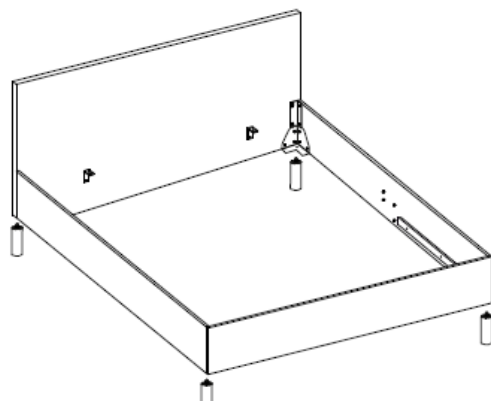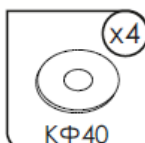


15

Вариант комплектации ножек №4, №5 / Legs complete set option №4, №5

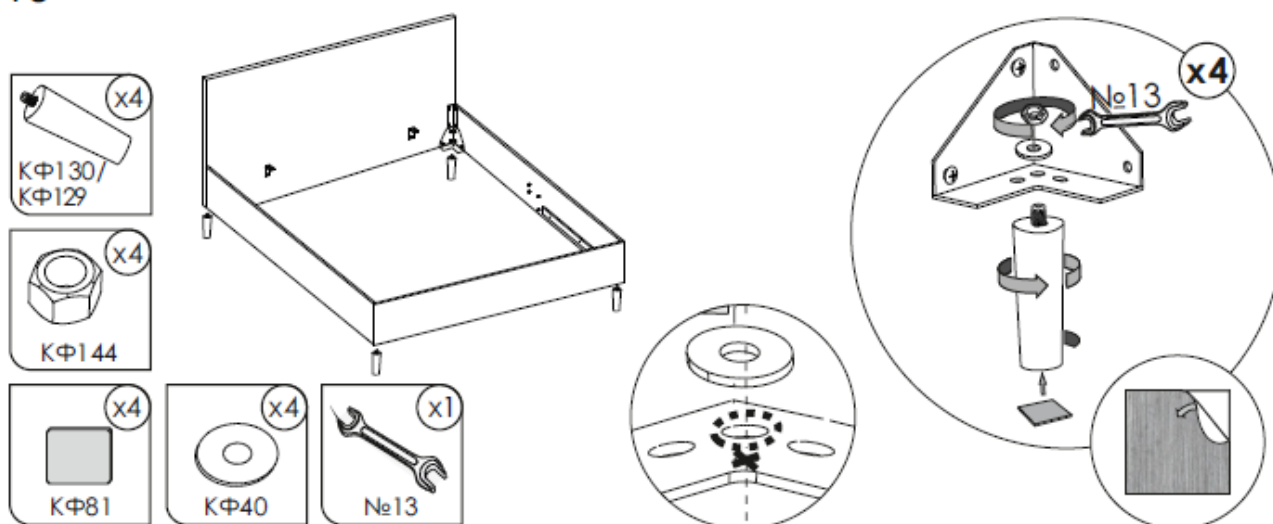


16

Вариант комплектации ножек №6, №7 / Legs complete set option №6, №7




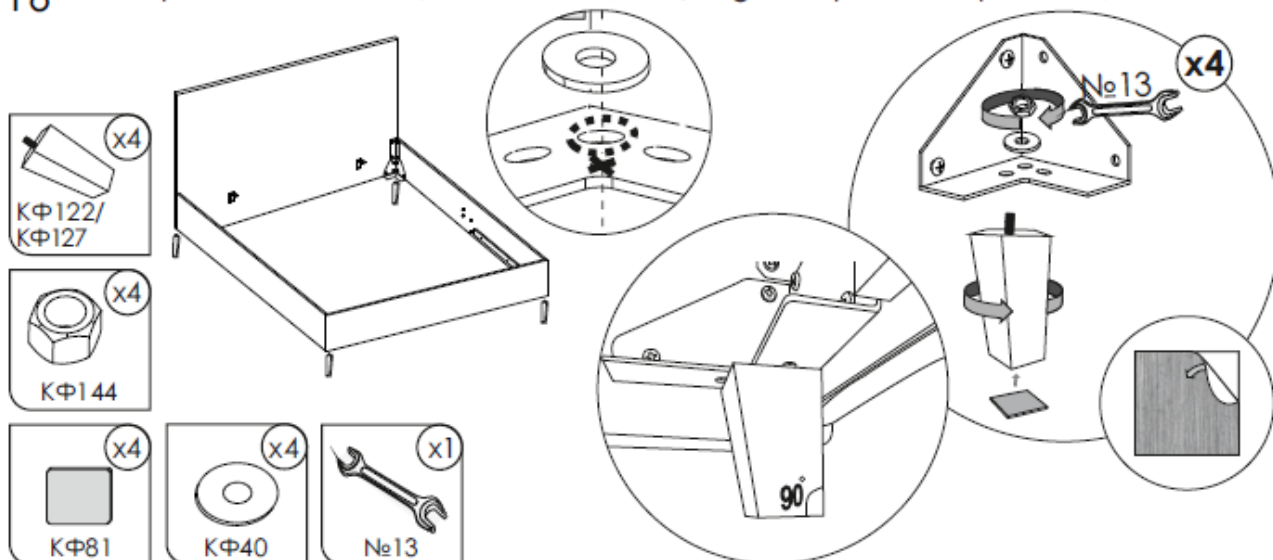


17




Вариант комплектации ножек №8 / Legs complete set option №8

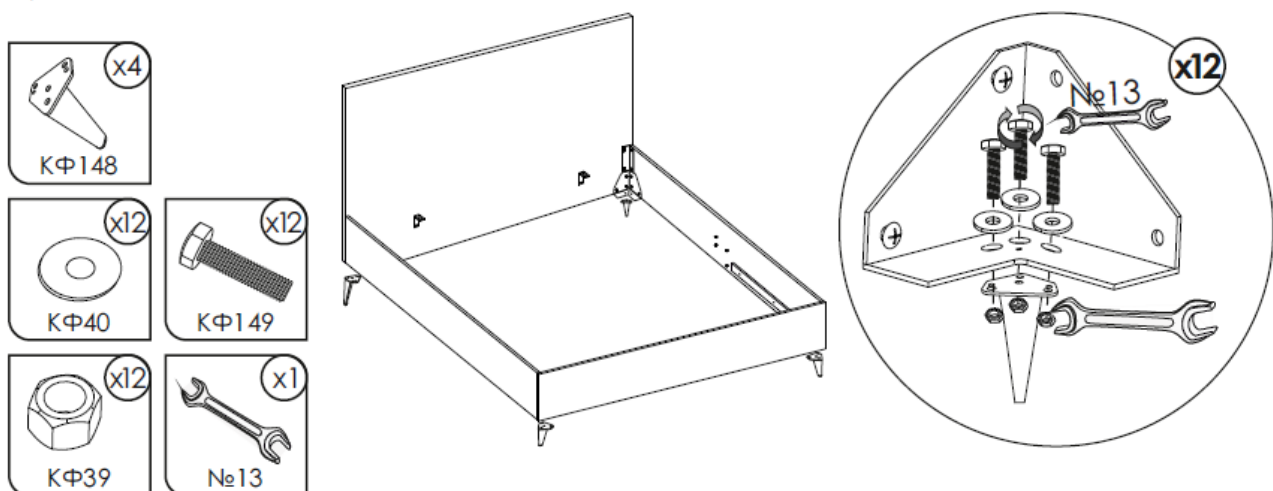



18

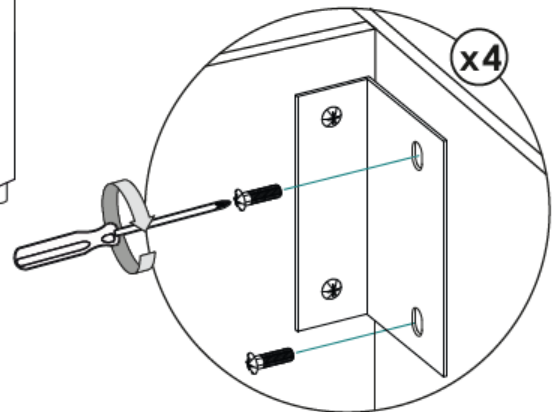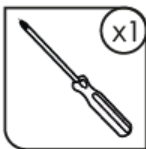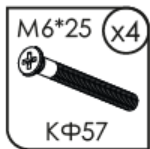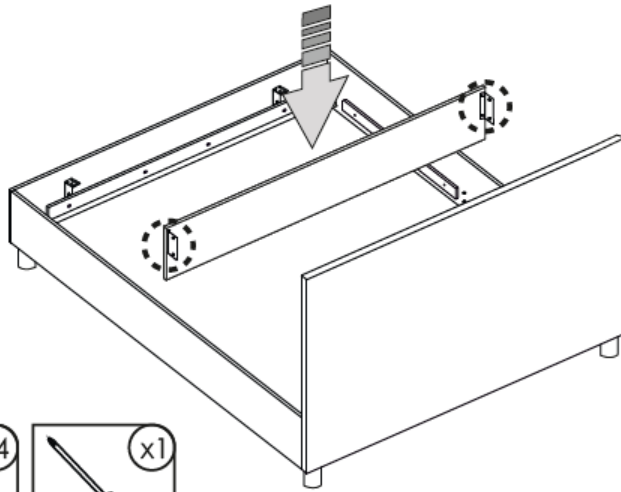


19

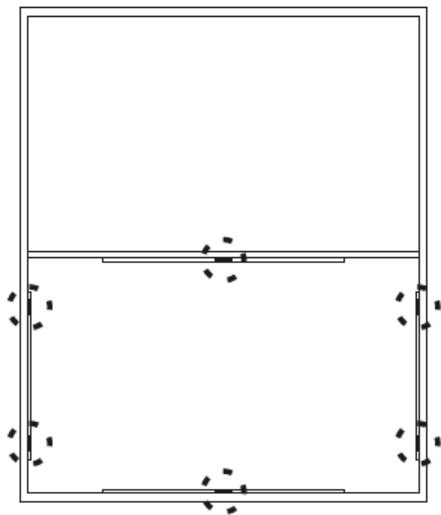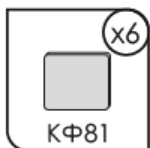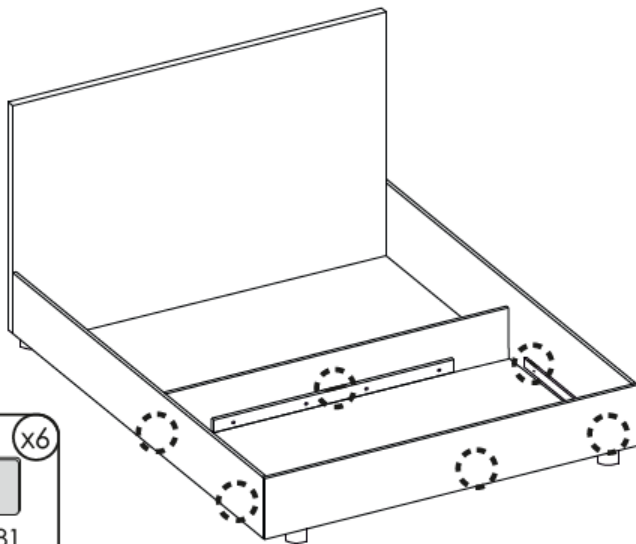


20

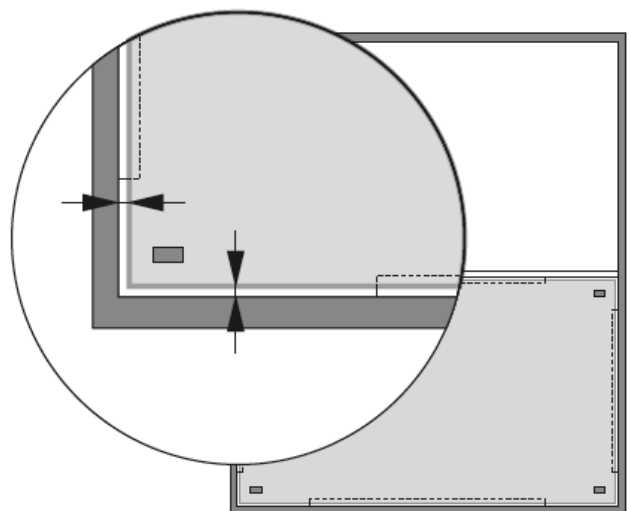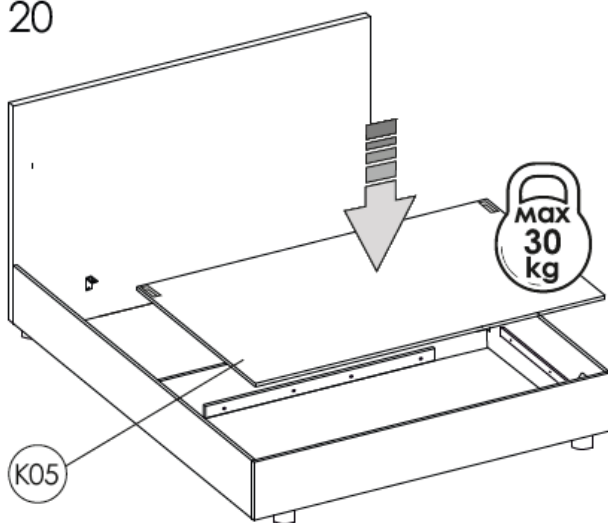

21





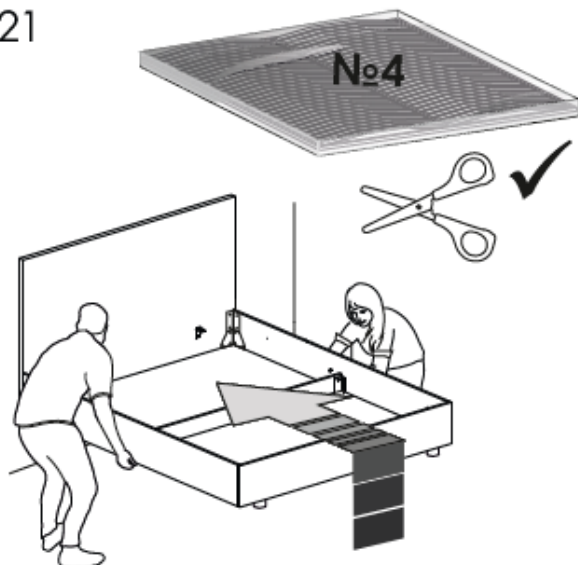


22


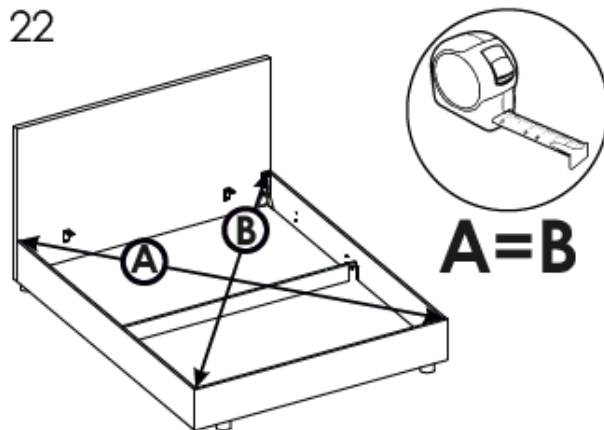


После регулировки периметра  
затяните винты/  
After the perimeter adjustment  
tighten the screws






23

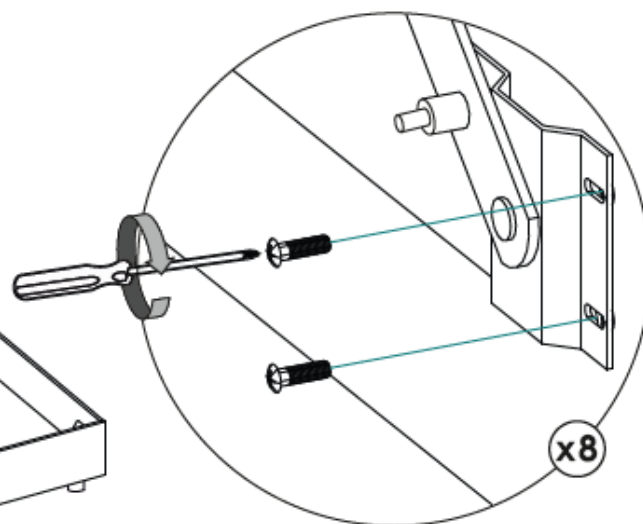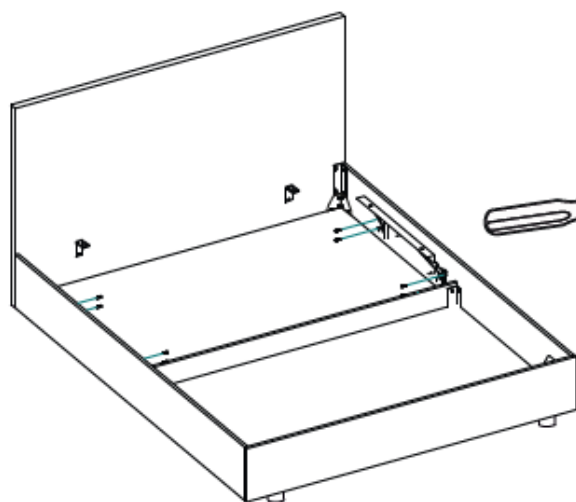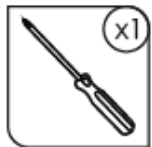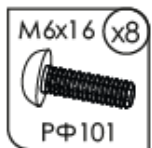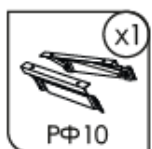





24

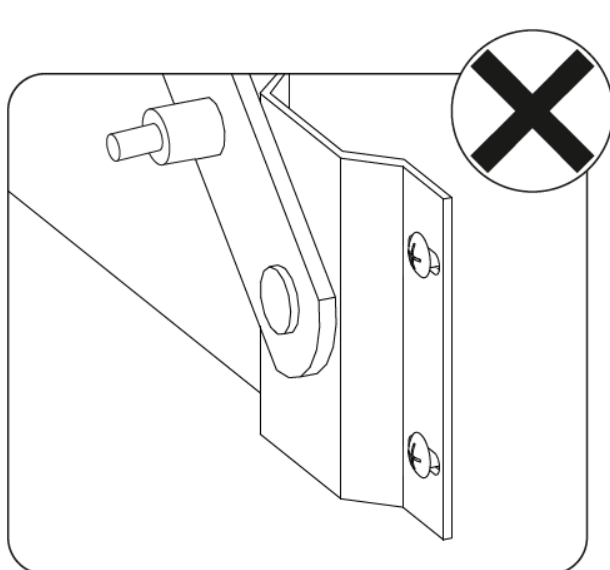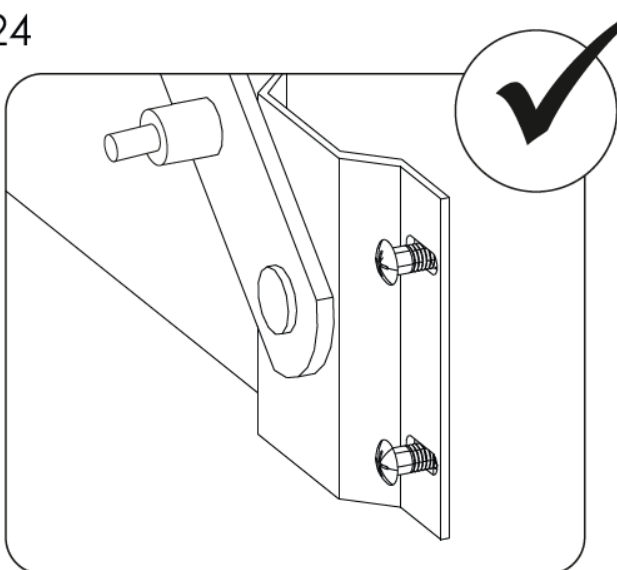



25

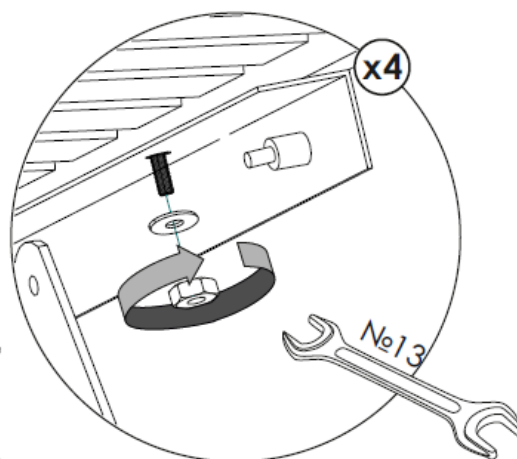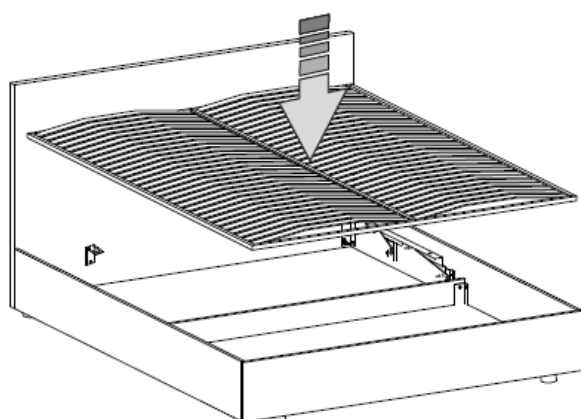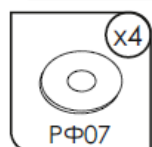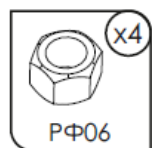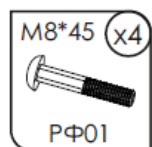

26

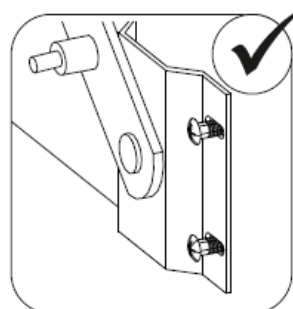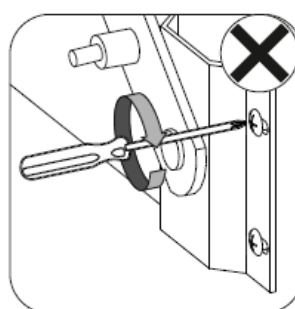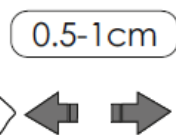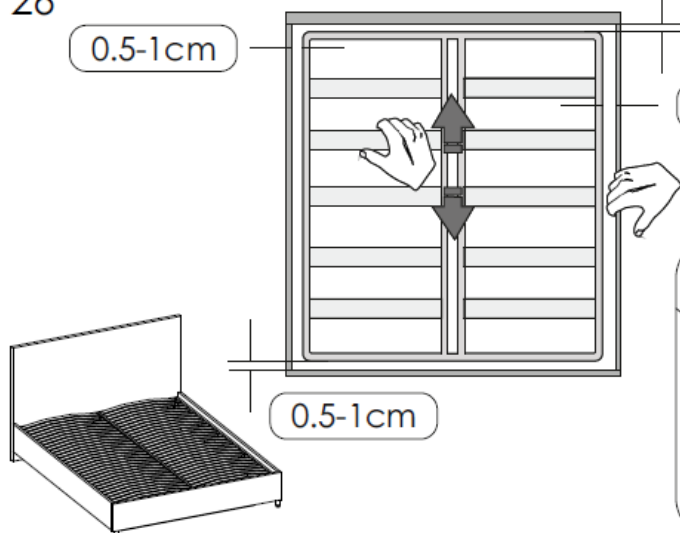






27

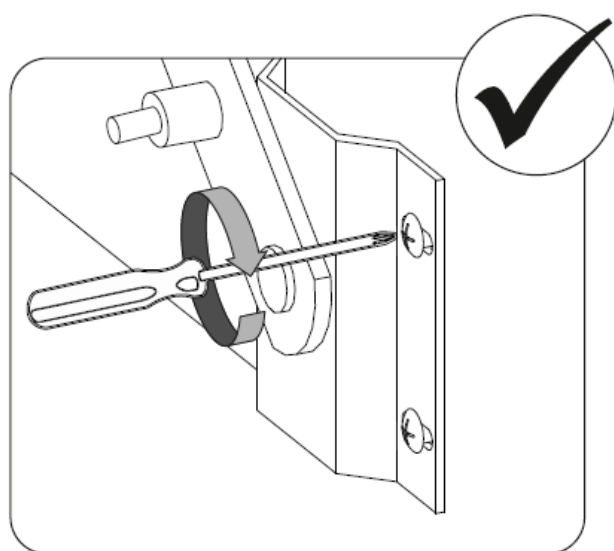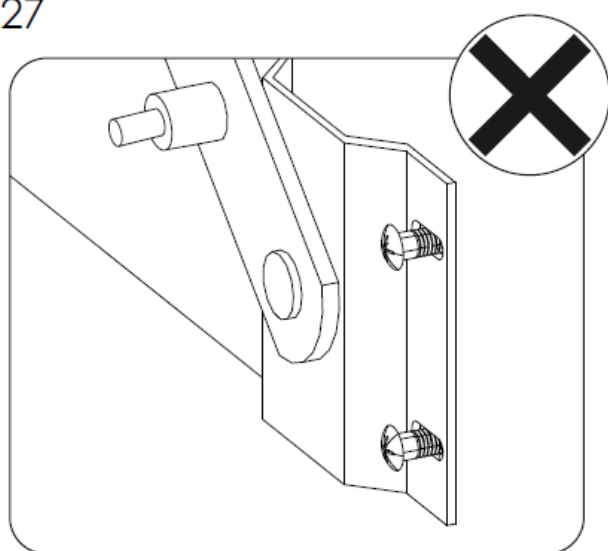





28

В зависимости от комплектации  
Depending on complete set

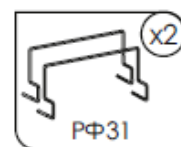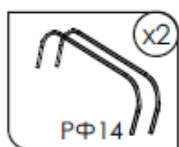
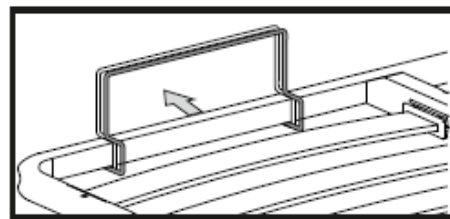
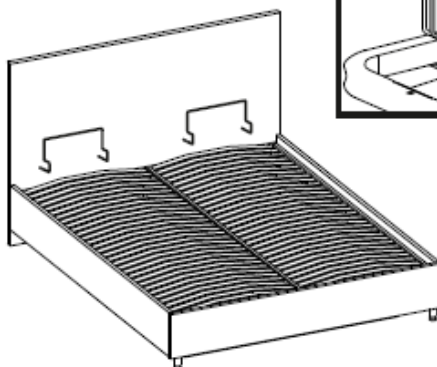
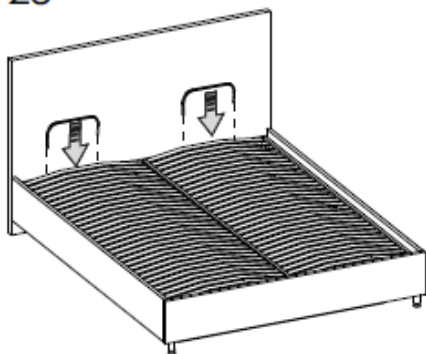


29

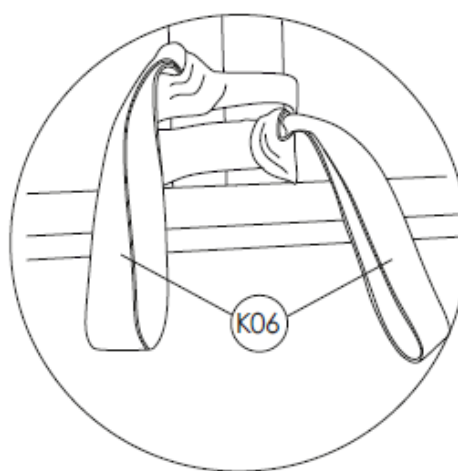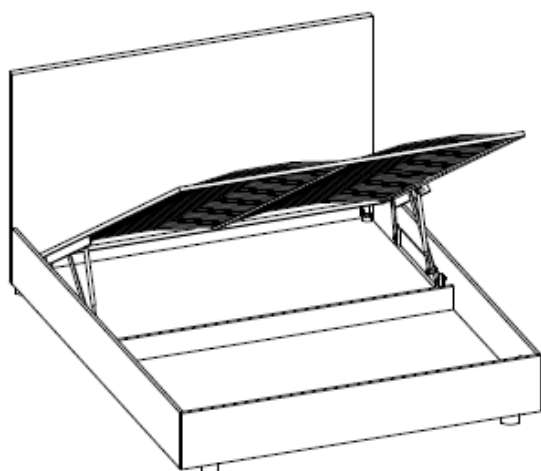

30


Complete set and assembly sequence may be changed depending on lifting mechanism modification. See Base Certificate

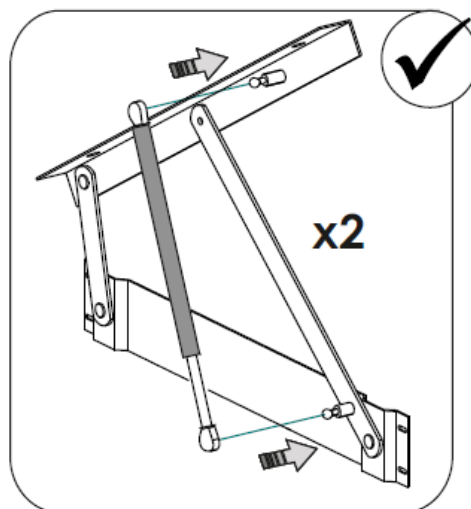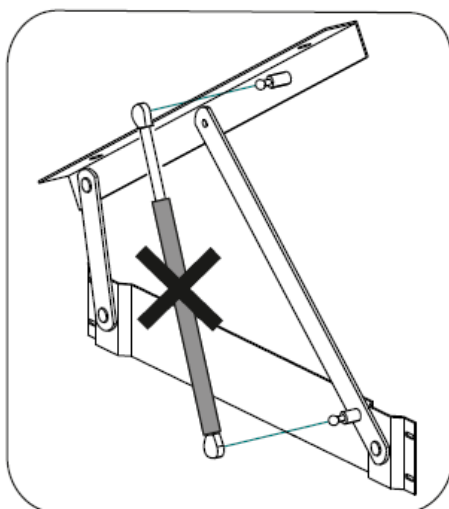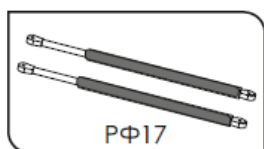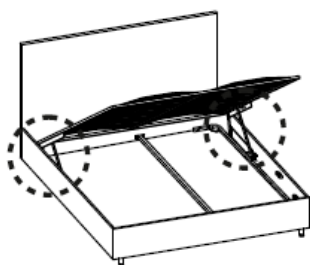

Do not try to fold gas spring prior to being installed on the article. Gas springs folding without any mattress on the

frame is prohibited and traumatic. When folding beds for the first time in some cases a light effort is required. Close the frame without fear of damaging shock absorber. If the frame is not closed with two gas springs installed, it may be connected with underweight of bought mattress it is recommended:

1. Remove one of the gas springs lower the bed frame with mattress installed on.
2. Same procedure shall be performed with second gas spring.
3. Install both of gas springs on the lifting mechanism and lower the frame. This will remove difficulties with bed folding.




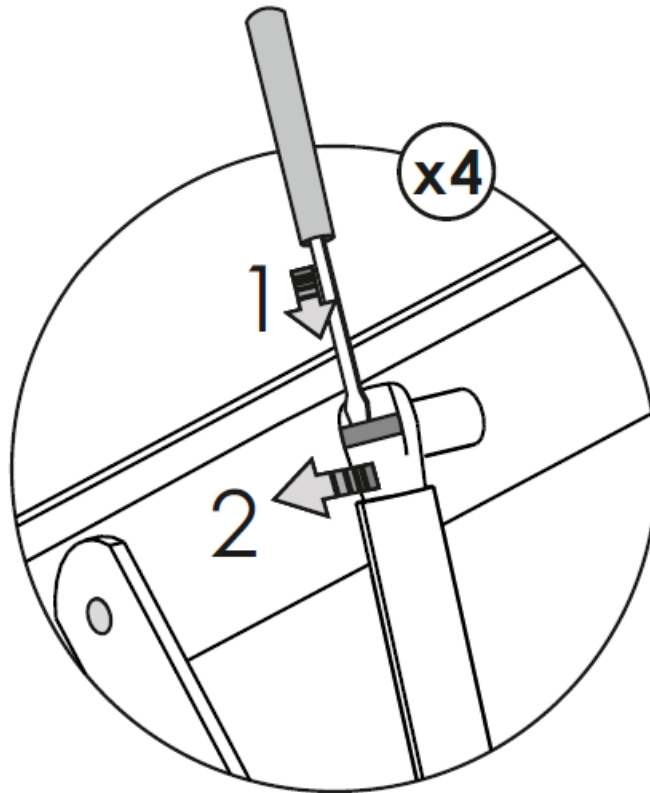


**To remove gas absorber:**


1. Put flat screwdriver under the fixing metal staple;
2. Lift the staple up;
3. Remove the absorber fixing from the stud;
4. Repeat this from the lower part.





32

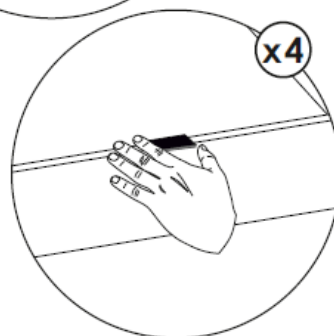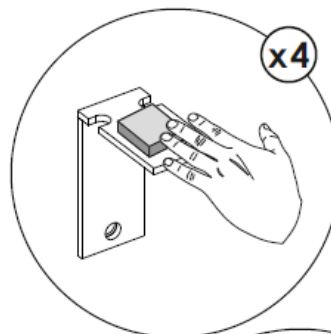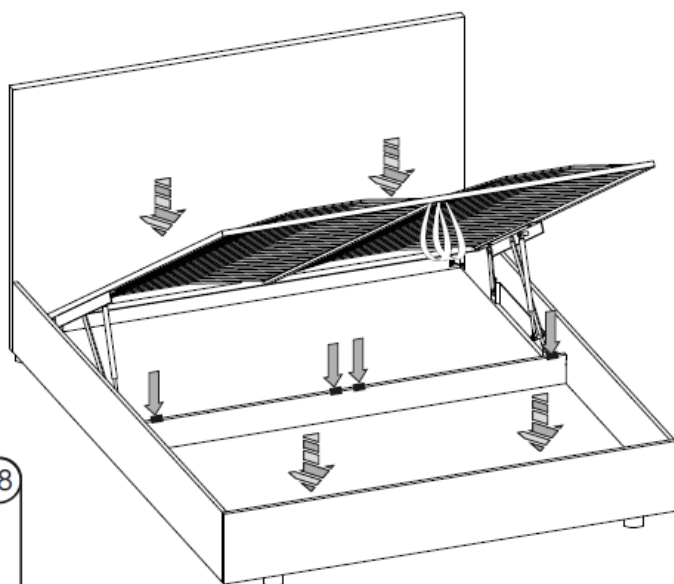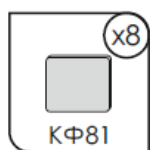

33

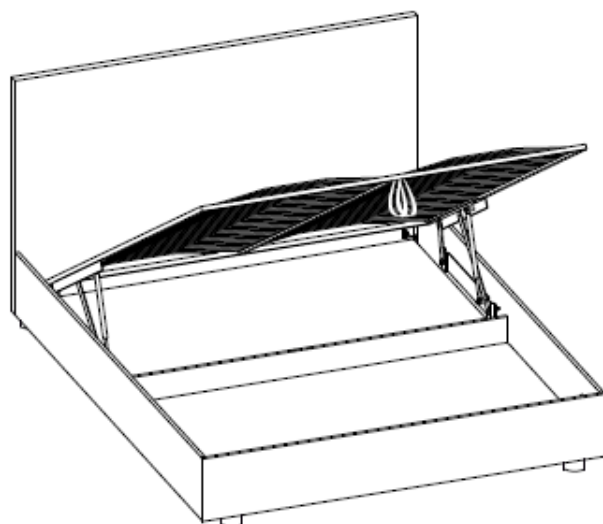



34

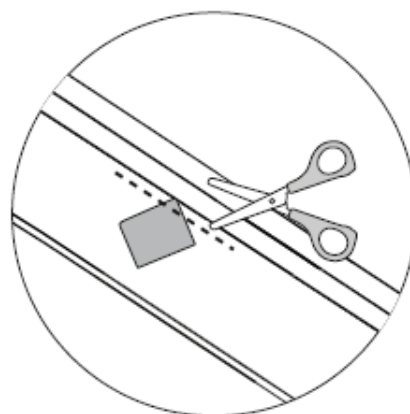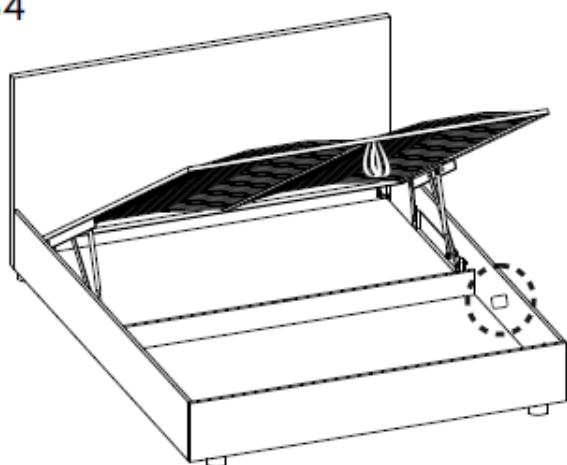


If necessary material sample may be cut off or put under removable cover

35


Width	Weight
<120 cm	5-30 kg
140-200 cm	10-50 kg

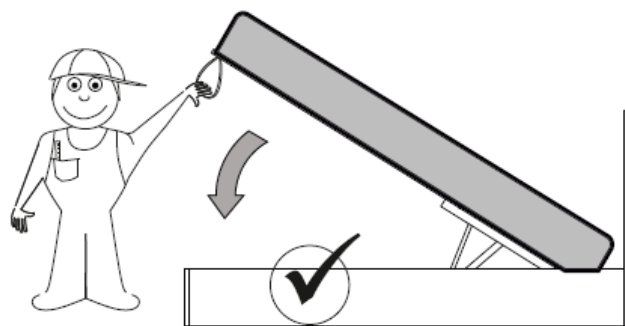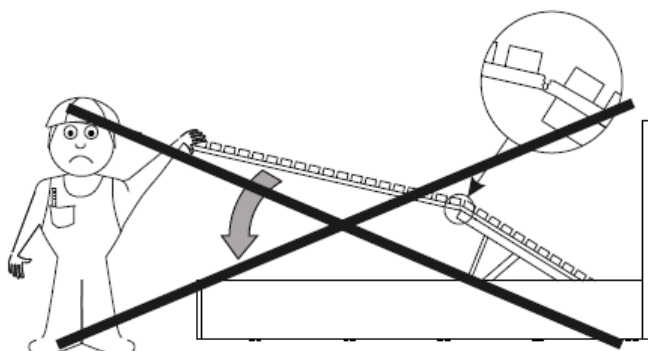

36

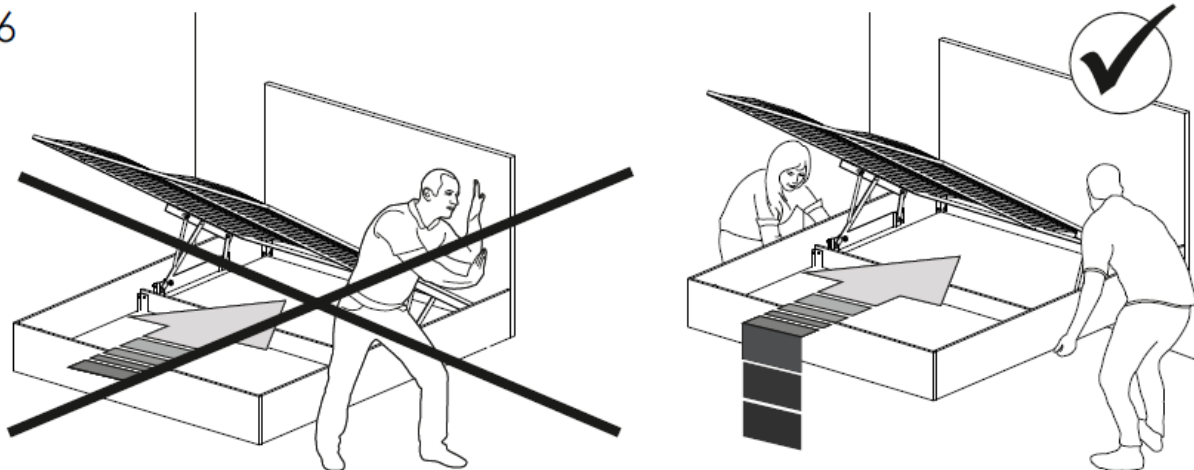



37

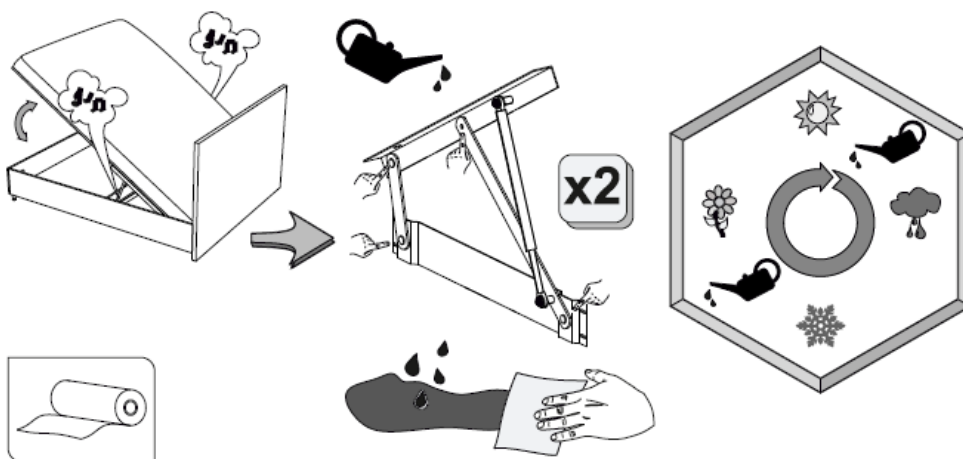

Rubbing parts  
lubrication shall  
be performed  
not less than  
twice a year

38

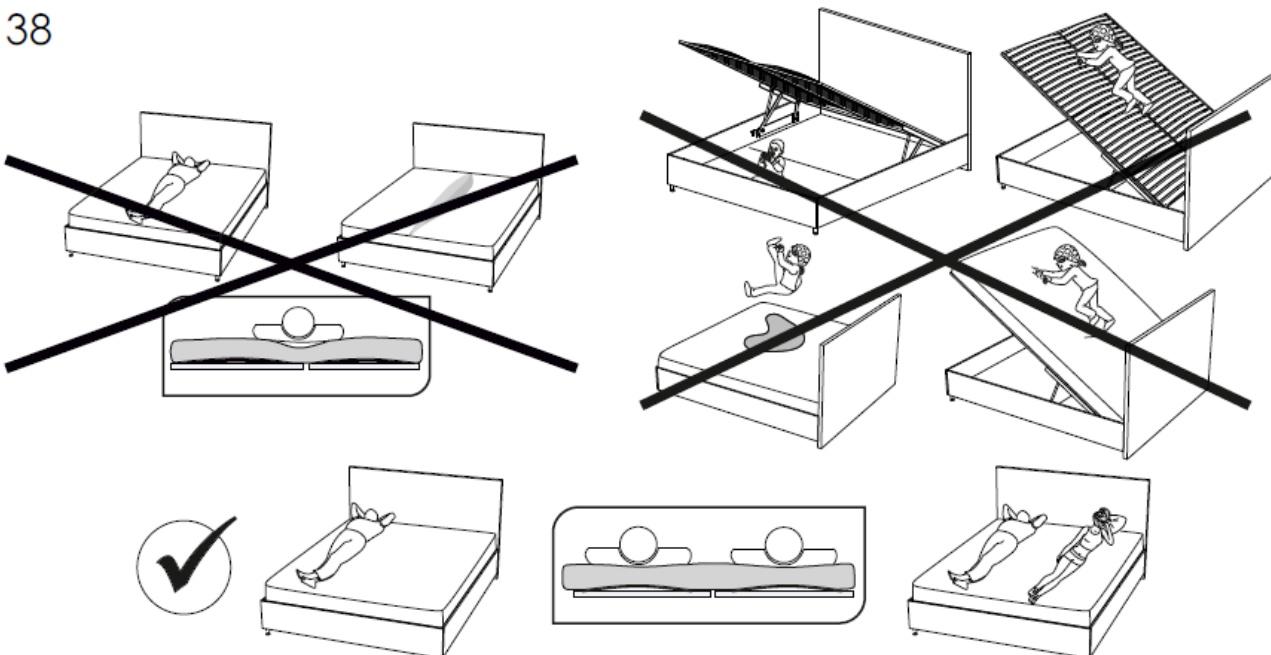

<div><div><div>Инструкция по эксплуатации и техническому обслуживанию</div><div>Кровать с подъемным механизмом с механизмом Relax Без электропривода с кодом типа PM 040-K</div></div><div></div><div><div>ERC</div><div>Самостоятельная установка и обслуживание Кровать с подъемным механизмом с механизмом Relax Без электропривода с кодом типа PM 040-K</div></div></div>	<p><a href="#">ASCONA PM 040-K Bed with Lifting Mechanism Relax</a> [pdf] Instruction Manual PM 040-, PM 040- Bed with Lifting Mechanism Relax, Bed with Lifting Mechanism Relax, Lifting Mechanism Relax, Mechanism Relax, Relax</p>
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.