

[Manuals.plus](#) /

› [Little Giant](#) /

› Little Giant Ladder Systems Work Platform Model 10104 Instruction Manual

Little Giant 10104

Little Giant Ladder Systems Work Platform Model 10104 Instruction Manual

Versatile Aluminum Ladder Accessory with 375 lbs Weight Rating

INTRODUCTION

Thank you for choosing the Little Giant Ladder Systems Work Platform Model 10104. This versatile accessory is designed to enhance the functionality and safety of your Little Giant multi-use or articulating ladder. It provides a stable, comfortable standing surface and can also serve as a convenient tool tray. Please read this manual thoroughly before initial use to ensure proper setup, operation, and maintenance.

SAFETY INFORMATION

Always prioritize safety when working with ladders and accessories. Failure to follow these instructions may result in serious injury or death.

- **Weight Capacity:** The Work Platform is rated to hold up to 375 lbs (170 kg), matching the capacity of most Little Giant ladders. Do not exceed this weight limit.
- **Proper Placement:** Always ensure the Work Platform is securely hooked onto the ladder rungs as described in the 'Setup and Installation' section.
- **Three Points of Contact:** Maintain three points of contact (two hands and one foot, or two feet and one hand) with the ladder at all times when climbing or descending.
- **Stable Surface:** Use the Work Platform on a stable, level surface. Ensure the ladder itself is properly set up and stable before use.
- **Avoid Top Rungs:** Do not use the Work Platform on the top three rungs of an A-frame ladder or the top four rungs of an extension ladder. This is to prevent overreaching and maintain stability.
- **Inspection:** Before each use, inspect the Work Platform for any damage, wear, or loose components. Do not use if damaged.
- **Cleanliness:** Keep the Work Platform clean and free of debris, oil, or other slippery substances.

PRODUCT OVERVIEW

The Little Giant Work Platform Model 10104 is an aluminum accessory designed for durability and ease of use. It features a broad, perforated surface for secure footing and integrated hooks for quick attachment to ladder rungs.



Figure 1: Little Giant Work Platform Model 10104. This image shows the top-down view of the aluminum work platform, highlighting its perforated surface and sturdy construction.



Figure 2: Side view of the Work Platform, illustrating its folding mechanism and hooks for ladder attachment.

SETUP AND INSTALLATION

The Work Platform can be easily installed on your Little Giant multi-use or articulating ladder in both A-frame and extension configurations.

A-Frame Ladder Installation:

1. Ensure your Little Giant ladder is set up in a stable A-frame position on a level surface.
2. Unfold the Work Platform.
3. Place the lower curved hooks of the Work Platform onto the desired rung.
4. Slide the flat part of the platform over the rung directly above the lower hooks. Ensure it sits securely.
5. Verify that the Work Platform is level and stable before applying weight.

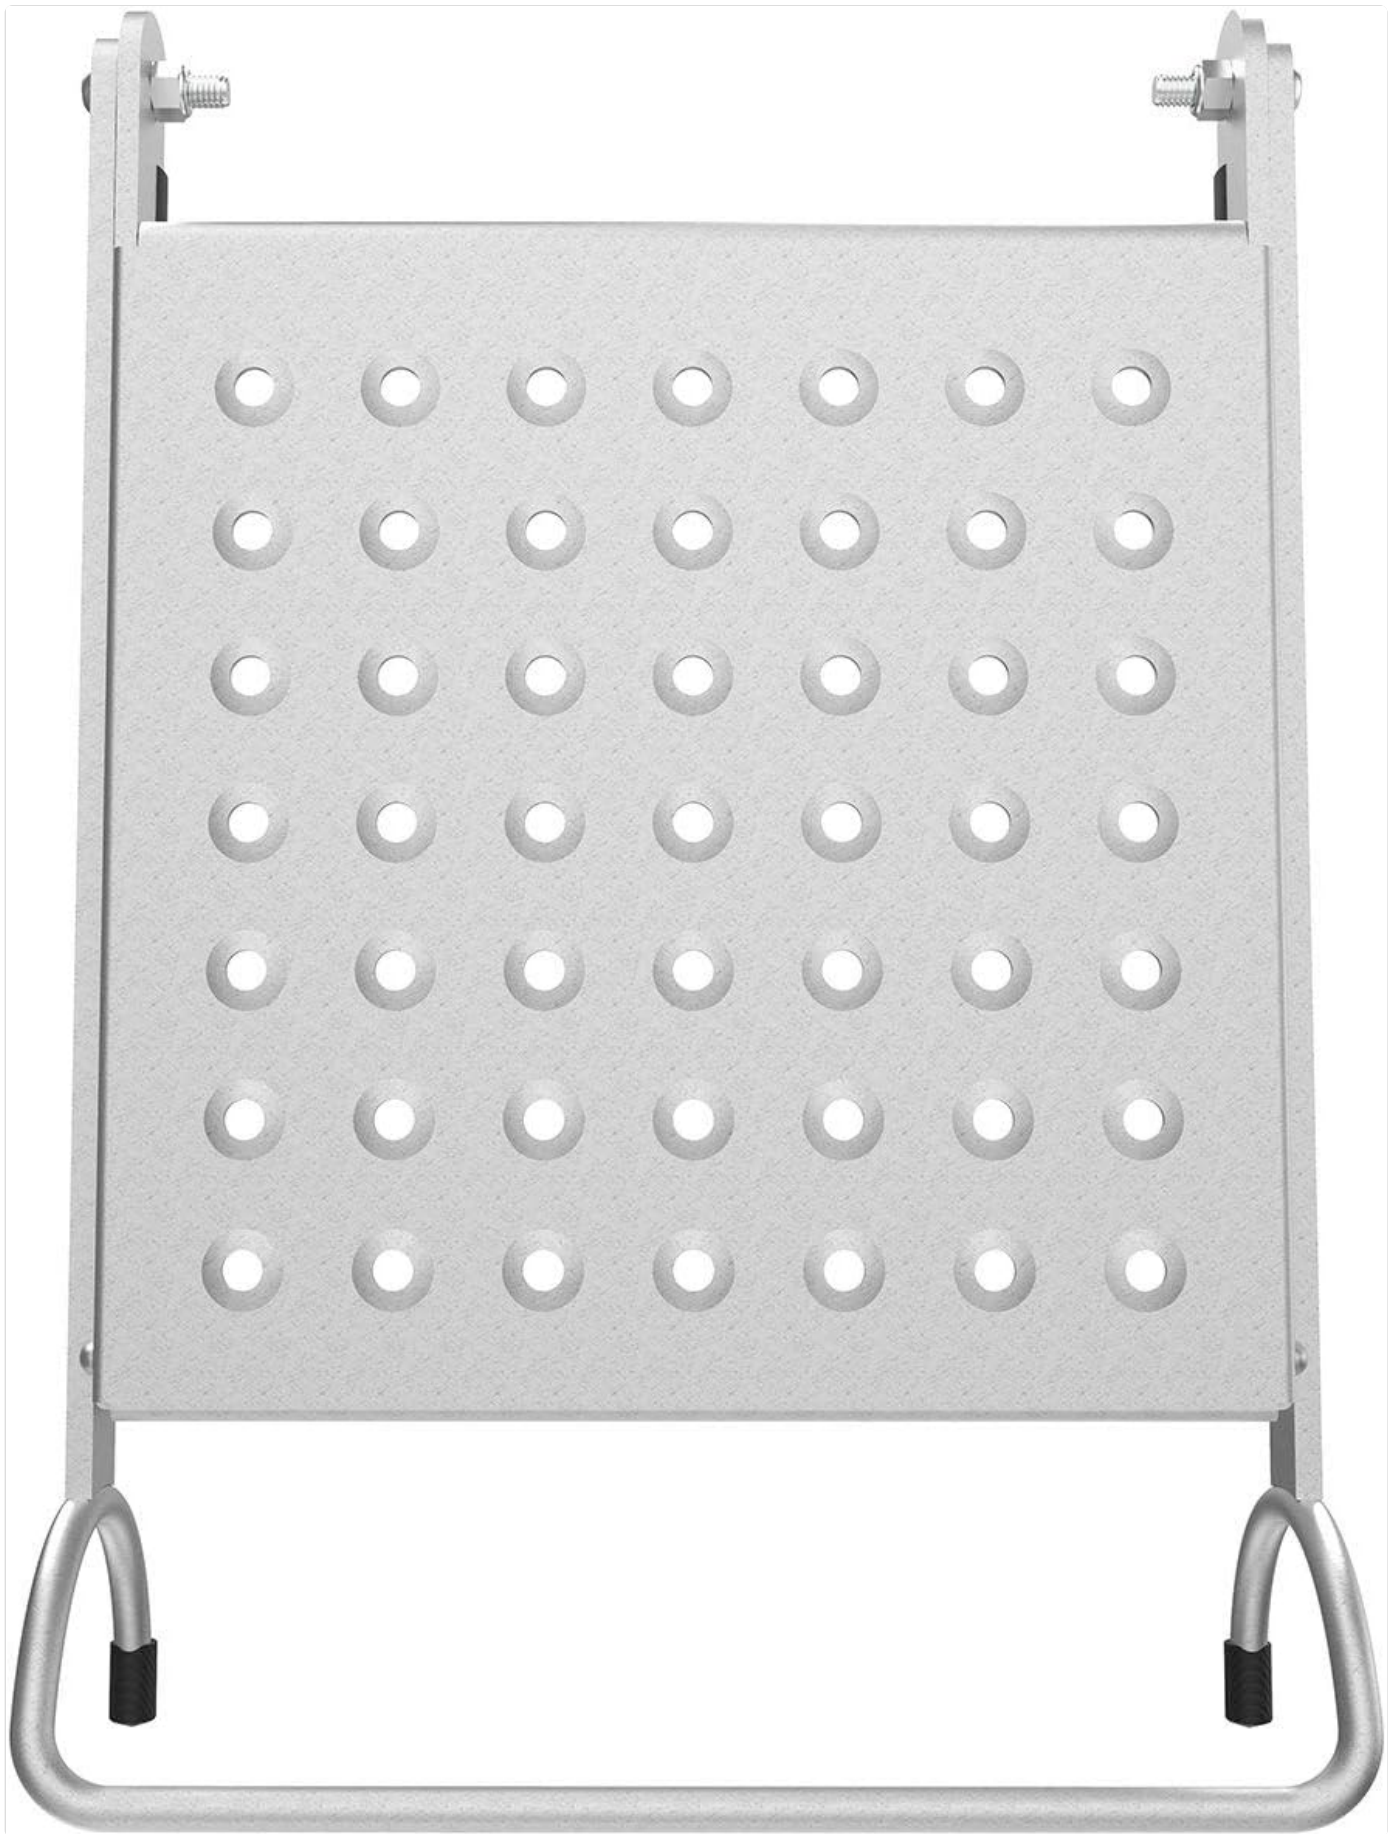


Figure 3: Work Platform securely installed on a Little Giant A-frame ladder, ready for use.

Extension Ladder Installation:

1. Set up your Little Giant ladder in a stable extension ladder position against a solid surface.
2. Unfold the Work Platform.

3. Place the lower curved hooks of the Work Platform onto the desired rung.
4. Slide the flat part of the platform over the rung directly above the lower hooks. Ensure it sits securely.
5. Verify that the Work Platform is level and stable before applying weight.

Important: Do not use the Work Platform on the top three rungs of an A-frame ladder or the top four rungs of an extension ladder.

OPERATING INSTRUCTIONS

The Work Platform provides a comfortable and secure area for various tasks.

Using as a Standing Platform:

1. With the Work Platform installed, climb the ladder until you are one rung above the platform.
2. Carefully slide the Work Platform out with your foot until it is fully extended and locked into place.
3. Step onto the Work Platform, maintaining three points of contact. You can now stand comfortably and face your work.
4. To descend, step onto the rung above the platform, slide the platform back in with your foot, and then continue descending the ladder.



Figure 4: User standing securely on the Work Platform, demonstrating its use as a stable standing surface.

Using as a Tool Tray:

The Work Platform can also be used as a convenient tray to hold tools, paint cans, or other materials, keeping them within easy reach while you work.

- Install the Work Platform on a suitable rung.
- Place your tools or materials on the platform. Ensure they are stable and will not fall.
- Do not overload the platform. Adhere to the 375 lbs (170 kg) weight limit, including your own weight if you are also on the ladder.



Figure 5: The Work Platform holding various tools, demonstrating its utility as a convenient tool tray.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Work Platform.

- **Cleaning:** Clean the Work Platform with mild soap and water. Rinse thoroughly and dry completely before storage.
- **Inspection:** Periodically check all welds, rivets, and moving parts for signs of wear, corrosion, or damage. Ensure the nylon washers and lock nuts are secure.
- **Storage:** When not in use, the Work Platform can be stored neatly inside the folded Little Giant articulating ladder. Simply turn it upside down and place the lip on the second rung from the bottom, then close the ladder. This keeps it secure and prevents loss.



Figure 6: The Work Platform folded and stored compactly within the Little Giant ladder, demonstrating its space-saving design.

TROUBLESHOOTING

If you encounter any issues with your Work Platform, refer to the following common problems and solutions:

- **Platform feels unstable:** Ensure both sets of hooks are properly engaged with the ladder rungs. Check that the ladder itself is on a firm, level surface and is fully locked in its position.
- **Platform is difficult to slide:** Check for any debris or obstructions in the sliding mechanism. Clean the low-friction strips on either side of the platform.
- **Platform does not fit:** Verify that your ladder is a Little Giant multi-use or articulating ladder. The Work Platform is designed specifically for these models.

If problems persist, contact Little Giant Ladder Systems customer support.

OFFICIAL PRODUCT VIDEO

Video: Work Platform Demo Video by Little Giant Ladder Systems, LLC. This video demonstrates the proper installation and use of the Work Platform on a Little Giant ladder, showcasing its versatility and safety features.

SPECIFICATIONS

Model Number	10104
Material	Aluminum
Weight Rating	375 lbs (170 kg)
Product Dimensions	18"W x 5"H (approximate when folded)
Item Weight	1.86 kg
Compatibility	Little Giant multi-use and articulating ladders

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Little Giant Ladder Systems website or contact their customer service department. Keep your purchase receipt for warranty claims.

Website: www.littlegiantladders.com

Customer Service: Refer to the contact information provided on the product packaging or the official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

