

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Wenko](#) /

› [Wenko 19210100 Telescopic Shower Rod Instruction Manual](#)

## Wenko 19210100

# Wenko 19210100 Telescopic Shower Rod Instruction Manual

Model: 19210100

## INTRODUCTION

---


Thank you for choosing the Wenko 19210100 Telescopic Shower Rod. This manual provides important information regarding the safe and proper installation, operation, and maintenance of your new shower rod. Please read these instructions carefully before use and retain them for future reference.

## PRODUCT OVERVIEW

---

The Wenko 19210100 is a versatile telescopic shower rod designed for easy, drill-free installation. It is made from durable aluminum and features a tension-based mounting system, suitable for various bathroom setups.

- **Extendable Length:** Adjustable from 70 cm to 115 cm (27.56 to 45.27 inches).
- **Diameter:** Shower rod diameter of 20 mm (0.79 inches).
- **Material:** High-quality aluminum, ensuring durability and rust resistance.
- **Installation:** Easy, drill-free tension mounting.

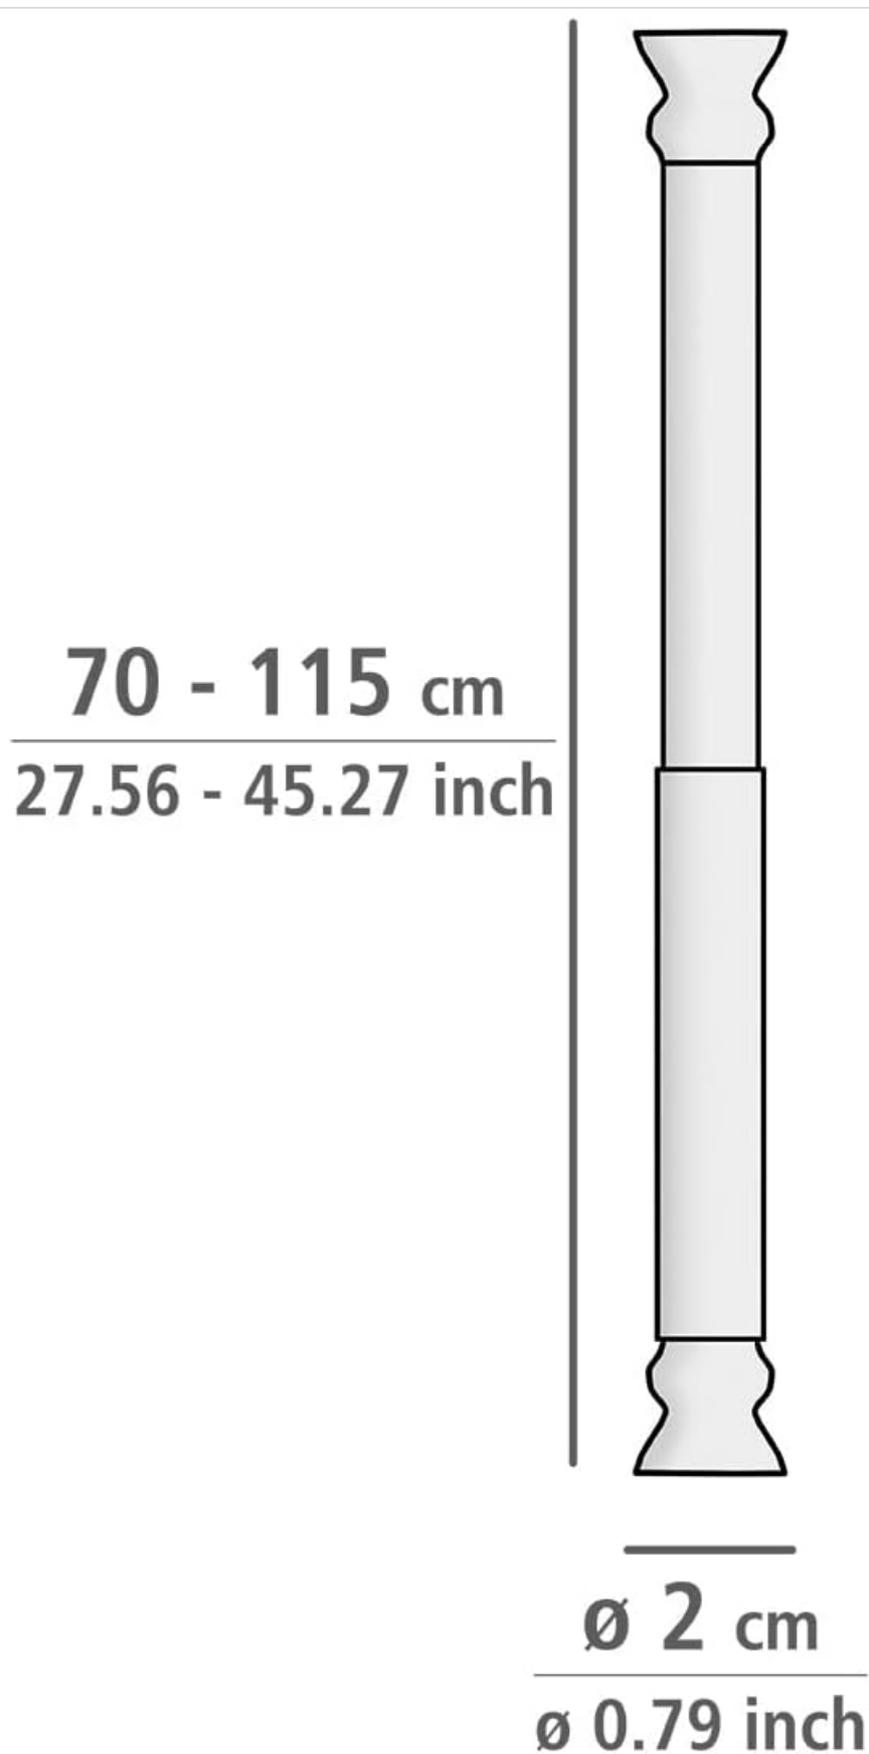

*Image: Product dimensions indicating extendable length and diameter.*



*Image: Key features of the telescopic shower rod.*

## SAFETY INFORMATION

---

- Ensure the rod is securely installed between two stable surfaces.
- Do not hang heavy objects on the shower rod. It is designed to hold a shower curtain and light accessories only.
- Avoid pulling or hanging on the rod, as this may cause it to dislodge and result in injury or damage.
- Regularly check the tension to ensure the rod remains firmly in place.

## PACKAGE CONTENTS

---

The package should contain the following items:

- 1 x Wenko 19210100 Telescopic Shower Rod

*Note: Shower curtains and rings are not included.*

## SETUP AND INSTALLATION

---

The Wenko telescopic shower rod is designed for simple, drill-free installation using a tension mechanism. No tools are required.

1. **Measure the Distance:** Determine the exact distance between the two walls or surfaces where the rod will be installed.
2. **Set Desired Length:** Extend the telescopic rod to a length approximately 2-3 cm (about 1 inch) longer than the measured distance. This extra length creates the necessary tension for a secure fit.
3. **Compress and Insert:** Compress the rod slightly and position it between the two walls. Release the compression, allowing the rod to expand and create tension against the walls.
4. **Verify Stability:** Gently tug on the rod to ensure it is firmly secured and does not slip. Adjust the length if necessary to achieve optimal tension.

# SIMPLY CLAMP

---

## Assembly without tools



1. Set the desired length
2. Seize
3. Push together and insert



*Image: Step-by-step assembly instructions.*



*Image: No drilling required for installation.*

## OPERATION

---

Once installed, the shower rod is ready for use. Simply hang your shower curtain using appropriate rings or hooks (not included) onto the rod.

- Ensure the shower curtain slides smoothly along the rod.
- Avoid excessive force when opening or closing the curtain to prevent dislodging the rod.

## MAINTENANCE

---

To ensure the longevity and appearance of your Wenko telescopic shower rod, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the rod regularly with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive sponges, which can damage the finish.
- **Inspection:** Periodically check the rod for any signs of wear, damage, or reduced tension.

- **Rust Prevention:** The aluminum construction is rust-resistant, but ensure the rod is kept dry to prevent water spots or mineral buildup.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Rod slips or falls down.	Insufficient tension; rod is too short for the opening.	Remove the rod, extend it slightly more (1-2 cm) beyond the measured distance, and re-install with increased tension. Ensure end caps are clean and dry for better grip.
Rod is difficult to install or remove.	Rod is extended too far, creating excessive tension.	Carefully compress the rod to reduce its length slightly before attempting to remove or adjust.
Rod appears bent or damaged.	Excessive weight applied or improper handling.	The rod may be permanently damaged. Replace the rod if its structural integrity is compromised. Avoid hanging heavy items.

## SPECIFICATIONS

Brand	Wenko
Model	19210100
Color	Chrome/White
Material	Aluminum
Extendable Length	70 - 115 cm (27.56 - 45.27 inches)
Rod Diameter	20 mm (0.79 inches)
Product Dimensions (L x W x H)	Approx. 74 x 7 x 3.5 cm (collapsed)
Item Weight	180 grams
Mounting Type	Tension / Clamp Mount (No Drilling)
Specific Uses	Bathroom, Shower

## WARRANTY AND SUPPORT

This Wenko product comes with a **5-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use conditions.

For warranty claims, technical support, or any questions regarding your product, please contact Wenko customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty validation.

For more information, visit the official Wenko store: [Wenko Store on Amazon](#)

