

Salter 5832612

Salter Electronic Kitchen Scale with Glass Platform User Manual

Model: 5832612

1. INTRODUCTION

Thank you for choosing the Salter Electronic Kitchen Scale with Glass Platform. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new kitchen scale. Please read these instructions thoroughly before first use and retain them for future reference.


SALTER

electronic kitchen scale
with glass platform

balance de cuisine électronique
avec plateau en verre sécurisé

balanza de cocina electrónica
con plataforma de cristal

Elektronische Glas-Küchenwaage
mit Glastrittfläche

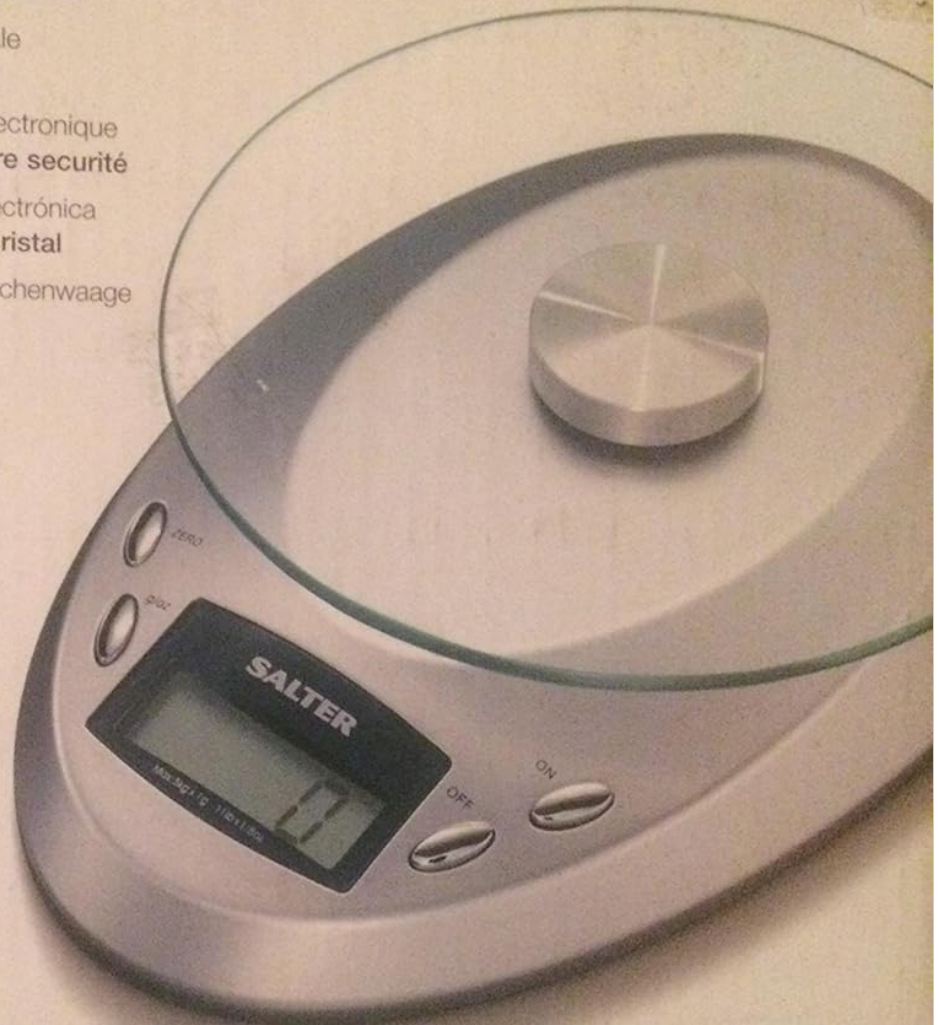

10
YEAR WARRANTY
NOB GARANTIE

MAX	5kg	11lb
÷	1g	1/8oz

1x9V
ALKALINE
NOT INCLUDED
PAS INCLUS



Figure 1: The Salter Electronic Kitchen Scale with its glass weighing platform.

2. IMPORTANT SAFETY INFORMATION

- Always place the scale on a firm, flat, and level surface to ensure accurate readings.

- Do not immerse the scale in water or other liquids. Clean with a damp cloth.
- Avoid dropping the scale or subjecting it to strong impacts, as this may damage the glass platform or internal components.
- Do not overload the scale beyond its maximum capacity (5kg / 11lb).
- Keep batteries out of reach of children. Dispose of used batteries responsibly.
- This scale is intended for domestic use only.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all items are present and in good condition:

- Salter Electronic Kitchen Scale with Glass Platform
- Instruction Manual (this document)

Note: A 9V alkaline battery is required for operation and is not included in the package.

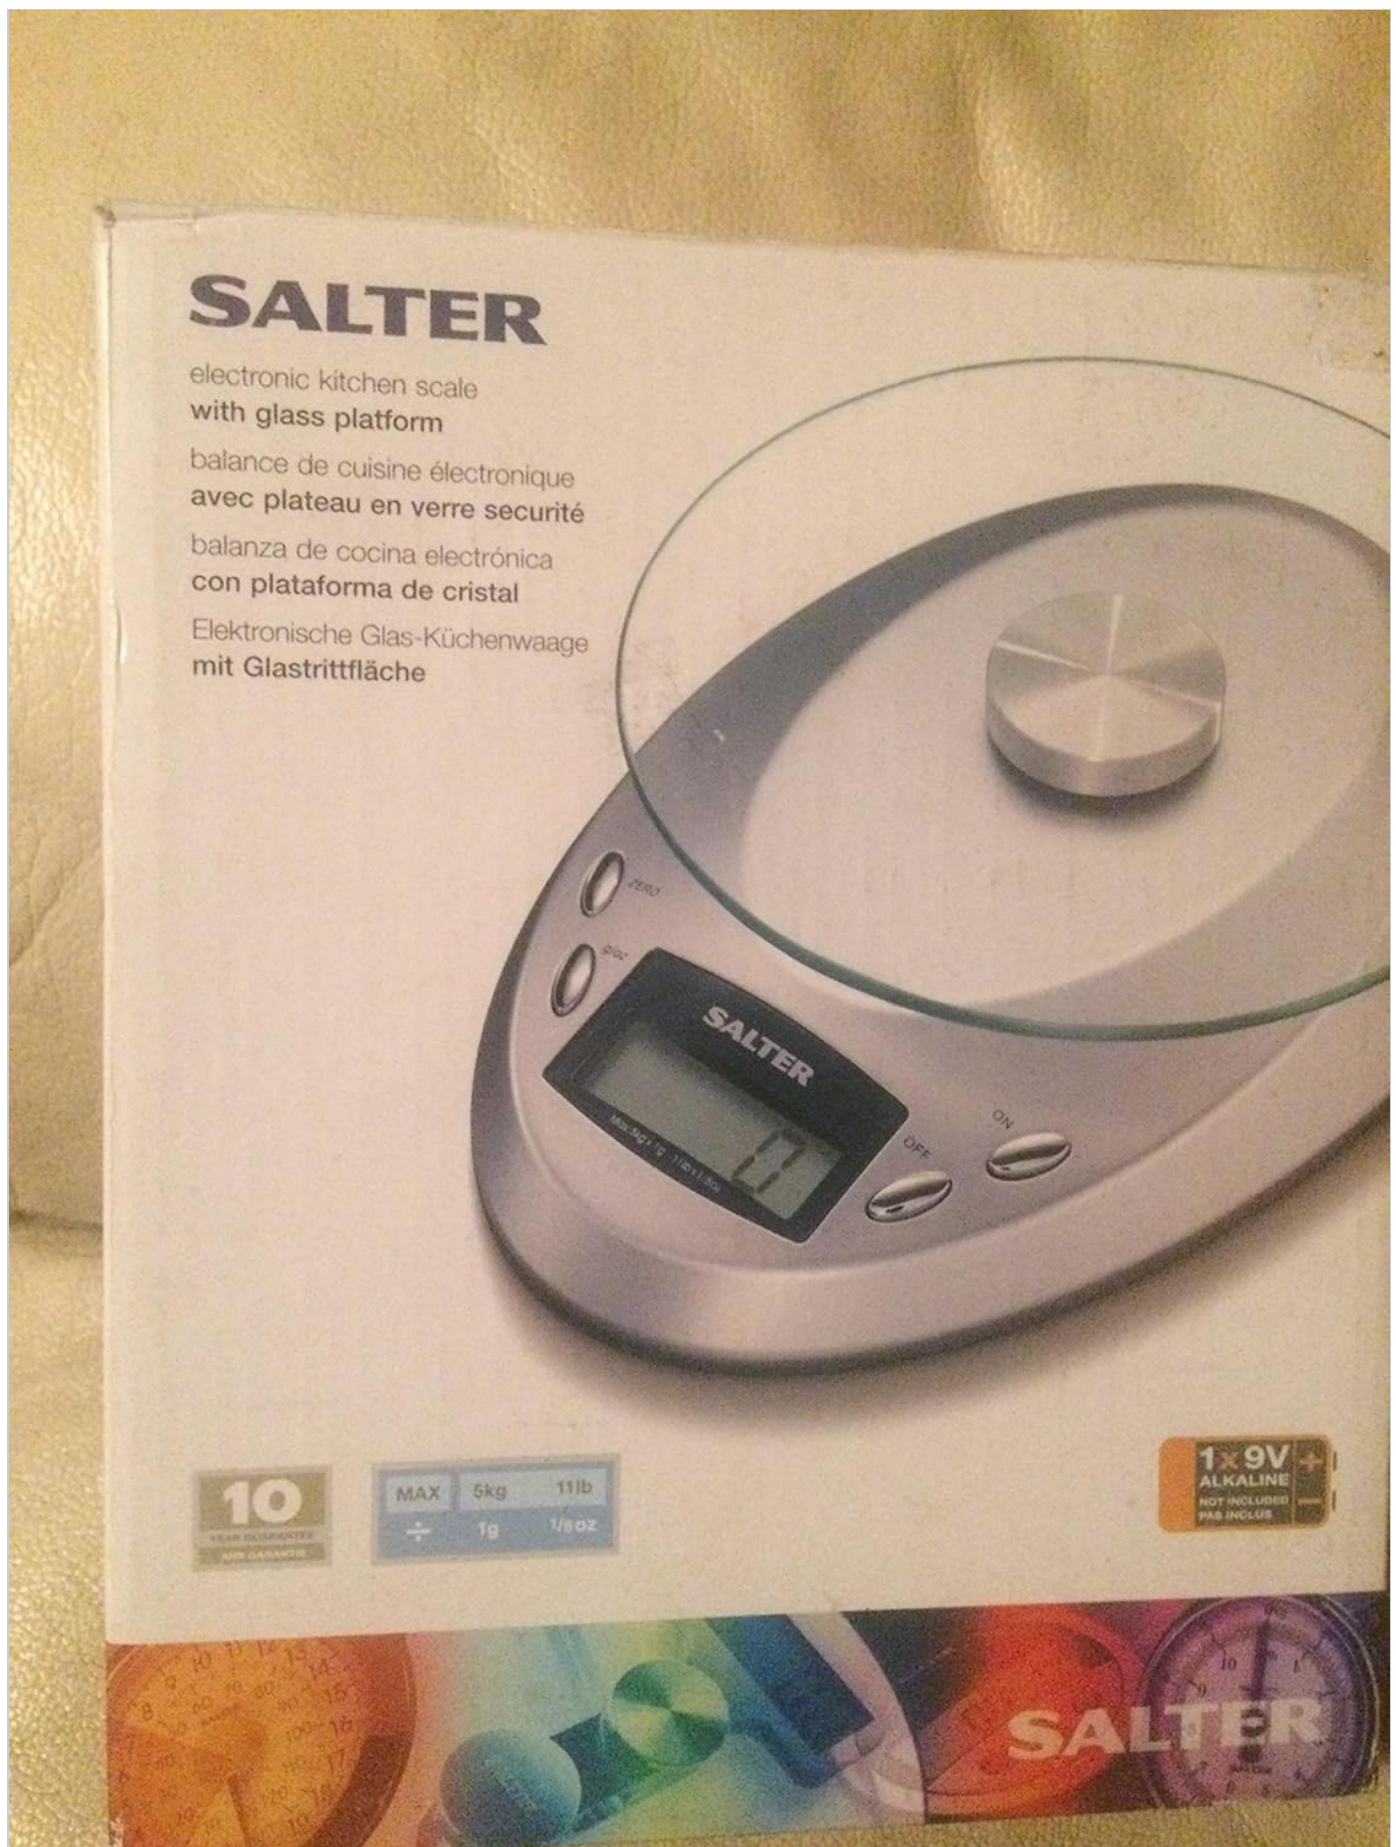


Figure 2: Product packaging indicating key features and battery requirement.

4. SETUP

1. **Battery Installation:** Locate the battery compartment on the underside of the scale. Open the compartment cover, insert

one 9V alkaline battery, ensuring correct polarity (+/-). Close the cover securely.

2. **Placement:** Place the scale on a hard, flat, and stable surface. Uneven surfaces can affect accuracy.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

- To turn the scale **ON**, press the **ON** button located on the right side of the display. The display will show "0" or "0.0" when ready.
- To turn the scale **OFF**, press the **OFF** button. The scale will automatically turn off after a period of inactivity to conserve battery life.

5.2 Unit Selection

Your Salter scale can measure in both metric (grams, kilograms) and imperial (ounces, pounds) units.

- Press the **g/oz** button to toggle between grams (g) and ounces (oz). The selected unit will be displayed on the LCD screen.

5.3 Weighing Items

1. Turn the scale ON. Ensure the display shows "0" or "0.0".
2. Place the item you wish to weigh directly onto the glass platform.
3. The weight will be displayed on the LCD screen in the selected unit.

5.4 Tare Function (Zeroing)

The Tare function allows you to weigh multiple ingredients in the same container or to subtract the weight of a container.

1. Place an empty container on the scale platform. The display will show its weight.
2. Press the **ZERO** button. The display will reset to "0" or "0.0".
3. Add the ingredient you wish to weigh into the container. The display will show only the weight of the added ingredient.
4. Repeat the process for additional ingredients.

6. MAINTENANCE AND CLEANING

- **Cleaning:** The glass platform is easy to clean. Wipe the scale with a damp cloth and a mild detergent if necessary. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a dry place at room temperature. Avoid extreme temperatures or humidity.
- **Battery Replacement:** If the display shows "Lo", it indicates low battery power. Replace the 9V alkaline battery as described in the Setup section.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on.	No battery or incorrect battery installation.	Check battery polarity or replace with a new 9V alkaline battery.
Inaccurate readings.	Scale not on a flat, level surface; overloaded; or internal error.	Ensure scale is on a stable surface. Do not exceed 5kg/11lb. Turn off and on again.
Display shows "Lo".	Low battery power.	Replace the 9V alkaline battery.

Problem	Possible Cause	Solution
Display shows "Err" or "O-Ld".	Scale is overloaded.	Remove items from the scale. Do not exceed maximum capacity.

8. SPECIFICATIONS

- **Brand:** Salter
- **Model Number:** 5832612
- **Material:** Glass platform
- **Maximum Capacity:** 5 kg / 11 lb
- **Readout Accuracy:** ±1 gram
- **Display Type:** LCD
- **Power Source:** 1 x 9V Alkaline Battery (not included)
- **Item Weight:** 1.5 pounds
- **Package Dimensions:** 10.1 x 8.3 x 3.2 inches

9. WARRANTY AND SUPPORT



This Salter Electronic Kitchen Scale comes with a **10-year guarantee**, as indicated on the product packaging. For warranty claims or technical support, please contact Salter customer service through their official website or the contact information provided with your purchase documentation.


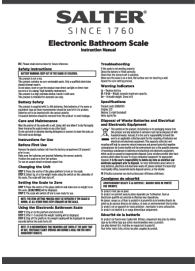


Please retain your proof of purchase for warranty purposes.



© 2023 Salter. All rights reserved.

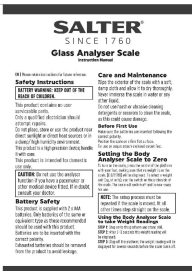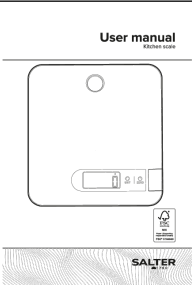Related Documents - 5832612

	<p>Salter Glass Analyser Scale User Manual & Instructions</p> <p>Comprehensive instruction manual for the Salter Glass Analyser Scale, covering safety, setup, personal data entry, usage, maintenance, and disposal. Learn how to use your body fat and body water scale.</p>
	<p>Salter SA00611 Kitchen Scale User Manual</p> <p>User manual for the Salter SA00611 kitchen scale, providing instructions on setup, operation, maintenance, safety, and specifications.</p>

	<p>Salter 9088 WH3R Bluetooth Bathroom Scale Quick Start Guide</p> <p>Step-by-step guide to setting up and using the Salter 9088 WH3R Bluetooth bathroom scale for accurate body composition analysis.</p>
	<p>Salter Electronic Bathroom Scale Instruction Manual</p> <p>Comprehensive user manual for the Salter Electronic Bathroom Scale (Model GENBATH3), covering safety instructions, usage, troubleshooting, specifications, and disposal guidelines.</p>
	<p>Salter Glass Analyser: Instructions and Guarantee</p> <p>User manual and guarantee information for the Salter Glass Analyser body composition scale. Learn how to measure weight, body fat, body water, and BMI using advanced BIA technology for accurate health insights.</p>
	<p>Salter Glass Analyser Instruction Manual: Setup, Usage, and Health Insights</p> <p>This comprehensive manual provides detailed instructions for the Salter Glass Analyser scale. Learn how to set up, use, and interpret readings for weight, body fat, body water, and BMI. Includes healthy range tables, troubleshooting advice, and technical specifications.</p>