

Zenna Home MRA2430

Zenna Home MRA2430 Frameless Medicine Cabinet User Manual


Model: MRA2430

INTRODUCTION

Thank you for choosing the Zenna Home Designer Series Medicine Cabinet. This modern bathroom wall cabinet combines style and functionality, offering a frameless mirror design with a rustproof aluminum body and three adjustable glass shelves. It is designed for both recessed and surface wall mount installations, maximizing storage in any bathroom. The reversible door with 170-degree Euro hinges allows for flexible swing direction, and the mirrored interior and sides enhance visibility. Slow-close hinges ensure quiet operation, while hidden pulls maintain a clean mirror surface. This manual provides detailed instructions for installation, operation, and maintenance to ensure long-lasting use.

KEY FEATURES

- **Complete Cabinet Solution:** Includes a frameless mirror, rustproof aluminum body, and three adjustable glass shelves.
- **Versatile Installation:** Designed for both recessed or surface mount installation.
- **Durable Construction:** Crafted from rustproof aluminum for longevity in humid bathroom environments.
- **Adjustable Storage:** Three adjustable glass shelves for flexible organization of toiletries and essentials.
- **Reversible Door:** Features 170-degree Euro hinges, allowing you to choose left or right swing direction.
- **Modern Design:** Sleek frameless mirror with hidden finger pulls to prevent fingerprints.
- **Enhanced Visibility:** Mirrored interior and sides create a bright, open feel.
- **Quiet Operation:** Slow-close hinges ensure smooth and silent door closure.

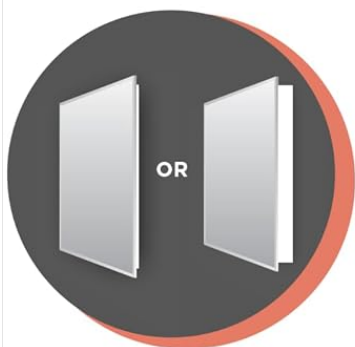

**Recessed or
Wall Mount**



**3 Adjustable
Glass Shelves**



**Reversible for Left or
Right Door Opening**



**Mirrored Interior
and Sides**



**Hidden
Door Pull**



**Self Closing,
Euro Hinges**



**RUSTPROOF
ALUMINUM BODY**



EASY TO ASSEMBLE
MOUNTING HARDWARE INCLUDED



**1-YEAR LIMITED
WARRANTY**

Figure 1: Key features of the Zenna Home Medicine Cabinet, highlighting its versatile installation options, adjustable shelving, reversible door, mirrored interior, hidden pull, slow-close hinges, rustproof aluminum construction, ease of assembly, and warranty.

PRODUCT DIMENSIONS

The Zenna Home MRA2430 Medicine Cabinet measures 24 inches wide by 30 inches high by 4.7 inches deep. For recessed installation, the rough opening dimensions are 23.25 inches wide by 29.25 inches high by 3.9 inches deep.

PRODUCT DIMENSIONS



RECESSED CUTOUT DIMENSIONS

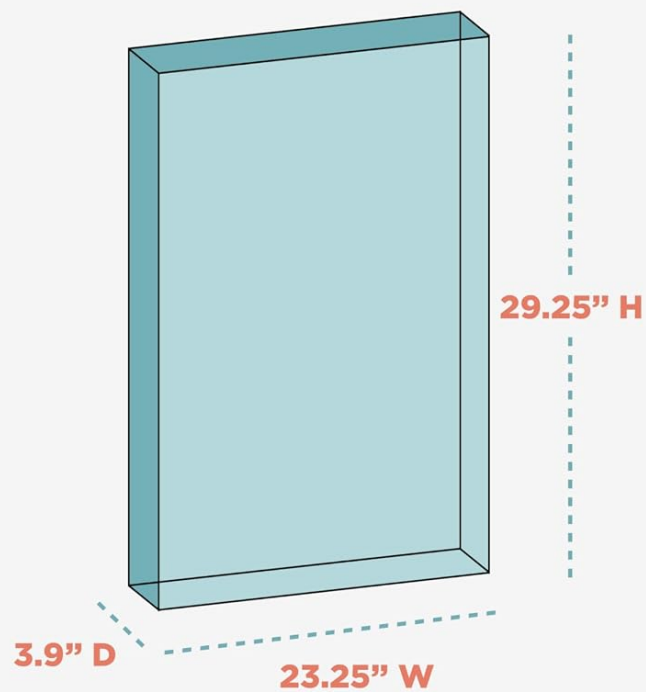


Figure 2: Detailed product and recessed cutout dimensions for the medicine cabinet.



Figure 3: Front view of the medicine cabinet with its external dimensions.

SETUP AND INSTALLATION

Before You Begin

Carefully unpack all components and inspect for any damage. Ensure all parts are present before beginning installation. Refer to the packing list for included items.

Determine your preferred installation method: **Wall Mount** (surface mount) or **Recessed Mount**. This cabinet supports both options.

INSTALLATION TYPE



WALL MOUNT

Installs on the surface of your bathroom wall. Includes mounting hardware.

PROS: Easy installation

CONS: Sticks out from the wall, consider your space constraints - basin & faucet




RECESSED MOUNT

Installs “into the wall” and may require cutting into your wall and framing a space inside if it doesn’t already exist.

PROS: Provides valuable storage with a more flush appearance

CONS: May be more complex to install

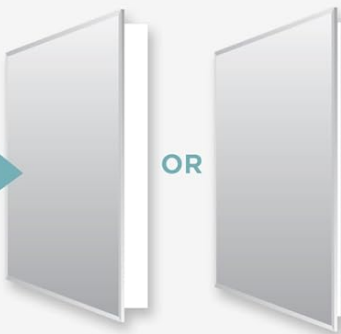

2-WAY MOUNT

Cabinet can be installed in your choice of either wall mount or recessed mount.

PROS: Offers the best of both surface and recess mounted options

Figure 4: Overview of the different installation types: Wall Mount, Recessed Mount, and 2-Way Mount.


RECESSED OR WALL MOUNT



Figure 5: Visual comparison of recessed and surface wall mount installations.


Measure Your Space

Before installation, measure the distance between your overhead lighting and faucet. Also, measure the width of your sink or vanity. The cabinet should not be larger than the overall width of your vanity to ensure proper fit and aesthetics. For surface mount, ensure at least 1.5 inches clearance from the top of the faucet to prevent interference.

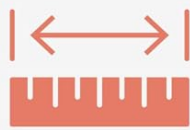

MEASURE YOUR SPACE

First measure the distance between your overhead lighting and faucet. Next measure the width of your sink or vanity. Then choose a cabinet that fits!

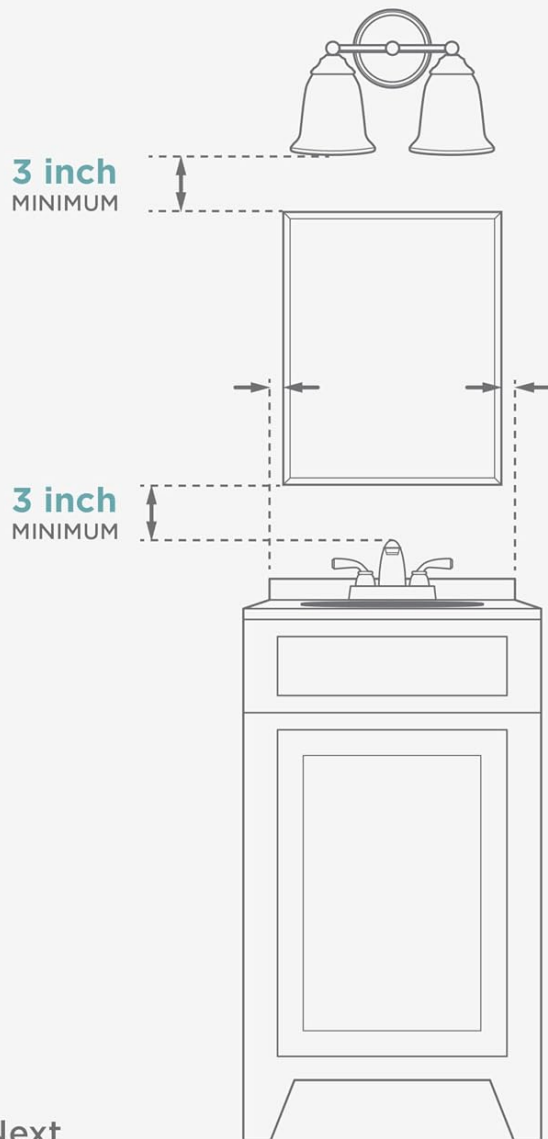

For reference only. Size and shape of your medicine cabinet may vary.

Figure 6: Guidelines for measuring your space to ensure proper cabinet placement.

Tools Needed

The following tools are generally required for installation:

- Phillips Head Screwdriver
- Power Drill
- Tape Measure
- Stud Finder
- Level
- Pencil
- Mounting Hardware (included, but consider your wall composition)

Additional tools and materials may be required for recessed mount installation, especially if cutting into the wall.

TOOLS NEEDED



Phillips Head
Screwdriver



Power Drill



Tape Measure



Stud Finder



Level



Mounting Hardware
(consider your wall
composition when selecting)



Pencil



Additional tools and materials may
be required for recessed mount

Figure 7: Essential tools for cabinet installation.

Installation Steps (General)

1. **Prepare the Wall:** Use a stud finder to locate wall studs. For recessed mounting, ensure the rough opening (23.25" W x 29.25" H x 3.9" D) is clear of obstructions like framing, electrical, or plumbing. If cutting a new opening, it is recommended to consult a professional.
2. **Mark Placement:** Mark the center line for the cabinet body across the vanity countertop. For surface mount, mark the placement of the mounting bracket, ensuring adequate clearance from the faucet.
3. **Install Mounting Brackets:** For surface mount, install the mounting bracket at the bottom to support the cabinet. For recessed mount, ensure the wall studs accommodate the rough opening so the cabinet body can mount directly onto the studs.
4. **Attach Cabinet:**
 - **Surface Mount:** Lift the cabinet onto the bottom bracket, ensuring the slot on the cabinet is secure.
 - **Recessed Mount:** Slide the cabinet body into the existing hole. Ensure the body is level and the body flange covers the hole. Screw into the studs using the included mounting screws.
5. **Install Door:** Attach the door by installing the hinges onto the door and then attaching it to the cabinet body. Due to the door's weight, it is recommended to have another person assist with this step.

6. **Install Shelves:** Insert the shelf clips into the desired positions inside the cabinet. Place the adjustable glass shelves onto the clips.
7. **Final Touches:** Install any remaining trim caps.

For a visual guide on installation, please refer to the official product video below.

Your browser does not support the video tag.

Video 1: Official installation guide for Designer Series Aluminum Medicine Cabinets by Zenith Products Corp. This video demonstrates the basic steps for both surface and recessed mounting, including measuring, bracket installation, and securing the cabinet.

OPERATING INSTRUCTIONS

The Zenna Home MRA2430 Medicine Cabinet is designed for simple and convenient daily use.

- **Opening the Door:** Gently pull the door using the hidden finger pull located on the side of the mirror. The slow-close Euro hinges will allow the door to open smoothly.
- **Closing the Door:** Gently push the door until it engages with the magnetic closure. The slow-close hinges will ensure a quiet and controlled closing motion, preventing slamming.
- **Adjusting Shelves:** The three glass shelves are adjustable. To reposition a shelf, carefully remove any items, lift the shelf, and then remove the shelf clips from their current holes. Insert the clips into the desired new holes, ensuring they are level and secure, then place the glass shelf back onto the clips.
- **Reversing Door Swing:** The door is reversible. If you wish to change the door's swing direction (from left-opening to right-opening or vice-versa), carefully detach the hinges from the cabinet body and the door. Reattach them to the opposite side of the cabinet and door, following the installation instructions in the "Setup and Installation" section.

MAINTENANCE AND CARE

To ensure the longevity and pristine appearance of your Zenna Home Medicine Cabinet, follow these care guidelines:

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into the edges. Wipe gently until clean and streak-free.
- **Cleaning the Aluminum Body:** Wipe the rustproof aluminum body with a soft, damp cloth. For tougher spots, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads, which can scratch the finish.
- **Cleaning Glass Shelves:** The glass shelves can be removed for thorough cleaning. Wash with warm, soapy water or a glass cleaner, then rinse and dry completely before returning them to the cabinet.
- **Preventing Moisture Buildup:** Although the cabinet is rustproof, excessive moisture can still affect contents. Ensure the bathroom is well-ventilated, especially after showers, to minimize condensation inside the cabinet.
- **Hinge Care:** The slow-close Euro hinges are designed for durability. If they become stiff or noisy over time, a small amount of silicone-based lubricant can be applied to the moving parts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Door does not close properly or is misaligned.	Hinges may be loose or out of adjustment.	Check hinge screws and tighten if loose. Adjust the Euro hinges according to manufacturer's instructions (usually involves small adjustment screws on the hinge mechanism) to realign the door.
Door slams shut.	Slow-close mechanism on hinges may be faulty or obstructed.	Inspect hinges for any obstructions. If the mechanism is faulty, contact customer support for replacement hinges.
Shelves are wobbly or unstable.	Shelf clips not fully inserted or damaged.	Ensure all four shelf clips are fully and securely inserted into the cabinet holes. Replace any damaged clips. Ensure the shelf is properly seated on all clips.
Mirror appears cloudy or streaky after cleaning.	Residue from cleaner or improper wiping technique.	Use a clean, lint-free microfiber cloth. Ensure the glass cleaner is ammonia-free. Wipe in one direction, then buff with a dry part of the cloth. Avoid spraying cleaner directly on the mirror.

SPECIFICATIONS

Feature	Detail
Brand	Zenna Home
Model Number	MRA2430
Product Dimensions (W x H x D)	24" x 30" x 4.7"
Recessed Cutout Dimensions (W x H x D)	23.25" x 29.25" x 3.9"
Material	Rustproof Aluminum Body, Glass Shelves
Color	Aluminum
Number of Shelves	3 (Adjustable Glass)
Installation Type	Recessed Mount, Surface Mount
Door Features	Reversible, Slow-Close Euro Hinges, Hidden Pull
Interior	Mirrored Interior and Sides
Item Weight	42 Pounds
UPC	043197131454


WARRANTY

This Zenna Home Medicine Cabinet comes with a **1-Year Limited Warranty**. Please retain your proof of purchase for any warranty claims. For details regarding the terms and conditions of the warranty, please refer to the documentation included with your product or contact customer support.

CUSTOMER SUPPORT

For any questions, assistance with installation, troubleshooting, or warranty claims, please contact Zenna Home customer service. Our US-based customer service team is available to help.

- **Online:** Visit the [Zenna Home Store on Amazon](#)
- **Phone/Email:** Refer to the contact information provided in your product packaging.

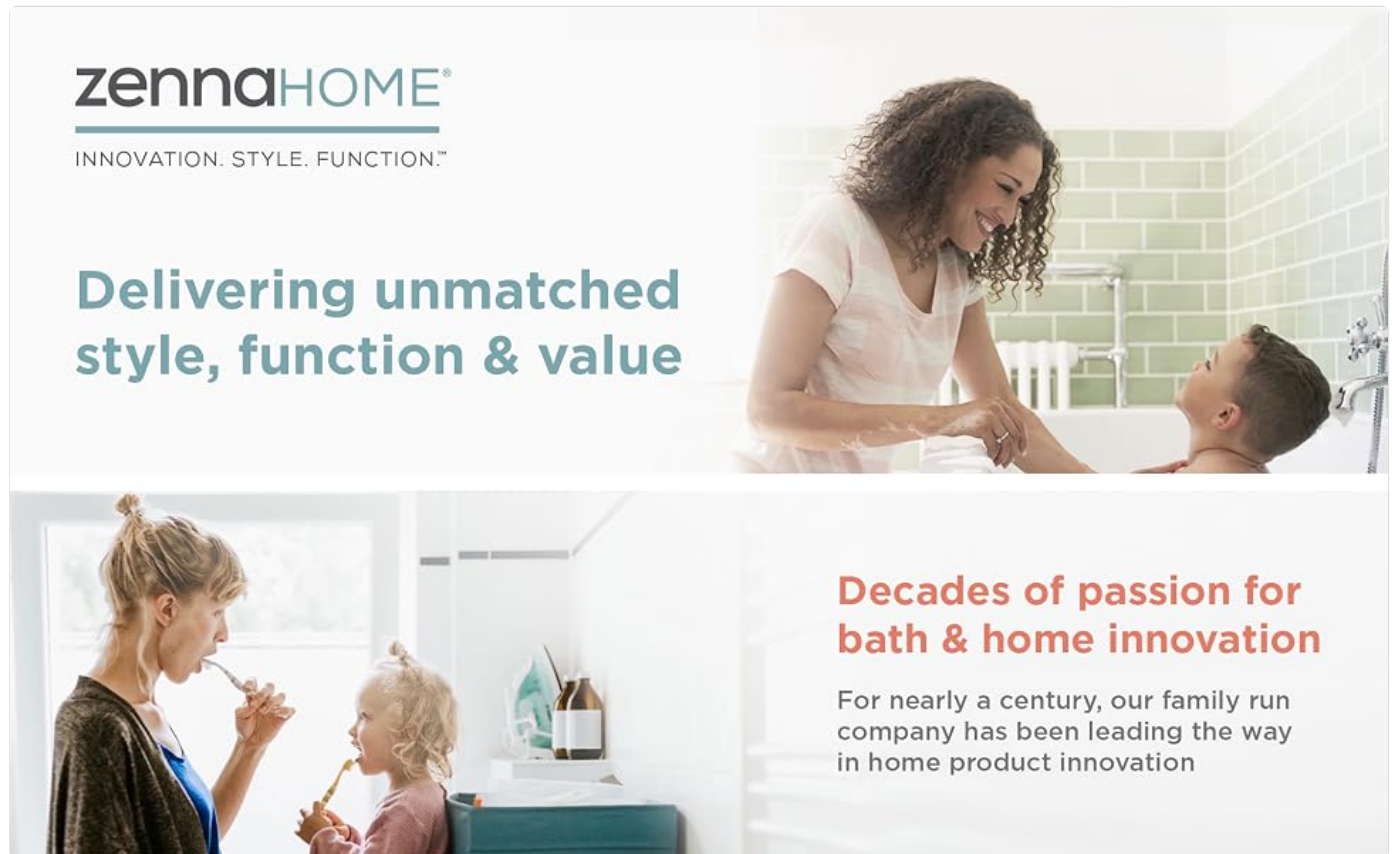

zennaHOME®
INNOVATION. STYLE. FUNCTION.™

Delivering unmatched style, function & value

Decades of passion for bath & home innovation

For nearly a century, our family run company has been leading the way in home product innovation

Figure 8: Zenna Home customer support is available to assist with your needs.

© 2024 Zenna Home. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B004H6VE3K>

More documents and user manuals: <https://manuals.plus/>