

Perixx 10532

Perixx Periboard-706 Wireless Trackball Mini Keyboard User Manual

Model: 10532

INTRODUCTION

The Perixx Periboard-706 is a compact wireless keyboard featuring an integrated trackball, designed for versatile use across various applications. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance.



Figure 1: Front view of the Perixx Periboard-706 Wireless Trackball Mini Keyboard.

SETUP

Package Contents

Before you begin, ensure all items are present in the package:

- PERIBOARD-706 Plus Keyboard
- USB Receiver (Nano receiver)
- User Manual
- 2 AAA Batteries (may be included or required separately)



Figure 2: Included components: keyboard, USB receiver, user manual, and AAA batteries.

Battery Installation

The Periboard-706 requires two AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment on the underside of the keyboard.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Connecting the USB Receiver

The keyboard connects wirelessly via a 2.4 GHz USB Nano receiver. To establish a connection:

1. Remove the Nano receiver from its storage compartment on the underside of the keyboard.
2. Plug the USB Nano receiver into an available USB port on your computer.
3. Turn on the keyboard using the On/Off switch located on the underside.
4. Press the "Connect" button on the underside of the keyboard to initiate pairing with the receiver. The keyboard should be recognized automatically by your operating system.

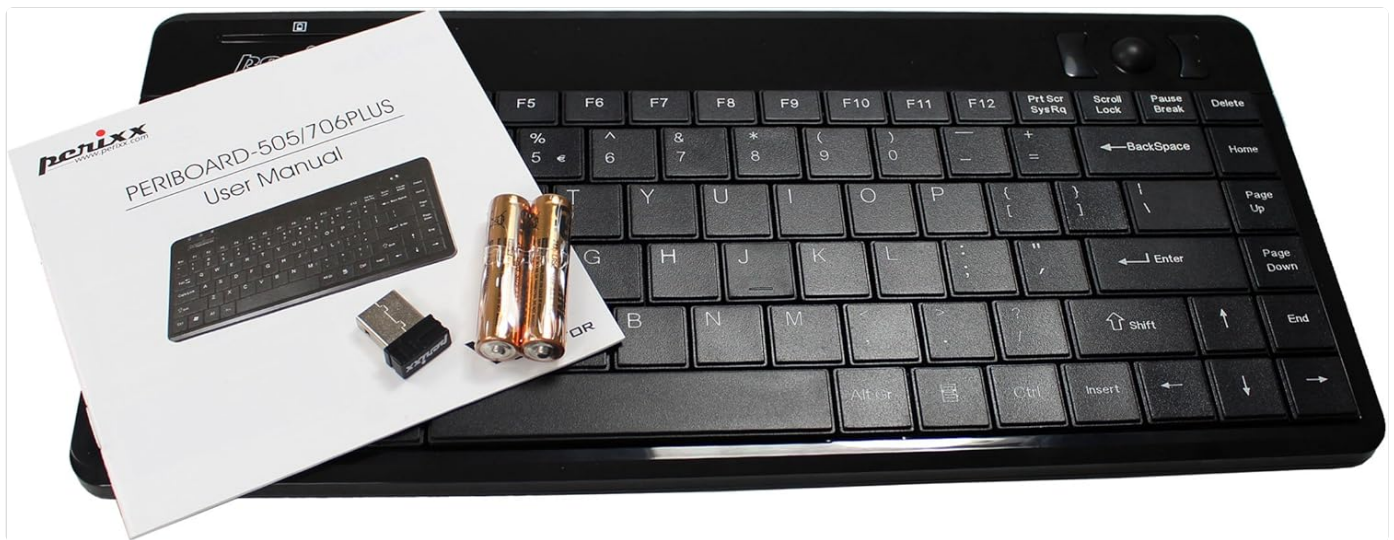


Figure 3: Underside of the keyboard indicating battery installation, receiver storage, On/Off switch, and Connect button.

OPERATING INSTRUCTIONS

Keyboard Layout and Functions

The Periboard-706 features a compact layout with 84 keys, including standard alphanumeric keys, function keys (F1-F12), and dedicated multimedia hotkeys. The keyboard is designed for US English layout.



Figure 4: Top-down view of the Periboard-706 keyboard layout.

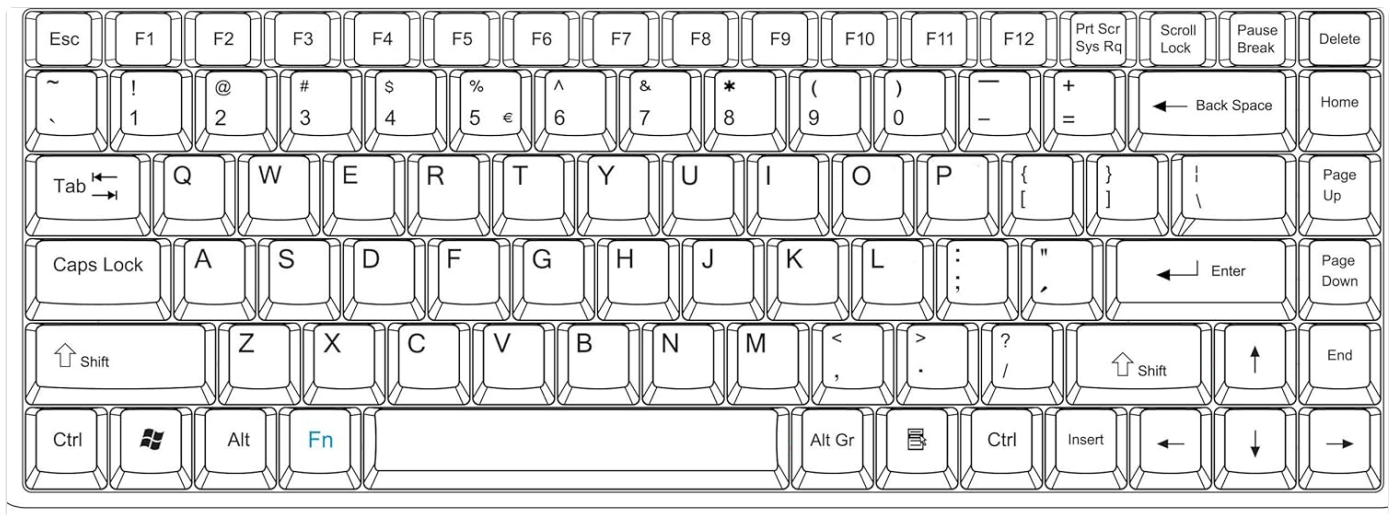


Figure 5: Detailed diagram illustrating the keyboard key functions.

Integrated Trackball and Mouse Buttons

The keyboard includes a built-in 0.55-inch optical trackball for pointing and navigation, along with dedicated left and right click buttons. This allows for fluid screen navigation without the need for an external mouse.

- **Trackball:** Use your thumb or finger to move the cursor on the screen.
- **Left Button:** Functions as a standard left mouse click.
- **Right Button:** Functions as a standard right mouse click.

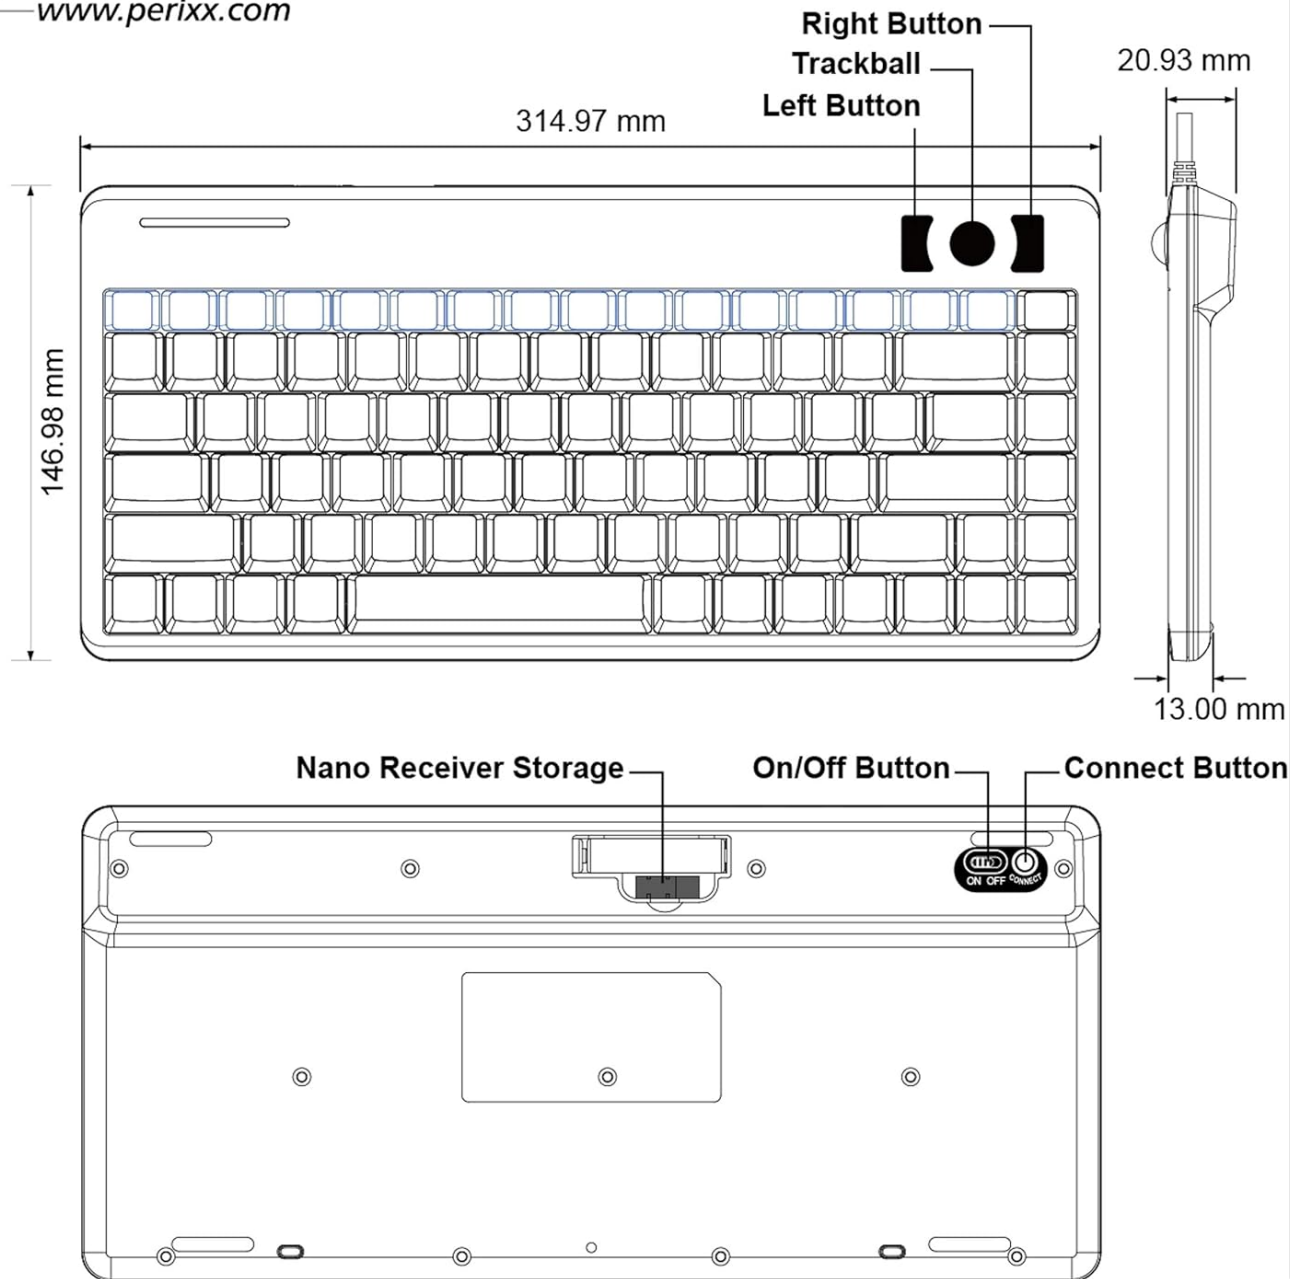


Figure 6: Diagram highlighting the trackball and its associated left and right click buttons, along with product dimensions.

Multimedia Hotkeys

The Periboard-706 features 12 built-in multimedia hotkeys for convenient access to common functions. These keys allow for quick control over media playback, volume, and other system functions, enhancing efficiency across different working scenarios.

Refer to the keyboard layout diagram (Figure 5) for the exact location and function of each multimedia key.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Perixx Periboard-706.

Cleaning the Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the surface of the keyboard.

- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the keyboard.
- For cleaning between keys, use compressed air to remove dust and debris.

Cleaning the Trackball

Over time, dust and debris can accumulate around the trackball, affecting its smooth operation. While the trackball is not designed for easy removal, you can clean around it:

- Use compressed air to blow away any visible dust or particles around the trackball and its housing.
- Gently wipe the surface of the trackball with a clean, dry, lint-free cloth.
- Avoid inserting sharp objects into the trackball mechanism.

TROUBLESHOOTING

If you encounter issues with your Perixx Periboard-706, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Keyboard not responding	Low or dead batteries; Receiver not properly connected; Keyboard not paired.	Replace AAA batteries. Ensure USB receiver is fully inserted into a working USB port. Press the "Connect" button on the keyboard's underside to re-pair.
Trackball not moving cursor smoothly	Dust or debris obstructing the trackball mechanism.	Clean around the trackball using compressed air.
Intermittent connection	Interference from other wireless devices; Receiver too far from keyboard.	Move the keyboard closer to the USB receiver. Ensure no large metal objects are between the keyboard and receiver. Try a different USB port.
Keys not functioning correctly	Software conflict; Physical damage; Dust under keys.	Restart your computer. Clean the keyboard surface and between keys with compressed air. If the issue persists, contact Perixx support.

If the problem persists after trying these solutions, please refer to the support information provided in this manual.

SPECIFICATIONS

Feature	Detail
Brand	Perixx
Series	PERIBOARD-706PLUS US
Model Number	10532
Operating System Compatibility	Windows 7, 8, 10
Item Weight	14.2 ounces (approx. 402.5 grams)
Product Dimensions (LxWxH)	12.34 x 5.74 x 0.79 inches (approx. 31.34 x 14.58 x 2.01 cm)
Color	Black
Power Source	2 AAA batteries

Feature	Detail
Connectivity Technology	RF 2.4 GHz Wireless
Keyboard Description	Wireless Mini Trackball Keyboard
Special Feature	Integrated Trackball, Multimedia Hotkeys
Number of Keys	84

WARRANTY AND SUPPORT

Warranty Information

Perixx products typically come with a limited warranty. For specific warranty terms and conditions applicable to your Periboard-706, please refer to the warranty card included in your product packaging or visit the official Perixx website. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or general inquiries, please contact Perixx customer support. You can find contact information and additional resources on the official Perixx website:

[Visit Perixx Official Website](#)

Perixx is a German-based company specializing in innovative computer peripherals, committed to providing suitable solutions and customer support.