

Duravit 006429

Duravit 006429 Soft-Close Toilet Seat Instruction Manual

Model: 006429 | Brand: Duravit

1. PRODUCT OVERVIEW

This manual provides instructions for the installation, operation, and maintenance of the Duravit 006429 Soft-Close Toilet Seat. This standard O-shape toilet seat features a soft-close mechanism for quiet operation and durable stainless steel hinges. It is designed for compatibility with many standard round-shaped toilets, specifically recommended for Duravit Duraplus ceramic series toilets.



Image 1.1: Top view of the Duravit 006429 Soft-Close Toilet Seat in white.

2. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Failure to follow these instructions may result in product damage or personal injury.

- Ensure all components are present and undamaged before beginning installation.
- Do not overtighten fasteners, as this may crack the ceramic or damage the seat.
- Keep small parts away from children to prevent choking hazards.
- Use appropriate tools for installation.
- Avoid using abrasive cleaners or harsh chemicals on the toilet seat, as this can damage the finish and material.

3. PACKAGE CONTENTS

Verify that all the following items are included in your package:

- Duravit Soft-Close Toilet Seat with Lid (White)
- Stainless Steel Hinges (pre-attached or separate)
- Mounting Material (screws, washers, nuts)
- Assembly Instructions (this document)
- Care Instructions

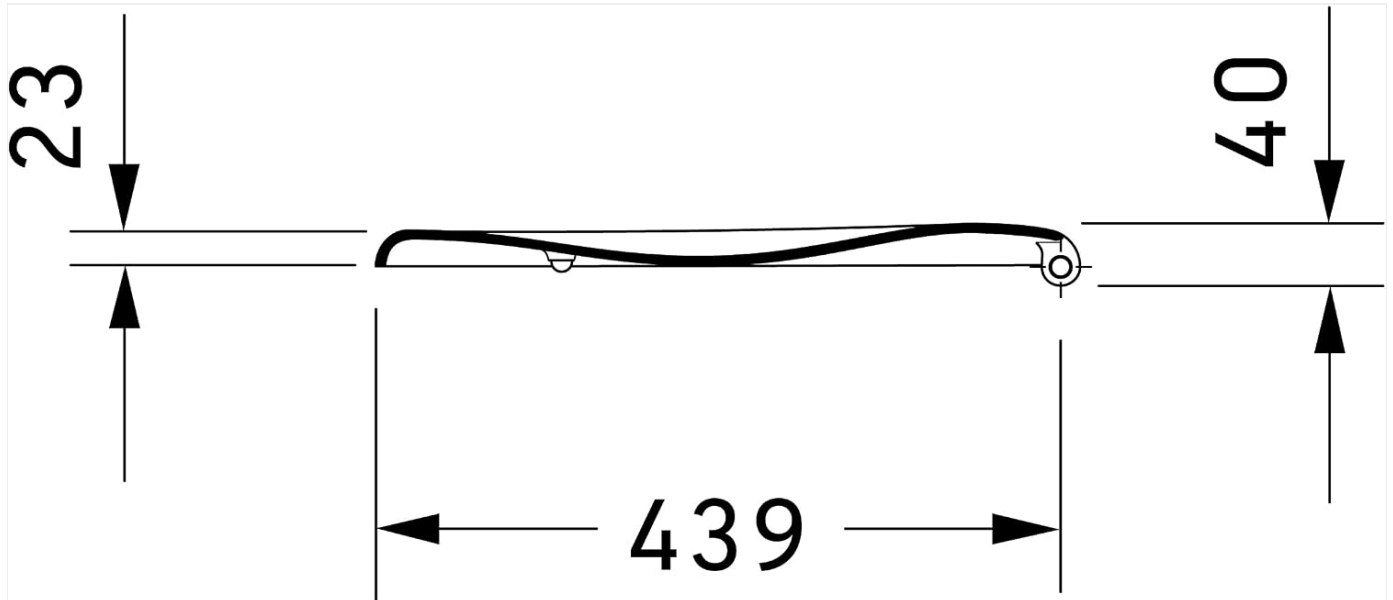


Image 3.1: Underside view of the toilet seat, highlighting the stainless steel hinges.

4. SETUP AND INSTALLATION

The Duravit 006429 toilet seat is designed for mounting from below. The standard fixing distance (hinge spacing) is 15.5 cm.

4.1 Required Tools (Not Included)

- Adjustable wrench or appropriate size spanner
- Screwdriver (if applicable for hinge adjustment)

4.2 Installation Steps

1. **Remove Old Toilet Seat:** If replacing an existing seat, loosen the nuts beneath the toilet bowl that secure the old seat. Remove the old seat and clean the toilet surface thoroughly.
2. **Position Hinges:** Place the new Duravit toilet seat onto the toilet bowl, aligning the hinge posts with the mounting holes on the ceramic. Ensure the seat is centered and properly positioned.
3. **Secure Mounting Hardware:** From beneath the toilet bowl, thread the provided nuts onto the hinge posts. Hand-tighten them initially.
4. **Adjust and Tighten:** Once the seat is correctly aligned, use an adjustable wrench or spanner to firmly tighten the nuts. Do not overtighten.
5. **Test Stability:** Gently push down on the seat to ensure it is securely fastened and does not wobble.

4.3 Dimensions

Refer to the diagram below for key dimensions of the toilet seat. All measurements are in millimeters unless otherwise specified.



Image 4.1: Dimensional drawing of the Duravit 006429 toilet seat. Note the overall length of 439mm, front edge height of 23mm, and rear edge height of 40mm.

5. OPERATING INSTRUCTIONS

The Duravit 006429 toilet seat is equipped with a soft-close mechanism for both the seat and the lid. This feature ensures a gentle and silent closing action, preventing slamming and reducing wear and tear.

- To close the seat or lid, simply push it down gently. The soft-close mechanism will engage, allowing it to lower slowly and quietly on its own.
- Do not force the seat or lid down, as this can damage the soft-close mechanism.

6. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your Duravit toilet seat. The seat is made of high-quality Duroplast, which is durable, easy-care, dust-proof, water- and dirt-repellent, anti-static, and UV-light resistant.

- **Cleaning:** Clean the toilet seat regularly with a mild soap solution and a soft cloth. Rinse thoroughly with clean water and dry with a soft cloth.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, strong acids, alkalis, or chlorine-based products, as these can damage the surface and hinges.
- **Hinge Care:** The stainless steel hinges are rust-proof. Ensure they are kept clean and dry to maintain their appearance and function.
- **Disassembly for Cleaning:** If your model allows for quick release, you may detach the seat for more thorough cleaning of the toilet bowl and seat. Refer to specific hinge instructions if applicable.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toilet seat wobbles or shifts.	Mounting nuts are loose.	Tighten the mounting nuts beneath the toilet bowl. Do not overtighten.
Soft-close mechanism not working or seat/lid slams.	Mechanism is damaged or obstructed.	Check for any obstructions around the hinges. If the mechanism is damaged, contact customer support for replacement parts or service. Avoid forcing the seat or lid down.
Seat appears discolored or stained.	Improper cleaning agents used or prolonged exposure to harsh substances.	Clean with mild soap and water. Avoid harsh chemicals. If discoloration persists, it may be permanent damage.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	006429 (Part Number: 0064290000)
Brand	Duravit
Color	White
Material	Duroplast (Plastic), Stainless Steel (Hinges)
Style	With Soft Close
Shape	O-shape (Standard Round)
Product Dimensions	Approx. 0.39"L x 0.39"W (Note: This seems like placeholder data from source, refer to diagram for actual dimensions)
Item Weight	2.4 Kilograms (approx. 5.28 pounds)
Hinge Spacing	15.5 cm (standard fixing distance)
Included Components	Toilet Seat with Lid, Stainless Steel Hinges, Mounting Material

Note: Product dimensions provided in the source data (0.39"L x 0.39"W) appear to be generic. Please refer to the dimensional diagram in Section 4.3 for accurate measurements.

9. WARRANTY AND SUPPORT

Duravit provides a **5-year manufacturer's guarantee** on this toilet seat, covering defects in material and workmanship. This guarantee ensures a long service life for your product.

For warranty claims, technical support, or inquiries about replacement parts, please contact Duravit customer service through their official website or the retailer where the product was purchased. Please have your model number (006429) and proof of purchase available when contacting support.

Duravit Official Website: www.duravit.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question