

[Manuals.plus](#) /

› [Speakman](#) /

› Speakman SA-1007 Neo Bathroom Towel Bar Instruction Manual

Speakman SA-1007

Speakman SA-1007 Neo Bathroom Towel Bar Instruction Manual

Model: SA-1007

PRODUCT OVERVIEW

The Speakman SA-1007 Neo Bathroom Towel Bar is designed for modern bathrooms, featuring solid-metal construction for durability. This towel bar is easy to install and comes with all necessary mounting hardware. It is available in a Polished Chrome finish.



Image: Speakman SA-1007 Neo Towel Bar in Polished Chrome, showcasing its design with two white towels against a dark background.

SAFETY TIPS

- Read all instructions thoroughly before beginning installation.
- Do not overtighten any connections or damage may occur.
- This item is **NOT** designed for use as a grab bar. Do not install in locations where product is likely to be used as a grab bar.

REQUIRED TOOLS AND COMPONENTS

Required Tools:

- Phillips Screwdriver

- Small Flat Tip Screwdriver
- Drill with 1/4" bit
- Pencil
- Tape Measure
- Level

Components Included:

- Towel Bar
- Mounting Brackets
- Plastic Anchors
- Mounting Screws
- Holding Screws

SA-1007

Neo 24" Towel Bar

FEATURES:

- Metal construction
- Mounting hardware included

FINISH:



PC BN


WARRANTY:

- 1 year limited



DIMENSIONS:

NOTE: 1. All dimensions are in inches (millimeters) unless otherwise specified and are subject to change without notice.

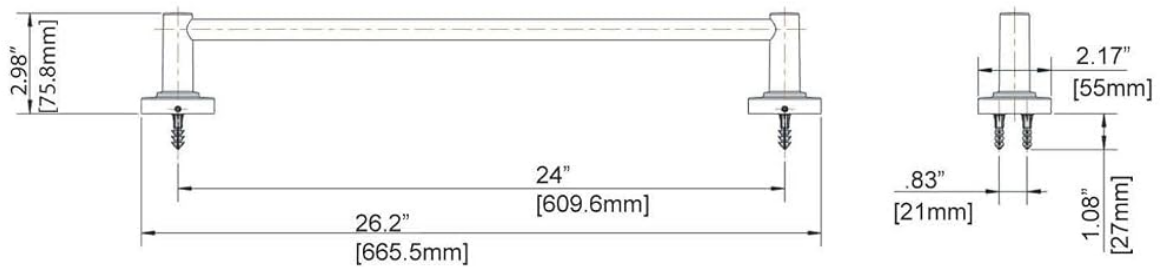

Architect/Engineer Approval Space:

Management Systems Registered to ISO 9001

223

Image: Exploded view of the towel bar components, illustrating how each part fits together for installation.

INSTALLATION INSTRUCTIONS

Follow these steps for proper installation of your Speakman SA-1007 Neo Bathroom Towel Bar. Ensure you have all required tools and components before starting.

- 1. Mark Drilling Locations:** Drill 1/4" holes in marked locations. If mounting to a stud, do not use wall anchors. Secure Mounting Brackets to wall using Mounting Screws without drilling holes.

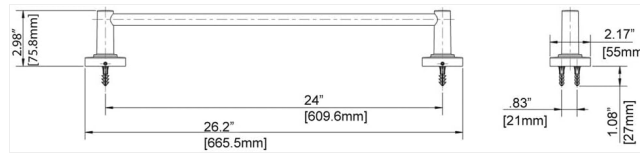


Illustration of drilling pilot holes for the mounting hardware.

- 2. Prepare Mounting Posts:** Loosen set screw at base of each post and remove brackets (if necessary). Determine mounting location of component and lightly trace outline on wall with a pencil.

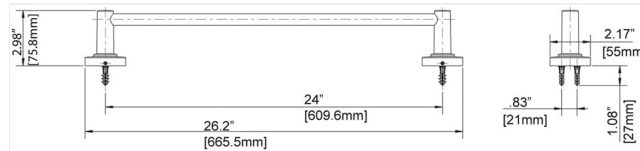


Illustration of preparing the mounting posts and marking the wall.

- 3. Install Plastic Anchors:** Insert Plastic Anchors into drilled holes and press in until flush with wall. Secure Mounting Brackets to wall with Mounting Screws using a Phillips Screwdriver.

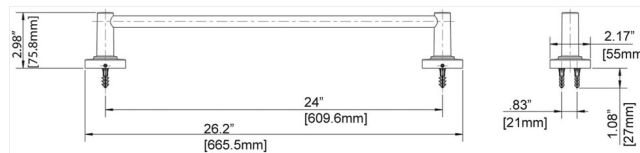


Illustration of inserting plastic anchors and securing mounting brackets.

- 4. Attach Towel Bar:** Center Mounting Bracket within traced outline. Mark the 2 mounting locations with a pencil. Locate post over Mounting Bracket and tighten Set Screw with Small Flat Tip Screwdriver. Repeat steps 1 thru 5 for remaining items.

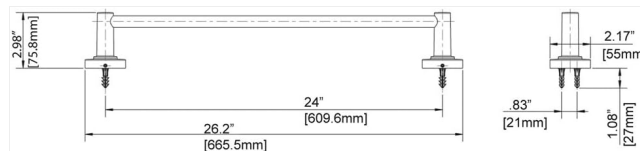


Illustration of attaching the towel bar to the installed mounting brackets.

OPERATION

The Speakman SA-1007 Neo Bathroom Towel Bar is designed for holding towels and other lightweight bathroom textiles. Simply drape your towels over the bar for convenient storage and drying.



Image: Speakman SA-1007 Neo Towel Bar in Polished Chrome, shown with a towel in a bathroom setting.

MAINTENANCE

To maintain the finish and appearance of your towel bar, follow these cleaning guidelines:

- Clean with a soft, damp cloth only.
- Do not use scrub pads, abrasive detergents, or chemical cleansers as they may harm the protective finish of your bath accessories.

TROUBLESHOOTING

If you encounter any issues with your Speakman SA-1007 Neo Bathroom Towel Bar that are not covered by these instructions, please contact Speakman customer service for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	SA-1007
Brand	Speakman
Color	Polished Chrome
Material	Zinc
Finish Type	Polished
Installation Type	Wall mounted
Item Weight	0.69 Pounds (approximately 11 ounces)
Product Dimensions	2.98 x 26.2 x 2.17 inches
UPC	671252097713, 735090089689

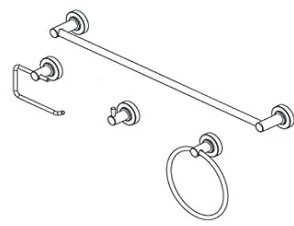

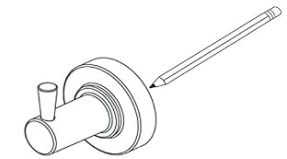
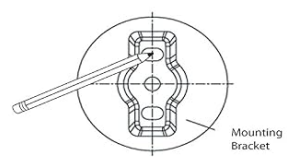
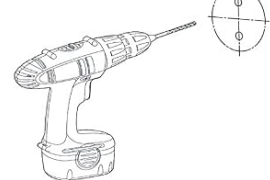
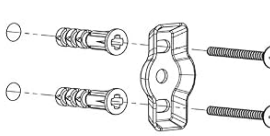
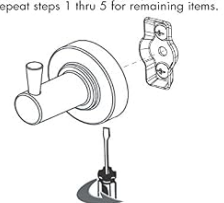
<p>Instructions for Models:</p> <p>SA-1004 SA-1005 SA-1006 SA-1007</p>  <p>Need Help? For additional assistance or service call:</p> <p>SPEAKMAN Company 400 Anchor Mill Road New Castle, DE 19720</p> <p>PHONE: 800-537-2107 EMAIL: customerservice@speakmancompany.com WEB: www.speakmancompany.com</p> <p>92-SA-100X-R2</p>	<p>What You Need To Know:</p> <p>Tools: Required:</p> <ul style="list-style-type: none"> *Phillips Screwdriver *Small Flat Tip Screwdriver *Drill with 1/4" bit *Pencil <p>Helpful:</p> <ul style="list-style-type: none"> *Tape Measure *Level 	<p>Important Notes: Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.</p> <p>Instruction images shown are for reference only and apply to all models numbers shown.</p> <p>Safety Tips: This item is NOT designed for use as a grab bar. Do not mount in locations where product is likely to be used as a grab bar.</p> <p>Maintenance: Clean with a soft, damp cloth only. Do not use scrub pads, detergents or cleansers as they may harm the protective finish of your bath accessories.</p> <p>2 Loosen set screw at base of each post and remove brackets (if necessary). Determine mounting location of component and lightly trace outline on wall with a pencil.</p>  <p>2 Center Mounting Bracket within traced outline. Mark the 2 mounting locations with a pencil.</p> 	<p>2 Drill 1/4" holes in marked locations. If mounting directly into stud or wood wall, secure Mounting Bracket to wall using Mounting Screws without drilling holes.</p>  <p>2 Insert Plastic Anchors into drilled holes and press in until flush with wall. Secure Mounting Brackets to wall with Mounting Screws using Phillips Screwdriver.</p>  <p>2 Locate post over Mounting Bracket and tighten Set Screw with Small Flat Tip Screwdriver. Repeat steps 1 thru 5 for remaining items.</p> 
--	--	---	--

Image: Detailed technical drawing showing the dimensions of the towel bar.

WARRANTY AND SUPPORT

Warranty Information:

This Speakman SA-1007 Neo Bathroom Towel Bar comes with a **1 Year Limited Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support:

For additional assistance, service calls, or warranty inquiries, please contact Speakman Company:

Address: 400 Anchor Mill Road, New Castle, DE 19720

Phone: 800-537-2107

Email: customerservice@speakmancompany.com

Website: www.speakmancompany.com

