

[Manuals.plus](#) /

› [KOHLER](#) /

› KOHLER Verdera 40 in. W x 30 in. H Recessed Medicine Cabinet User Manual

KOHLER 99010-NA

KOHLER Verdera Recessed Medicine Cabinet User Manual

Model: **99010-NA** | Brand: **KOHLER**



1. PRODUCT OVERVIEW

The KOHLER Verdera medicine cabinet, model 99010-NA, is designed to combine elegant aesthetics with practical functionality for bathroom environments. This unit features a durable anodized aluminum construction, ensuring resistance to rust and chipping. It is suitable for both recessed and surface-mount installations.



Image 1.1: Front view of the KOHLER Verdera medicine cabinet with its three mirrored doors closed, showcasing its sleek design.

Key features include triple mirrored doors that create a light-filled gallery effect, a fully mirrored interior, and three adjustable tempered-glass shelves for organized storage. The cabinet is equipped with two-way adjustable hinges offering a 108-degree opening capability for convenient access.

2. IMPORTANT SAFETY INFORMATION

Adherence to safety guidelines is crucial during installation and use of this product. Failure to follow these instructions may result in injury or damage to the product.

- Always follow the manufacturer's instructions for installation and use.
- Keep the cabinet away from direct heat sources.
- Do not overload the adjustable shelves; distribute weight evenly.
- Exercise caution with the slow-close doors to prevent pinching.
- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves when installing the cabinet.
- For recessed installation, ensure no electrical wires, water supply piping, or vent piping are present in the wall

cavity. Consult a professional if modifications are required.

3. SETUP AND INSTALLATION

The Verdera medicine cabinet can be installed as either a recessed or surface-mount unit. The installation process requires careful attention to detail and may necessitate professional assistance, especially for recessed mounting.

3.1 Pre-Installation Considerations

- **Recessed Installation:** A wall opening of 38-1/2 inches (978 mm) width x 28-1/4 inches (718 mm) height x 3-1/16 inches (78 mm) depth is required. For proper mounting, the wall cavity must be framed and cabinet secured to framing studs.
- **Surface-Mount Installation:** Requires K-99012 or K-99675 side mirror kit (sold separately). Use appropriate anchors for the loaded weight of the product.
- Ensure a minimum distance of 3 inches (76 mm) between the bottom of the cabinet and the top of any faucet to allow for door clearance.

3.2 Installation Steps (General)

1. **Prepare the Wall:** For recessed installation, create the specified wall opening. For surface mount, identify stud locations or prepare for appropriate anchors.
2. **Mount the Cabinet:** Securely attach the cabinet housing to the wall framing or using appropriate mounting hardware.
3. **Install Shelves:** Position the nine adjustable tempered-glass shelves within the cabinet. Note: Some users report that doors may need to be removed to install shelves.
4. **Adjust Doors:** Ensure doors operate smoothly and align correctly. The two-way adjustable hinges allow for precise alignment.



Image 3.1: Technical drawing illustrating the dimensions and installation requirements for the KOHLER Verdera medicine cabinet, including wall opening sizes and door swing angles.

For detailed, step-by-step instructions, refer to the official [Installation Manual \(PDF\)](#) provided by KOHLER.

4. OPERATION

The Verdera medicine cabinet is designed for ease of use and efficient storage.

- **Door Operation:** The triple mirrored doors open smoothly with two-way adjustable hinges, providing a wide

108-degree opening for full access to the cabinet interior. The doors feature a slow-close mechanism to prevent slamming.

- **Adjustable Shelves:** The nine tempered-glass shelves can be repositioned to accommodate items of various heights. To adjust, carefully lift the shelf, move the support clips to the desired height, and reinsert the shelf.
- **Mirrored Interior:** The fully mirrored interior enhances visibility and provides additional reflective surfaces.

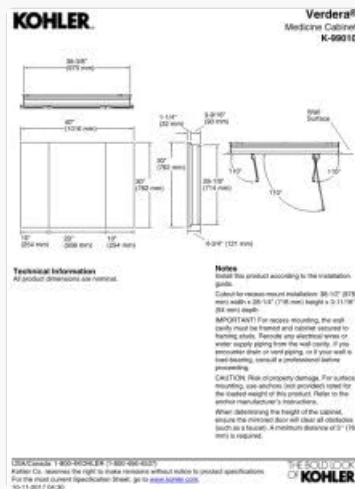


Image 4.1: The KOHLER Verdera medicine cabinet with its doors open, revealing the mirrored interior and adjustable tempered-glass shelves, designed for organized storage.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your Verdera medicine cabinet.

- **Cleaning Mirrors:** Use a soft, damp cloth and a mild, non-abrasive glass cleaner. Avoid cleaners containing ammonia or harsh chemicals, as these can damage the mirror's silvering or aluminum finish over time. Wipe dry immediately to prevent water spots.
- **Cleaning Aluminum Frame:** Wipe the anodized aluminum frame with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- **Glass Shelves:** Clean glass shelves with a mild glass cleaner and a soft cloth. Ensure they are fully dry before placing items back on them.
- **Hinge Maintenance:** Periodically check hinges for smooth operation. Do not apply lubricants unless specifically recommended by KOHLER.

6. TROUBLESHOOTING

This section addresses common issues that may arise with your medicine cabinet.

- **Doors Not Closing Properly:** Check hinges for alignment. The two-way adjustable hinges allow for minor adjustments. Ensure no obstructions are preventing the door from closing fully.
- **Shelves Sagging or Uneven:** Verify that the shelf support clips are securely seated at the same height on both sides and that the shelf is not overloaded.
- **Mirror Spots/Discoloration:** Ensure only recommended cleaning agents are used. Harsh chemicals or abrasive cleaners can damage the mirror finish. If discoloration persists, contact customer support.

For issues not covered here, please refer to the official installation manual or contact KOHLER customer support.

7. SPECIFICATIONS

Product Specifications for KOHLER Verdera Medicine Cabinet (Model 99010-NA)

Feature	Detail
Brand	KOHLER
Model Name	Verdera
Model Number	99010-NA
Dimensions (W x H x D)	40" W x 30" H x 4.75" D (1016 mm W x 762 mm H x 121 mm D)
Mounting Type	Recessed or Surface-Mount
Material	Anodized Aluminum (Frame), Glass (Back, Shelves, Mirrors)
Door Style	Tri-view, Full-overlay mirrored doors
Number of Shelves	9 (Adjustable tempered-glass)
Hinge Type	Two-way adjustable, 108-degree opening, slow-close
Item Weight	60 Pounds (27.2 kg)
UPC	885612210999

8. WARRANTY AND SUPPORT

Warranty Information: The KOHLER Verdera medicine cabinet is covered by a **Kohler® one-year limited warranty**. This warranty covers manufacturing defects under normal use. For full details and terms, please refer to the official Kohler warranty documentation or visit the Kohler website.

Customer Support: For technical assistance, replacement parts, or warranty claims, please contact KOHLER customer service. Contact information can typically be found on the Kohler website or within the product packaging.

You can also find additional resources and support on the [KOHLER Store on Amazon](#).

© 2025 KOHLER. All rights reserved.

This manual is intended for informational purposes only. KOHLER reserves the right to make revisions without notice to product specifications.