

Tempur-Pedic TP9000

Tempur-Pedic TP9000 Mesh Swivel Task Chair User Manual

Model: TP9000



1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your Tempur-Pedic TP9000 Mesh Swivel Task Chair. Designed for comfort and support, this ergonomic mid-back task chair features responsive TEMPUR Material memory foam and a breathable mesh back.

The unique TEMPUR Material conforms to your body's weight, shape, and temperature, providing unparalleled pressure relief and support. Simple controls allow for personalized adjustments to arm width, arm height, seat height, and tilt tension, ensuring an optimal seating experience.

2. IMPORTANT SAFETY INFORMATION

- The maximum weight capacity for this chair is **275 pounds**. Do not exceed this limit.
- Ensure all components are properly assembled and tightened before use to maintain stability.
- Do not exceed the maximum height adjustments for any part of the chair.
- Keep hands and fingers clear of moving parts during adjustment.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, contact customer support.

- Chair Backrest (Mesh)
- Seat Cushion (with TEMPUR Material)
- Armrests (2)
- Gas Lift Cylinder
- Five-Star Base
- Casters (5)

- Hardware Kit (screws, washers, Allen wrench)

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your Tempur-Pedic TP9000 chair. It is recommended to assemble the chair on a soft, clean surface to prevent damage.

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the five-star base until they click securely into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the five-star base.
3. **Attach Armrests to Seat:** Secure the armrests to the underside of the seat cushion using the provided screws. **Important Note:** Some assembly instructions may incorrectly depict the armrest orientation. Ensure the armrests are positioned so they provide adequate space and comfort when seated. The wider part of the armrest base typically faces outwards.
4. **Attach Backrest to Seat:** Align the backrest with the seat mechanism and secure it using the appropriate screws from the hardware kit.
5. **Connect Seat Assembly to Gas Lift:** Carefully place the assembled seat and backrest onto the top of the gas lift cylinder, ensuring it is centered and stable. Apply downward pressure to secure the connection.





Figure 1: Fully assembled Tempur-Pedic TP9000 Mesh Swivel Task Chair.



Figure 2: Angled view of the chair, showing the seat and backrest design.

5. OPERATING INSTRUCTIONS

Your Tempur-Pedic TP9000 chair offers several adjustment features to customize your seating experience:

- **Seat Height Adjustment:** Locate the lever on the right side, beneath the seat. To raise the seat, lift the lever while taking your weight off the seat. To lower the seat, lift the lever while remaining seated. Release the lever at the desired height.
- **Arm Height and Width Adjustment:** The armrests can be adjusted for height and width. Locate the buttons or levers on the armrests to unlock and adjust their position. Press the button or lift the lever, move the

armrest to the desired height or width, and release to lock.

- **Tilt Tension Adjustment:** The round knob located under the front of the seat controls the tilt tension. Turn the knob clockwise to increase tension (making it harder to recline) or counter-clockwise to decrease tension (making it easier to recline).
- **Synchro Tilt Mechanism with Tilt Lock:** Use the lever on the left side, beneath the seat, to engage or disengage the tilt function. Push the lever in to lock the chair in an upright position. Pull the lever out to allow the chair to recline.



Figure 3: The chair positioned in a typical office environment, demonstrating its ergonomic design.

6. MAINTENANCE

To ensure the longevity and appearance of your Tempur-Pedic TP9000 chair, follow these simple maintenance guidelines:

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners, as these may damage the mesh, fabric, or plastic components.
- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if

necessary.

- **Caster Care:** Keep casters free of hair and debris to ensure smooth movement.

7. TROUBLESHOOTING

If you encounter issues with your chair, refer to the following common problems and solutions:

- **Chair Sinks or Does Not Hold Height:** This typically indicates an issue with the gas lift cylinder. Contact customer support for a replacement.
- **Chair is Unstable or Wobbly:** Check all assembly screws, especially those connecting the armrests, backrest, and base. Ensure they are securely tightened. Verify casters are fully inserted into the base.
- **Difficulty Adjusting Tilt:** Ensure the tilt lock lever is disengaged. Adjust the tilt tension knob to a lighter setting if the chair is too stiff to recline.
- **Armrests are Loose:** Tighten the screws securing the armrests to the seat.

8. SPECIFICATIONS





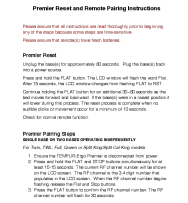

Brand	Tempur-Pedic
Model Name	TP9000
Product Dimensions	26.8"D x 26.8"W x 40"H
Seat Depth	24.8 inches
Chair Backrest Width	21.7 Inches
Maximum Weight Recommendation	275 Pounds
Item Weight	48 pounds
Color	Black
Back Style	Mesh Back
Fill Material	Memory Foam (TEMPUR Material)
Special Feature	Tempur Pedic Seat, Adjustable Arms, Synchro Tilt
Product Care Instructions	Wipe Clean

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Tempur-Pedic website or contact your retailer. Keep your purchase receipt for warranty claims.
For additional assistance, you may visit the [Tempur-Pedic Store on Amazon](#).

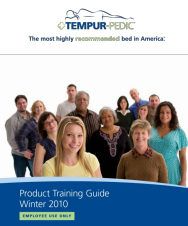

Related Documents - TP9000

 <p>TEMPUR-PEDIC The most highly recommended bed in America.</p> <p>Product Training Guide Winter 2010</p>	<p>Tempur-Pedic Product Training Guide Winter 2010: Mattresses, Pillows, and Accessories</p> <p>Comprehensive product training guide for Tempur-Pedic mattresses, pillows, and sleep system accessories from Winter 2010. Features detailed information on TEMPUR material, model comparisons, benefits, features, specifications, and warranty information.</p>
 <p>OWNER'S MANUAL TEMPUR-ERGO SMART BASE MANUAL DEL PROPIETARIO</p>	<p>Tempur-Pedic Ergo Smart Base Owner's Manual: Features, Setup, and Safety</p> <p>This owner's manual provides comprehensive guidance for the Tempur-Pedic Ergo Smart Base with Sleeptracker AI, covering setup, operation, safety, troubleshooting, and warranty information for enhanced sleep comfort.</p>
 <p>10-YEAR LIMITED WARRANTY TEMPUR-PEDIC MATTRESSES AND FLAT FOUNDATIONS</p>	<p>Tempur-Pedic 10-Year Limited Warranty for Mattresses and Flat Foundations</p> <p>Official 10-year limited warranty details for Tempur-Pedic mattresses and flat foundations, covering defects, exclusions, and the claims process. Learn about your warranty rights and responsibilities.</p>
 <p>TEMPUR-PEDIC ADJUSTABLE BED OWNERS MANUAL</p>	<p>Tempur-Pedic Adjustable Bed Owners Manual</p> <p>Comprehensive owners manual for the Tempur-Pedic adjustable bed, covering installation, operation, troubleshooting, and warranty information. Learn how to set up and use your Tempur-Pedic bed for optimal comfort and performance.</p>
 <p>Premier Reset and Remote Pairing Instructions</p>	<p>Tempur-Ergo Premier Reset and Remote Pairing Guide</p> <p>Comprehensive instructions for resetting and pairing the remote control for the Tempur-Ergo Premier adjustable bed bases, covering single and dual base setups.</p>
 <p>TEMPUR-PEDIC TEMPUR-ERGO PROSMART™ AIR ProSmart™ SleepSystem™</p> <p>Quick Installation Guide Guide d'installation rapide Guía de instalación rápida</p>	<p>Tempur-Ergo ProSmart Air Quick Installation Guide</p> <p>A quick installation guide for the Tempur-Ergo ProSmart Air adjustable bed base, covering base setup and mattress setup. Includes part lists, step-by-step instructions, and contact information.</p>