

## Ideal Standard T629901

# Ideal Standard T629901 Cantica Toilet Seat Instruction Manual

## INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Ideal Standard Cantica toilet seat, model T629901. Please read these instructions carefully before proceeding with installation or use to ensure proper function and longevity of the product.

The Ideal Standard Cantica toilet seat is an original component designed for durability and comfort. It is constructed from high-quality duroplastic material and includes robust metal hinges for secure attachment.



Image: Top view of the Cantica toilet seat, showcasing its rectangular shape and white finish.

## SETUP AND INSTALLATION

### Tools Required:

- Adjustable wrench or pliers
- Screwdriver (if required for hinge adjustment)

### Package Contents:

- 1 x Ideal Standard Cantica Toilet Seat
- 1 x Set of Metal Hinges and Fasteners

### Pre-Installation Check:

Before installation, verify that the dimensions of your toilet bowl are compatible with the Cantica toilet seat.

Refer to the technical drawing below for detailed measurements.

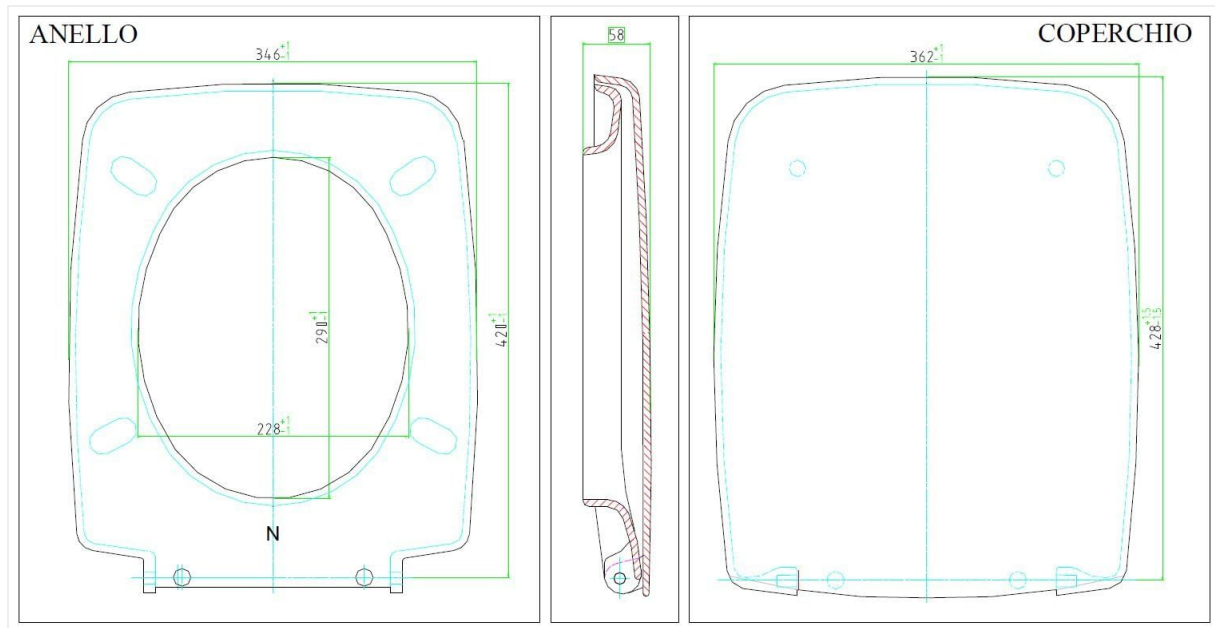


Image: Technical drawing illustrating the dimensions of the Cantica toilet seat and lid, including hinge spacing.

## Installation Steps:

1. **Remove Existing Seat:** If an old toilet seat is present, loosen the nuts beneath the toilet bowl (or quick-release mechanisms) and remove the old seat and hinges. Clean the area thoroughly.
2. **Position Hinges:** Place the new metal hinges into the mounting holes on the toilet bowl. Ensure the hinge posts are aligned correctly.
3. **Secure Hinges:** From underneath the toilet bowl, attach the washers and nuts to the hinge posts. Hand-tighten initially.
4. **Attach Toilet Seat:** Align the toilet seat with the hinge posts and press down firmly until it clicks into place.
5. **Adjust Alignment:** With the seat attached, adjust the position of the hinges to ensure the seat is centered and aligned with the toilet bowl.
6. **Final Tightening:** Once aligned, fully tighten the nuts beneath the toilet bowl using an adjustable wrench or pliers. Do not overtighten, as this may damage the toilet bowl or hinges.



Image: Close-up view of the metal hinge mechanism, showing how it connects to the toilet bowl.

The Ideal Standard Cantica toilet seat is designed for straightforward use. Simply lift the seat and lid manually when required and lower them gently after use.

**Note: This model does not feature a soft-closing mechanism. Exercise care when lowering the seat and lid to prevent damage or injury.**



Image: Side view of the Cantica toilet seat, illustrating its profile when open.

## MAINTENANCE

### Cleaning:

- Clean the toilet seat regularly with mild soap and warm water.
- Use a soft cloth or sponge.
- **Avoid** abrasive cleaners, scouring pads, strong chemical detergents, or disinfectants containing chlorine or acids, as these can damage the duroplastic material and metal hinges.
- Rinse thoroughly with clean water and dry with a soft cloth.

### Hinge Care:

- Periodically check the tightness of the hinge fasteners. If the seat feels loose, re-tighten the nuts beneath the toilet bowl.

- If hinges become stiff or squeak, apply a small amount of silicone-based lubricant to the moving parts.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
Toilet seat is loose or wobbly.	Hinge fasteners are not sufficiently tightened.	Tighten the nuts beneath the toilet bowl that secure the hinges.
Hinges are stiff or making noise (squeaking).	Lack of lubrication or minor debris.	Clean hinges and apply a small amount of silicone-based lubricant to moving parts.
Seat does not align properly with the toilet bowl.	Hinges are not correctly positioned.	Slightly loosen the hinge fasteners, adjust the seat position, then re-tighten the fasteners.

## SPECIFICATIONS

Feature	Detail
Brand	Ideal Standard
Model Number	T629901
Material	Duroplastic
Color	White
Style	Without Soft-closing
Shape	Rectangular
Product Dimensions (L x W)	44 cm x 36.5 cm
Weight	2.7 Kilograms
Included Components	Cantica toilet seat, metal hinges

## WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact Ideal Standard customer service directly. Refer to the official Ideal Standard website or your purchase documentation for contact details.