

ELECOM M-XT4DRBK

ELECOM EX-G M-XT4DRBK Left-Handed Wireless Trackball Mouse User Manual

Model: M-XT4DRBK

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. SETUP

1.1 Package Contents

Verify that the following items are included in your package:

- ELECOM EX-G Left-Handed Wireless Trackball Mouse
- USB Receiver
- AA Battery
- Japanese Manual (English manual available online)

Whats in the box



*English manual is available in amazon product page "Product guides and documents" and ELECOM USA site

Image: The package contents, including the trackball mouse, USB receiver, and an AA battery.

1.2 Battery Installation

1. Locate the battery compartment on the underside of the trackball mouse.
2. Open the battery compartment cover.
3. Insert the provided AA battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

1.3 USB Receiver Connection

1. Remove the USB receiver from its storage slot on the underside of the mouse.
2. Insert the USB receiver into an available USB port on your computer.
3. Turn on the trackball mouse using the power switch located on the underside.
4. Your computer should automatically detect and install the necessary drivers.



Image: The ELECOM EX-G trackball mouse shown with its compact USB receiver, ready for connection.

1.4 Software Installation (ELECOM Mouse Assistant)

For full customization of the programmable buttons and advanced features, install the ELECOM Mouse Assistant software.

1. Visit the official ELECOM US website.
2. Navigate to the 'Support' or 'Downloads' section and locate 'Mouse Assistant'.
3. Download the appropriate version for your operating system (Windows or macOS).
4. Run the installer and follow the on-screen instructions. Ensure to select English during installation if prompted.

EX-G
TRACKBALL

ELECOM

**GET SPEED,
GET ACCURATE**

new innovations in technology



Image: A screenshot illustrating the ELECOM website's Mouse Assistant download page, showing options for Windows and Mac.

TRACKBALL FOR ALL LEFT HANDED USERS

Trackball solves the problems of left-handed



Image: A composite image showing the process of saving the Mouse Assistant installer and its icon appearing in the system tray after installation.

2. OPERATION

2.1 Basic Functions

The ELECOM EX-G trackball mouse is designed for left-handed users, offering an ergonomic shape for comfortable use.



Left-Handed Trackball Mouse solves the problems of left-handed

Image: A left hand positioned on the ELECOM EX-G trackball mouse, demonstrating its left-handed design.

Ergonomic Design

supports hand in a natural angled position for all day comfort



Image: A hand resting comfortably on the ELECOM EX-G trackball mouse, highlighting its ergonomic shape that supports a natural angled position.

- **Trackball:** Use your thumb to control the cursor movement.
- **Left/Right Click:** Standard mouse button functions.
- **Scroll Wheel:** Scroll vertically through documents and web pages. The scroll wheel also offers tilt functionality for horizontal scrolling.

2.2 Programmable Buttons

The mouse features 6 physical buttons and tilt scroll functionality, providing a total of 8 customizable functions. These can be configured using the ELECOM Mouse Assistant software.

6 Buttons & Tilt Scrol

total 8 customizable function
with the Mouse Assistant software



Image: An overhead view of the ELECOM EX-G trackball mouse with white circles indicating the positions of its 6 physical buttons and arrows for the tilt scroll function.

2.3 DPI Adjustment

The DPI (Dots Per Inch) button allows you to switch between two cursor speed settings: 750 DPI (Low) and 1500 DPI (High). This enables precise control for various tasks.

Adjustable DPI Levels

switch 2 levels low 750/1500



Image: A close-up view of the ELECOM EX-G trackball mouse, highlighting the red 'HIGH' button which functions as the DPI switch.

2.4 Software Customization

The ELECOM Mouse Assistant software provides extensive options for customizing button assignments, pointer speed, and other settings.

ERGONOMIC DESIGN FOR COMFORT

support left hand in natural angled position for aall day comfort



Image: A screenshot of the ELECOM Mouse Assistant software interface, showing options for customizing button functions, pointer speed, and horizontal scrolling speed.

3. MAINTENANCE

3.1 Cleaning the Trackball

Regular cleaning of the trackball and its bearings ensures smooth and accurate cursor movement.

1. Turn off the trackball mouse.
2. Locate the ball removal hole on the underside of the mouse.
3. Gently push the trackball out through this hole.
4. Wipe the trackball with a soft, lint-free cloth.
5. Clean the three artificial ruby ball bearings inside the trackball cavity with a cotton swab or a soft cloth to remove any dust or debris.
6. Reinsert the trackball into the mouse.

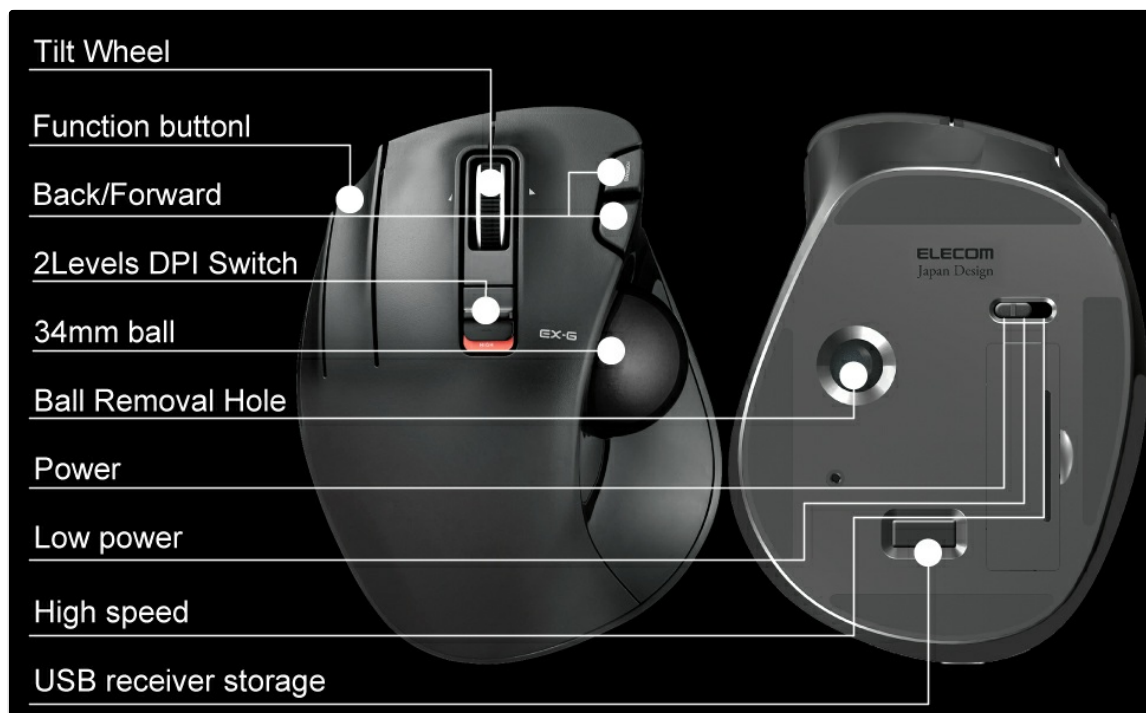


Image: A detailed diagram of the ELECOM EX-G trackball mouse, labeling various components including the 'Ball Removal Hole' on the underside.

4. TROUBLESHOOTING

4.1 Cursor Not Moving or Erratic

- **Check Battery:** Ensure the AA battery is correctly installed and has sufficient charge. Replace if necessary.
- **Check USB Receiver:** Verify the USB receiver is securely plugged into a working USB port. Try a different port.
- **Clean Trackball:** Dust or debris on the trackball or bearings can affect performance. Refer to Section 3.1 for cleaning instructions.
- **Interference:** Move the mouse closer to the USB receiver or away from other wireless devices that might cause interference.

4.2 Buttons Not Responding

- **Software Check:** If using custom button assignments, ensure the ELECOM Mouse Assistant software is running and configured correctly.
- **Reinstall Software:** If issues persist with custom functions, try uninstalling and reinstalling the Mouse Assistant software.

4.3 Mouse Assistant Software in Japanese

- During installation, ensure you select the English language option.
- If already installed, check the software settings for a language option. If not available, uninstall the software, restart your computer, and reinstall, carefully selecting English.

5. SPECIFICATIONS

Feature	Detail
Model Number	M-XT4DRBK
Connectivity	2.4 GHz Wireless (USB Receiver)
Movement Detection Technology	Optical
DPI Settings	750 / 1500 count (switchable)
Buttons	6 physical buttons + Tilt Scroll (8 programmable functions)
Trackball Diameter	2.5 mm artificial ruby support spheres
Dimensions (W x L x H)	3.7" x 4.9" x 1.9" (94.7mm x 124.4mm x 47.7mm)
Weight	5.3 oz (without battery) / 4.5 oz (item weight listed)
Power Source	1 x AA battery (included)
System Requirements	Windows 8.1, Windows RT8.1, Windows 10, Windows 11, macOS 10.10 and later (Horizontal scrolling not supported on Windows RT8.1)

Dimension



Image: A diagram illustrating the dimensions of the ELECOM EX-G trackball mouse, showing its width, length, and height.

6. WARRANTY AND SUPPORT

6.1 Warranty Information

ELECOM products are designed for reliability and performance. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official ELECOM website.





6.2 Customer Support


For further assistance, technical support, or to download the latest version of the ELECOM Mouse Assistant software, please visit the official ELECOM US website:

[ELECOM US Official Website](#)

You may also find additional resources and FAQs on the product page where you purchased the item.

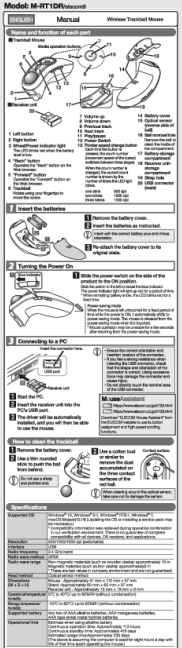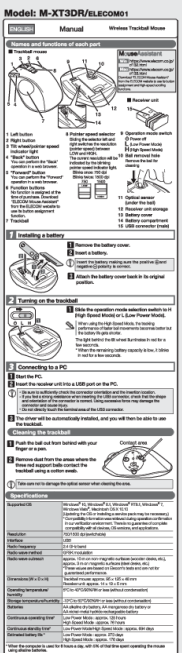Related Documents - M-XT4DRBK

	<p>ELECOM M-RT1DR Wireless Trackball Mouse User Manual and Specifications</p> <p>Comprehensive user manual for the ELECOM M-RT1DR Wireless Trackball Mouse, detailing setup, operation, cleaning procedures, and technical specifications for optimal use.</p>
	<p>ELECOM M-XT3DR Wireless Trackball Mouse User Manual</p> <p>User manual for the ELECOM M-XT3DR wireless trackball mouse. Provides detailed instructions on installation, operation, connecting to a PC, cleaning, and technical specifications. Includes information on the MouseAssistant software.</p>
	<p>ELECOM M-MT1BR Trackball Mouse - User Manual and Specifications</p> <p>Comprehensive user manual and technical specifications for the ELECOM M-MT1BR Trackball Mouse, covering setup, pairing, cleaning, safety precautions, and compliance information.</p>
	<p>ELECOM M-XT2DR Wireless Trackball Mouse User Manual</p> <p>Comprehensive user manual for the ELECOM M-XT2DR wireless trackball mouse. This guide provides detailed information on part identification, setup, operation, maintenance, and technical specifications, supporting multiple languages.</p>

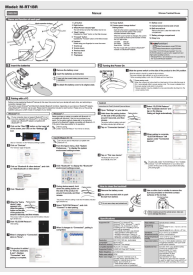

[Elecom M-RT1BRXBK Handheld Trackball Mouse User Guide](#)

Instructions and specifications for the Elecom M-RT1BRXBK Handheld Trackball Mouse, including battery insertion, power switch operation, and software features.



[ELECOM M-XT2UR/XT2UR Wired Trackball Mouse User Manual](#)

Comprehensive guide to the ELECOM M-XT2UR/XT2UR Wired Trackball Mouse, covering part identification, usage, cleaning, specifications, safety precautions, and compliance information.