

## OttLite A59G5B-FFP

# OttLite LED FlexNeck Table Lamp with USB Charging Port (Model A59G5B-FFP) Instruction Manual

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your OttLite LED FlexNeck Table Lamp. Please read these instructions thoroughly before use and retain them for future reference.

The OttLite LED FlexNeck Table Lamp is designed to provide natural daylight illumination, featuring a flexible neck for adjustable lighting, three brightness settings, and a convenient USB charging port.

## 2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main components of your OttLite LED FlexNeck Table Lamp:

- **LED Light Head:** Emits natural daylight LEDs.
- **Flexible Neck:** Allows for precise positioning of the light.
- **Touch Control:** Located on the base for power and brightness adjustments.
- **USB Charging Port:** Integrated into the base for charging compatible devices.
- **Stable Base:** Provides support for the lamp.



**Natural Daylight LEDs**  
3 Brightness Levels

**Flexible  
Neck**

**USB  
Port**

**Touch  
Control**



**USB Charging Port**

Image 2.1: Labeled diagram of the OttLite LED FlexNeck Table Lamp components.

### 3. SETUP

Follow these steps to set up your lamp:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the lamp base on a stable, flat surface. Ensure the base diameter of 4.75 inches (11.6 cm) is fully supported.
3. **Connect Power:** Insert the included A/C adapter into the power port on the lamp base, then plug the adapter into a standard 120-volt electrical outlet.



Image 3.1: Lamp dimensions and height adjustment range.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power and Brightness Control

The lamp features a touch-sensitive control button on its base:

- **Power On/Off:** Lightly touch the control button to turn the lamp on or off.
- **Brightness Settings:** The lamp has three brightness levels. Each subsequent touch of the control button will cycle through the brightness settings (Low, Medium, High) before turning off.

### 4.2 Flexible Neck Adjustment

The flexible neck allows you to direct the light precisely where needed. Gently bend and position the neck to achieve your desired lighting angle and height. The lamp's height can adjust from 11 inches (27.9 cm) to 26.8 inches

(68.3 cm).

### 4.3 USB Charging Port

A USB charging port is located on the lamp's base. Connect your mobile device's USB charging cable to this port to charge your device. The USB port provides 5V, 2.1A output.



**Flexible neck**  
provides a wide range  
of lighting options

**Touch Sensitive Control** allows you to  
choose between **3 Brightness Settings**

Image 4.1: Detail of the touch-sensitive control and flexible neck.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your lamp:

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Use a soft, dry cloth to wipe the lamp. Avoid abrasive cleaners or solvents.
- **LEDs:** The integrated LEDs are designed for long life (up to 40,000 hours) and are not user-replaceable.
- **Storage:** If storing the lamp, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

## 6. TROUBLESHOOTING

If you encounter issues with your OttLite LED FlexNeck Table Lamp, refer to the following common solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power connection.	Ensure the A/C adapter is securely plugged into both the lamp and a working electrical outlet. Test the outlet with another device.
USB port is not charging devices.	Device not compatible or cable issue.	Verify your device is compatible with 5V, 2.1A USB charging. Try a different USB cable. Ensure the lamp is powered on.
Lamp flickers or light is inconsistent.	Loose connection or power fluctuation.	Check all power connections. Try plugging the lamp into a different outlet.
Lamp base feels unstable.	Uneven surface or improper placement.	Ensure the lamp is placed on a completely flat and stable surface. Avoid extending the flexible neck too far horizontally without proper counter-balance.

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	A59G5B-FFP
Brand	OttLite
Lamp Type	Desk Lamp
Light Source Type	LED
Light Output Maximum	300 Lumens
Brightness Settings	3 (Touch-controlled)
Flexible Neck Height Adjustment	11 to 26.8 inches (27.9 cm to 68.3 cm)
Base Diameter	4.75 inches (11.6 cm)
USB Charging Port Output	5V, 2.1A
Power Source	Corded Electric
Wattage	10 watts
Voltage	120 Volts
Product Dimensions (D x W x H)	10"D x 4.63"W x 16.25"H

Feature	Detail
Item Weight	2.94 pounds
Base Material	Rubber
Certification	UL Listed
UPC	761712010991

## 8. WARRANTY INFORMATION

OttLite provides a warranty for its products. Warranty coverage for OttLite lamps and accessories (excluding batteries) is for 2 years from the date of purchase. OttLite bulbs are covered for 1 year from the date of purchase. This warranty does not cover damages resulting from the use of the product for any purpose other than its intended use. Additionally, warranty coverage excludes OttLite items purchased "as is" or from unauthorized retailers.

## 9. SUPPORT INFORMATION



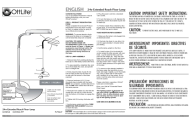
For further assistance, product inquiries, or warranty claims, please visit the official OttLite website or contact their customer support directly. Refer to the product packaging or the OttLite website for the most current contact information.



© 2024 OttLite. All rights reserved.

### Related Documents - A59G5B-FFP

	<p><a href="#">OttLite LED Desk Lamp with Color Changing Tunnel - User Manual</a></p> <p>Comprehensive instructions and safety guidelines for the OttLite LED Desk Lamp with Color Changing Tunnel (models CY4G59-FFP, CY4009-FFP). Learn how to operate the lamp's touch controls, adjust brightness and color modes, use the color-changing tunnel, and understand important safety precautions.</p>
	<p><a href="#">OttLite LED Modern Crane Lamp User Manual and Safety Information</a></p> <p>User manual and safety instructions for the OttLite LED Modern Crane Lamp. Includes assembly steps, operation guidelines, safety warnings, and FCC Part 15 compliance information. Model numbers: T57G5Z, T5751Z, T57G5B-FFP, T5751B-FFP.</p>
	<p><a href="#">OttLite Soft Touch Flex LED Lamp User Manual and Safety Information</a></p> <p>Comprehensive guide for the OttLite Soft Touch Flex LED Lamp, including assembly, operation, safety warnings, and FCC compliance information. Covers models D59PNC, D5900C, D5980C, D5900B, D59PNB, D59CPC, D5900B-FFP, D59PNB-FFP.</p>

	<p><a href="#"><u>OttLite LED Desk Lamp with Color Changing Base User Manual and Instructions</u></a></p> <p>User manual and instructions for the OttLite LED Desk Lamp with Color Changing Base, detailing setup, operation, safety warnings, and FCC compliance. Includes model numbers BY2G5B, BY200B, BY2G59, BY2G59-FFP, BY200B-FFP.</p>
	<p><a href="#"><u>OttLite Wireless Charging LED Table Lamp CS4QTK1Z - User Manual &amp; Specifications</u></a></p> <p>User manual and specifications for the OttLite Wireless Charging LED Table Lamp (Model CS4QTK1Z). Features include setup instructions, brightness and color mode adjustments, wireless Qi charging, USB output, safety warnings, and FCC/IC compliance information.</p>
	<p><a href="#"><u>OttLite 24w Extended Reach Floor Lamp Assembly and Safety Instructions</u></a></p> <p>Comprehensive user manual for the OttLite 24w Extended Reach Floor Lamp (Model 823WG4). This document provides detailed assembly instructions, critical safety warnings, product registration guidance, and tube replacement procedures. It includes textual descriptions of diagrams and merges multilingual content into clear English instructions.</p>