



[Manuals.plus](#) /

› [Ellia](#) /

› [Ellia Blossom Aroma Diffuser Grey ARM-510GY User Manual](#)

## Ellia ARM-510GY

# Ellia Blossom Aroma Diffuser User Manual

Model: ARM-510GY

### INTRODUCTION

The Ellia Blossom Aroma Diffuser is designed to enhance your environment through aromatherapy. Crafted from ceramic and wood, this diffuser provides a gentle mist and optional color-changing light to create a calming atmosphere. This manual provides essential information for safe and effective use of your diffuser.



Image: The Ellia Blossom Aroma Diffuser in grey, featuring its ceramic body and wooden base.

## **SAFETY INFORMATION**

Please read and follow all safety instructions before using the diffuser to prevent injury or damage.

- Always unplug the diffuser when not in use.
- Do not leave the diffuser unattended while in operation.
- Keep the diffuser and essential oils out of reach of children and pets.
- Avoid direct skin contact with essential oils. If irritation occurs, discontinue use and seek medical attention.
- Ensure proper ventilation during use.
- Do not exceed the maximum fill line for water in the reservoir.

- Use only the provided AC adapter.

## PACKAGE CONTENTS

Verify that all items are present in the box:

- Ellia Blossom Aromatherapy Diffuser (Outer Cover, Inner Cover, Diffuser Base)
- Remote Control
- AC Adapter

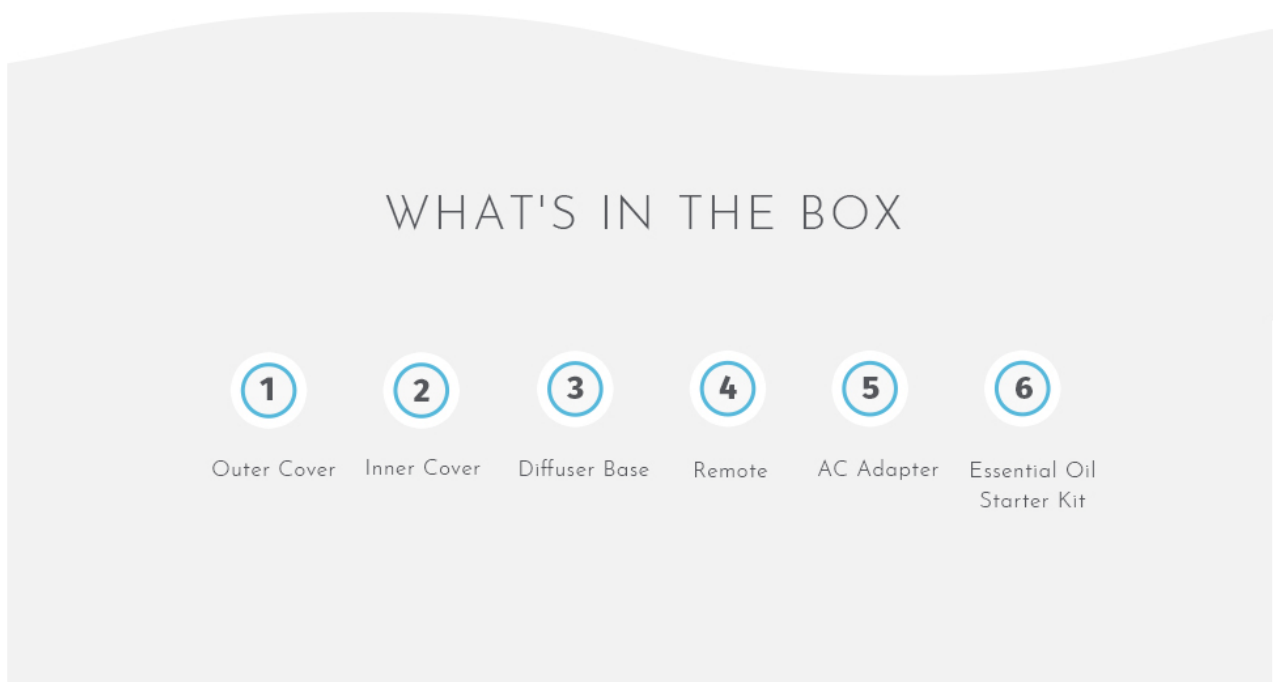


Image: A visual representation of the Ellia Blossom Diffuser's components, including the outer cover, inner cover, diffuser base, remote, and AC adapter.

## SETUP INSTRUCTIONS

Follow these steps to set up your Ellia Blossom Aroma Diffuser:

1. Place the diffuser on a flat, stable surface.
2. Remove the outer ceramic cover from the diffuser base.
3. Remove the inner plastic cover.
4. Pour clean tap water into the reservoir until it reaches the maximum fill line. Do not overfill.
5. Add 5-7 drops of your preferred essential oil directly into the water. Adjust quantity based on desired aroma intensity.
6. Replace the inner plastic cover, ensuring it is seated correctly.
7. Place the outer ceramic cover back onto the base.
8. Connect the AC adapter to the diffuser's power input, then plug the adapter into a standard electrical outlet.



## STYLISH DESIGN

Add a touch of **sophisticated functionality** to your living room, office, or bedroom



Image: A diagram illustrating the ultrasonic operation, including easy-fill reservoir, programmed controls, and color-changing light features.

### OPERATING INSTRUCTIONS

Once set up, operate your diffuser using the controls on the base or the remote control:

- **Power Button:** Press once to turn on continuous mist. Press again for intermittent mist (30 seconds on, 30 seconds off). Press a third time to turn off the mist.
- **Light Button:** Press to cycle through color-changing light modes or pause on a specific color. Press again to turn off the light.
- The diffuser will automatically shut off when the water reservoir is empty.
- The diffuser can run for up to 6 hours continuously or 12 hours intermittently.



## PERSONALIZED AROMATHERAPY

Mix and match fragrances to create a **one-of-a-kind aroma** for up to **6 hours of continuous runtime**

Image: A woman relaxing with the Ellia Blossom Diffuser, illustrating personalized aromatherapy and continuous runtime.

### **MAINTENANCE**

Regular cleaning ensures optimal performance and extends the life of your diffuser:

1. Always unplug the diffuser before cleaning.
2. Remove the outer and inner covers.
3. Empty any remaining water from the reservoir.
4. Use a damp, soft cloth to wipe the surface of the diffuser and the inside of the reservoir.
5. For thorough cleaning, especially if essential oil residue is present, gently wipe the ultrasonic membrane (the small disc at the bottom of the reservoir) with a cotton swab dipped in white vinegar. Rinse with clean water.
6. Do not use harsh chemicals or abrasive cleaners.
7. It is recommended to clean the reservoir and membrane at least once every 2-3 weeks, depending on usage.

## ULTRASONIC OPERATION



Easy-Fill Reservoir



Programmed Controls



Color-Changing Light



Image: The Ellia Blossom Diffuser with a close-up of its top opening, highlighting its stylish design and mist outlet, relevant for cleaning.

## TROUBLESHOOTING

If you encounter issues with your diffuser, refer to the following common problems and solutions:

### • No Mist Production:

- Ensure the water level is between the minimum and maximum fill lines.
- Check that the inner and outer covers are correctly seated.
- Verify the AC adapter is securely plugged into both the diffuser and the power outlet.
- Clean the ultrasonic membrane as described in the Maintenance section. Mineral buildup can obstruct mist production.

### • Weak Mist:

- The water level might be too low or too high. Adjust to the recommended level.
- Clean the ultrasonic membrane.
- Ensure the room temperature is not excessively cold, which can affect mist visibility.

### • Diffuser Leaks:

- Do not overfill the water reservoir.
- Ensure the covers are properly aligned and sealed.
- Place the diffuser on a flat, stable surface to prevent tipping.

### • Power Button Stuck or Unresponsive:

- Unplug the unit and gently press the button several times to dislodge any debris.
- If the issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	ARM-510GY
Dimensions	10.83 x 6.18 x 6.1 inches
Weight	2.03 Pounds
Material	Ceramic
Water Reservoir Capacity	130 ML
Runtime (Continuous)	Up to 6 hours
Runtime (Intermittent)	Up to 12 hours
Automatic Shut-off	Yes, when water is low
Special Feature	Corded, Color-changing light

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Ellia website. Ellia products are manufactured by HoMedics.

You can also visit the [Ellia Store on Amazon](#) for more product information and support resources.