

- Manuals.plus /
- › OttLite /
 - › OttLite 5-Inch LED Magnifier with Clip and Stand Instruction Manual

OttLite MG016INT5

OttLite 5-Inch LED Magnifier with Clip and Stand

Model: MG016INT5 | Brand: OttLite

1. INTRODUCTION


The OttLite 5-Inch LED Magnifier with Clip and Stand is a versatile tool designed to provide clear, illuminated magnification for various detailed tasks. Its dual functionality allows it to be used as a stable desk magnifier with its weighted stand or as a portable clip-on magnifier for attachment to work surfaces. This manual provides essential information for the proper setup, operation, and maintenance of your magnifier.



Image: The OttLite 5-Inch LED Magnifier shown with both its weighted stand and the detachable clip, illustrating its versatile design.

2. PRODUCT FEATURES

- **Optical Grade Magnifier:** Features a 5-inch rimless lens with 2x magnification and a powerful 5x spot viewer for intricate details.
- **Flexible Arm:** Allows for easy and precise positioning of the magnifier and light over your work area.
- **Portable Clip-On Base:** A sturdy clip-on base enables attachment to most work surfaces for hands-free use.
- **Weighted Stand:** Provides a stable base for tabletop use, converting the magnifier into a desk lamp.
- **Long-Lasting LED Light:** Integrated LED illumination designed for up to 50,000 hours of use, providing 10 lumens of light.
- **Batteries Included:** Comes with four LR1130 batteries for immediate use.
- **Natural Daylight Illumination:** OttLite's unique technology provides illumination that shows colors and details accurately, reducing glare and eye strain.

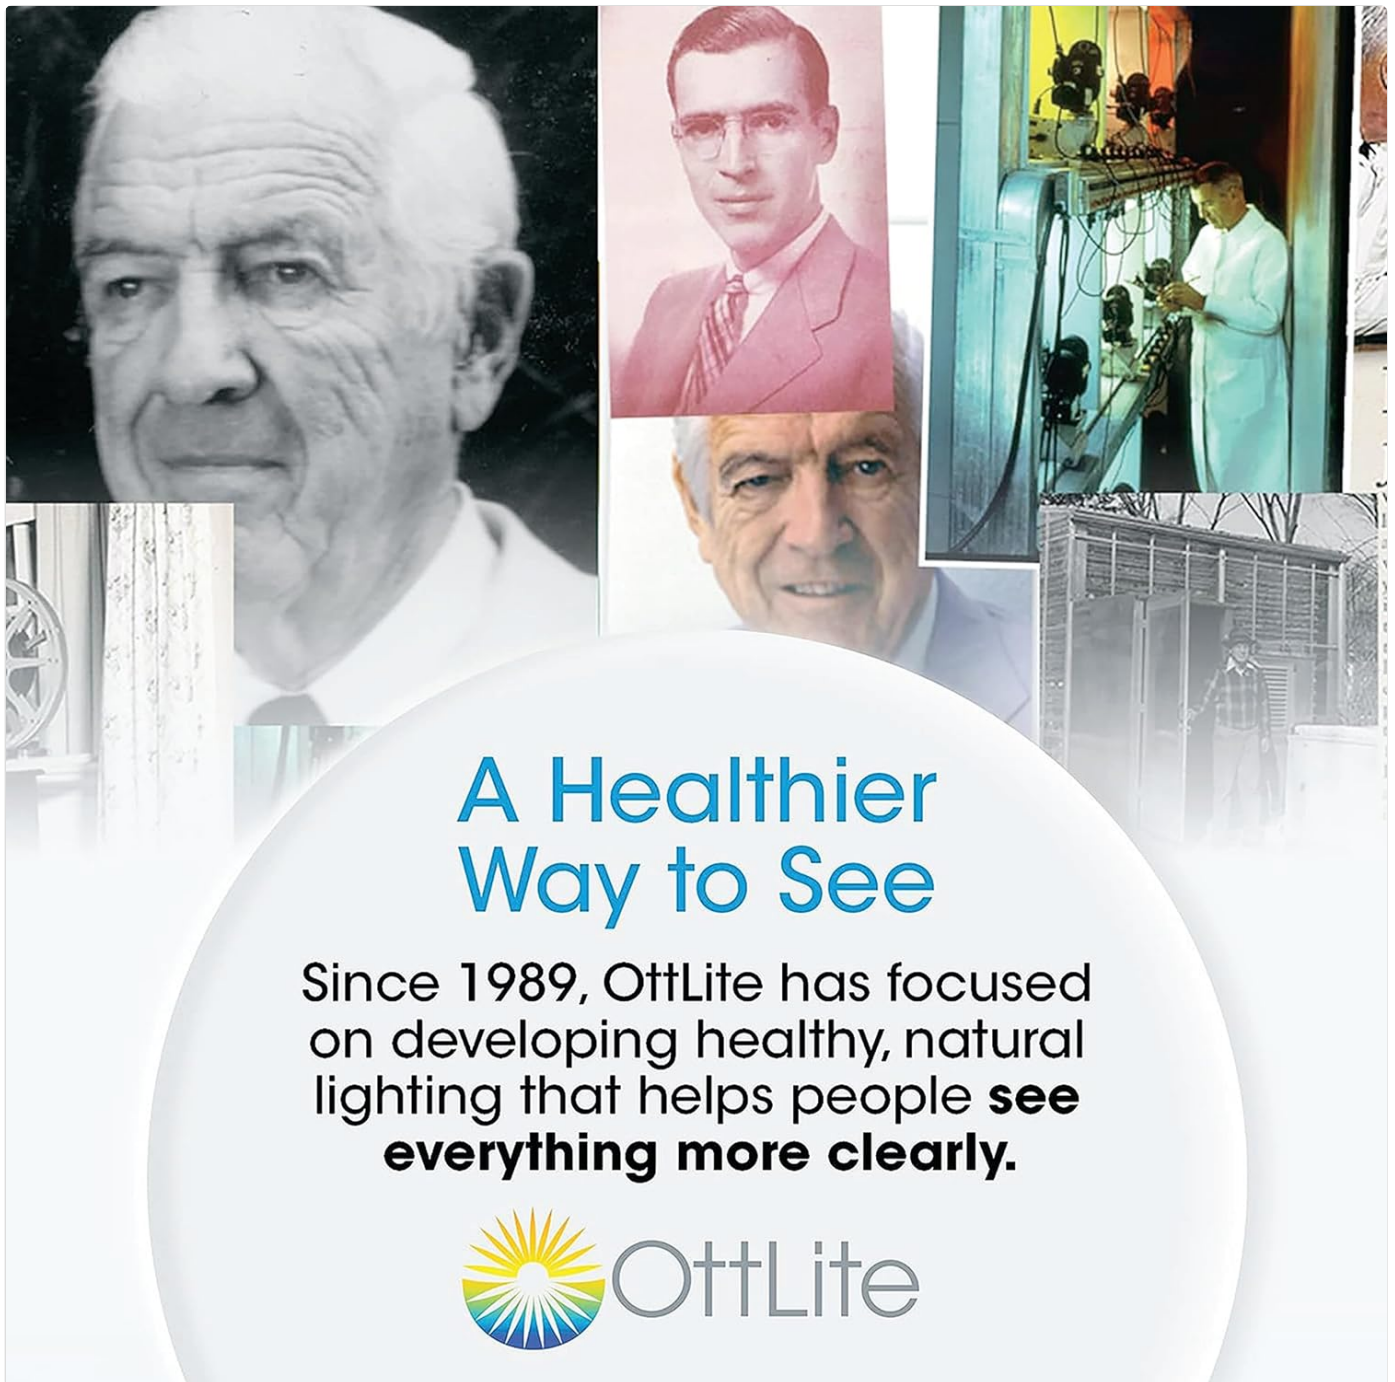

A Healthier Way to See

Since 1989, OttLite has focused on developing healthy, natural lighting that helps people **see everything more clearly.**



Image: A close-up view of the magnifier's optical-grade lens and the integrated LED light, highlighting the rimless design.

3. SETUP

1. **Battery Installation:** Locate the battery compartment on the magnifier head. Open the compartment and insert four LR1130 batteries, ensuring the correct polarity (+/-) as indicated inside the compartment. Close the compartment securely.
2. **Attaching the Clip:** To use the magnifier with the clip, slide the flexible arm's base into the opening on the clip attachment until it clicks into place. Securely attach the clip to a stable surface, such as a desk edge or a craft hoop.
3. **Using the Stand:** To use the magnifier with the weighted stand, slide the flexible arm's base into the opening on the stand attachment until it clicks into place. Place the stand on a flat, stable surface.



Image: The magnifier attached to its clip base, ready for clamping onto a surface.



Image: The magnifier positioned on its weighted stand, suitable for desk use.

4. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button located on the top of the magnifier head to turn the LED light on or off.
2. **Positioning:** Gently bend and adjust the flexible arm to position the magnifier lens directly over your work area. The flexible arm allows for precise angle and height adjustments to achieve optimal viewing and illumination.
3. **Using the Magnifier:** Place the object you wish to magnify under the lens. For the 5x spot viewer, move the object to the smaller, more powerful magnification area within the main lens.



Image: The magnifier clipped to a drawing pad, demonstrating its use for detailed crafting activities.

5. MAINTENANCE

- **Cleaning the Lens:** To clean the magnifier lens, gently wipe it with a soft, lint-free cloth. For stubborn smudges, a small amount of lens cleaning solution can be applied to the cloth, not directly to the lens. Avoid using abrasive cleaners or solvents, as they may damage the lens.
- **Cleaning the Body:** Wipe the body of the magnifier and stand/clip with a soft, damp cloth. Do not immerse any part of the unit in water.
- **Battery Replacement:** When the LED light begins to dim, it is time to replace the batteries. Follow the battery installation steps in the Setup section. Always replace all four LR1130 batteries at the same time. Dispose of old batteries according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
LED light does not turn on.	Batteries are depleted or incorrectly installed.	Check if the LR1130 batteries are correctly installed with the proper polarity. Replace all four batteries if they are depleted.
Magnifier is unstable or tips over.	Clip is not securely fastened or stand is on an uneven surface.	Ensure the clip is securely fastened to a stable surface. If using the stand, place it on a flat, level surface.

Problem	Possible Cause	Solution
Magnification is blurry or unclear.	Lens is dirty or object is out of focus.	Clean the lens as described in the Maintenance section. Adjust the distance between the lens and the object until it is clear.

7. SPECIFICATIONS

Feature	Detail
Model Number	MG016INT5
Magnification Strength	2x (main lens), 5x (spot viewer)
Lens Diameter	5 inches
Lens Material	Acrylic
Light Source	LED
Lumen Output	10 lumens
Power Source	4 x LR1130 batteries (included)
Product Dimensions	4"L x 9"W (dimensions may vary slightly based on configuration)
Item Weight	1.3 pounds

8. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or to contact customer support, please visit the official OttLite website or refer to the documentation included with your purchase. OttLite is committed to providing quality products and assistance.

You can find more information and support at the [OttLite Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01N3ZGEVA>

More documents and user manuals: **<https://manuals.plus/>**