

Perixx PERIBOARD-317

Perixx PERIBOARD-317 Wired Backlit USB Keyboard User Manual

Model: PERIBOARD-317

1. INTRODUCTION

The Perixx PERIBOARD-317 is a wired, full-size illuminated keyboard designed for ease of use and durability. Its one-piece construction makes it a cost-effective and robust solution for various applications, including office and studio environments. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your keyboard.

2. KEY FEATURES

- **White LED Backlight:** Features bright and evenly distributed backlit keys, enabling easy typing in low-light conditions. The backlight can be toggled on and off.
- **Stylish Chiclet-Key Design:** The lighted chiclet design provides spacing between keys to minimize accidental presses. Large printed letters enhance visibility while typing.
- **Sleek Profile:** Low-profile keys with a larger surface area ensure responsive, quieter, and more accurate typing. High-quality ABS print prevents keycap color abrasion.
- **Durable Construction:** The durable membrane key switch offers a 5 million key press life cycle.
- **Plug-and-Play:** Wired USB interface allows for quick and easy installation. Includes a 1.6-meter long cable for flexible setup.
- **Compact Dimensions:** Slim keyboard with dimensions of 440x129x27mm.
- **Compatibility:** Compatible with Windows 98SE/2000/ME/XP/Vista/7/8/10/11.
- **Note on Scroll Lock:** When the backlight function is active, the Scroll Lock feature will be off. When the backlight function is off, the Scroll Lock feature will be on.

3. PACKAGE CONTENTS

Please ensure all items are present in the package:

- 1 x Perixx PERIBOARD-317 US Keyboard
- 1 x Keycap Puller

4. SETUP AND INSTALLATION

The Perixx PERIBOARD-317 keyboard is designed for simple plug-and-play installation.

1. **Connect the Keyboard:** Locate an available USB port on your computer. Insert the USB connector of the PERIBOARD-317 into the USB port.
2. **System Recognition:** Your operating system (Windows 98SE/2000/ME/XP/Vista/7/8/10/11) will automatically detect and install the necessary drivers. This process may take a few moments.
3. **Ready for Use:** Once the drivers are installed, the keyboard is ready for immediate use. No additional software is required.



Figure 4.1: The keyboard features a 1.6-meter (5.2 ft) long USB cable for easy plug-and-play connectivity.

5. OPERATING INSTRUCTIONS

5.1 Backlight Control

The PERIBOARD-317 features a white LED backlight for enhanced visibility in various lighting conditions.

- **Turning On/Off:** The backlight can be toggled on or off by pressing the **Scroll Lock** key.
- **Functionality Note:** Please be aware that when the backlight is active, the Scroll Lock feature itself will be disabled. Conversely, when the backlight is off, the Scroll Lock feature will be enabled.

White LED BACKLIT



Figure 5.1: The keyboard's white LED backlight provides clear visibility of keys.

**Easy to use
in darkness**

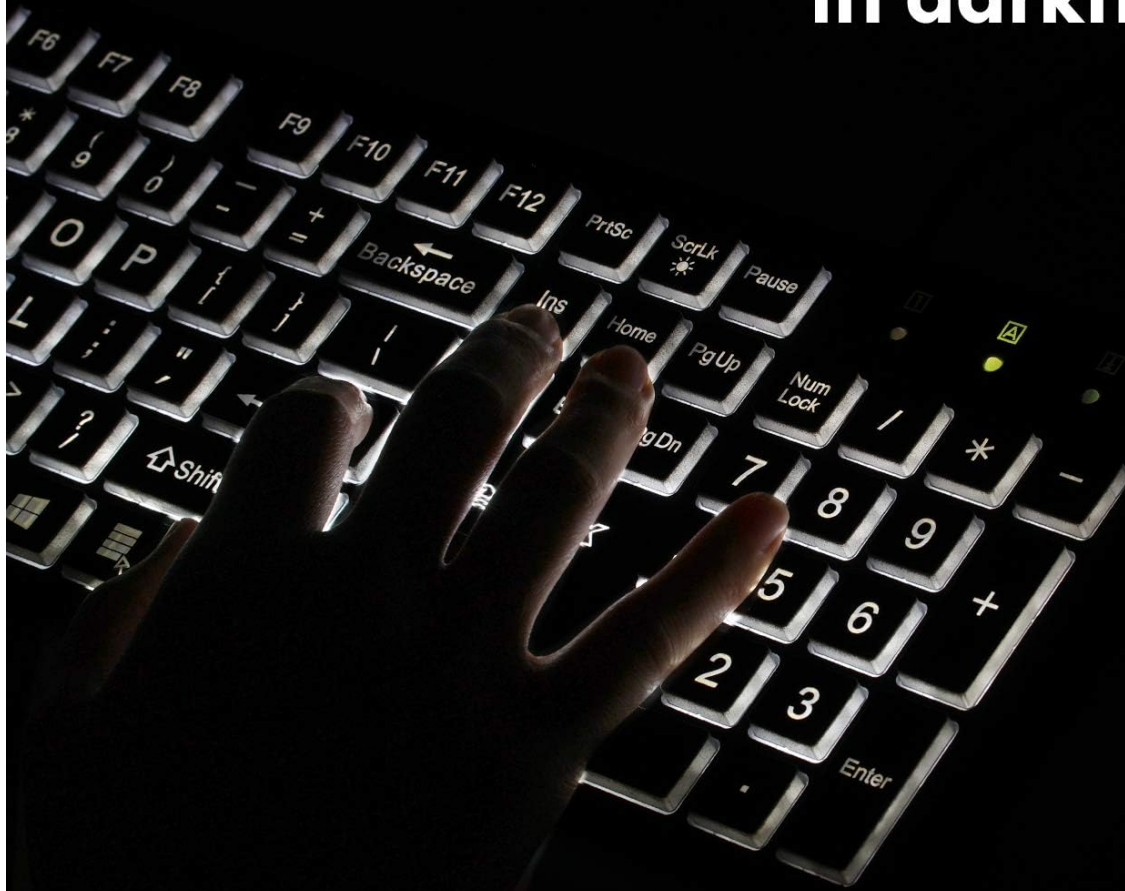


Figure 5.2: The backlight makes the keyboard easy to use even in darkness.

5.2 Typing Experience

The keyboard's chiclet-key design and large printed letters contribute to a comfortable and efficient typing experience.

BIG

Print Key



Figure 5.3: Large print on keys enhances readability and reduces eye strain.

Easy to spot large keys



Figure 5.4: The chiclet design with large keys makes them easy to spot and type on.



Figure 5.5: The keyboard's simplistic design integrates well into any workspace.

Video 5.1: Official product video showcasing the Perixx PERIBOARD-317 Illuminated Big Print Keyboard, highlighting its easy-to-read keys, stable connection, and suitability for work.

6. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Perixx PERIBOARD-317 keyboard, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the keycaps and keyboard surface. Avoid excessive moisture.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keys.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong chemicals, as these can damage the keyboard's finish and keycap legends.
- **Storage:** When not in use for extended periods, store the keyboard in a clean, dry environment away from direct

sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your Perixx PERIBOARD-317 keyboard, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Keyboard not responding	Loose USB connection, incorrect USB port, driver issue.	Ensure the USB cable is securely plugged into a working USB port. Try a different USB port. Restart your computer.
Backlight not turning on/off	Scroll Lock key not pressed, software conflict.	Press the Scroll Lock key to toggle the backlight. Ensure no other software is interfering with keyboard functions.
Keys are sticking or unresponsive	Debris under keys, wear and tear.	Use compressed air to clean under the keys. If the issue persists after extended use, the key switch may be worn.
Characters typed do not match key labels (e.g., @ and " are reversed)	Operating system language/keyboard layout mismatch.	Ensure your operating system's keyboard layout is set to "US English" or the correct regional layout for your keyboard.

8. SPECIFICATIONS

Feature	Detail
Model Number	PB-317US-11474
Product Dimensions	17.32 x 5.08 x 1.06 inches (440 x 129 x 27 mm)
Item Weight	1.15 pounds (0.52 kg)
Manufacturer	Perixx Computer GmbH
Language	English
Connectivity Technology	USB (Wired)
Keyboard Description	Membrane
Number of Keys	104
Keyboard Backlighting	White LED, Single Color
Compatible Devices	PC (Windows 98SE/2000/ME/XP/Vista/7/8/10/11)

9. WARRANTY AND SUPPORT

The Perixx PERIBOARD-317 comes with a **12-Month Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product meets its specified performance standards under normal use. For technical support, warranty claims, or further inquiries, please visit the official Perixx website or contact their customer service department. You can also find more information and products at the [Perixx Store on Amazon](#).

© 2024 Perixx Computer GmbH. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question