

[Manuals.plus](#) /

› [Ideal Standard](#) /

› Ideal Standard Connect Freedom Toilet Seat E8226 Instruction Manual

## Ideal Standard E8226

# Ideal Standard Connect Freedom Toilet Seat E8226

Instruction Manual

Brand: Ideal Standard | Model: E8226

### INTRODUCTION

Thank you for choosing the Ideal Standard Connect Freedom toilet seat, model E8226. This product is designed for comfort and durability, constructed from high-quality Duroplast and featuring robust stainless steel hinges. This manual provides essential information for the safe and correct installation, operation, and maintenance of your new toilet seat.



Image: Front view of the Ideal Standard Connect Freedom toilet seat.

## SETUP AND INSTALLATION

The Ideal Standard Connect Freedom toilet seat is designed for easy installation on compatible toilet bowls. Ensure you have the necessary tools before beginning.

### Tools Required:

- Adjustable wrench or screwdriver (depending on bolt type, not included)

### Installation Steps:

1. **1. Prepare the Toilet Bowl:** Ensure the toilet bowl's mounting surface is clean and dry. Remove any old toilet seat and hardware.
2. **2. Position the Seat:** Place the new Ideal Standard Connect Freedom toilet seat onto the toilet bowl, aligning the seat's hinge holes with the mounting holes on the ceramic.
3. **3. Secure the Hinges:** Insert the provided mounting bolts through the hinge holes and the toilet bowl holes. From underneath the toilet bowl, attach the washers and then the nuts to the bolts. Hand-tighten first.
4. **4. Adjust and Final Tighten:** Adjust the seat position to ensure it is centered and aligned with the bowl. Once satisfied, use an adjustable wrench or screwdriver to securely tighten the nuts. *Do not overtighten*, as this can damage the ceramic or the seat.
5. **5. Test Stability:** Gently test the seat for any wobbling. If unstable, re-adjust and tighten the bolts.



Image: Close-up view of the stainless steel hinge mechanism.

OPERATING INSTRUCTIONS

The Ideal Standard Connect Freedom toilet seat operates manually. Simply lift the lid and seat as required. Ensure the seat is fully lowered before use to prevent damage.

MAINTENANCE AND CARE

Proper care and maintenance will extend the life and appearance of your Ideal Standard Connect Freedom toilet seat.

Cleaning:

- Use a mild, non-abrasive soap solution and a soft, damp cloth for regular cleaning. Wipe dry with a clean cloth.
- Avoid using harsh chemical cleaners, abrasive powders, scouring pads, or disinfectants containing chlorine or acids, as these can damage the Duroplast material and stainless steel hinges.

Hinge Care:

- Periodically check the stainless steel hinges for tightness. If the seat feels loose, gently retighten the mounting bolts.
- If hinges become stiff or squeak, apply a small amount of silicone-based lubricant to the hinge pins.

TROUBLESHOOTING

| Problem                      | Possible Cause                     | Solution                                                                                                                        |
|------------------------------|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Seat is Wobbly               | Loose mounting bolts.              | Check and gently tighten the mounting bolts underneath the toilet bowl. Ensure the seat is correctly aligned before tightening. |
| Seat Does Not Close Properly | Obstruction or hinge misalignment. | Check for any obstructions between the seat and the toilet bowl rim. Inspect the hinges for damage or misalignment.             |

| Problem                 | Possible Cause                | Solution                                                                                                                                                      |
|-------------------------|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stains or Discoloration | Use of harsh cleaning agents. | Ensure you are using only mild, non-abrasive cleaners as recommended in the Maintenance section. Harsh chemicals can cause permanent damage or discoloration. |

SPECIFICATIONS

**Model:** E8226  
**Part Number:** E822601  
**Brand:** Ideal Standard  
**Material:** Duroplast  
**Hinges:** Stainless Steel  
**Color:** White  
**Operating Mode:** Manual  
**Included Components:** Toilet Seat  
**Country of Origin:** China  
**Global Trade Item Number (GTIN):** 05017830470991

Dimensions (Approximate):

**Width:** 350 mm  
**Length:** 425 mm  
**Hinge Spacing:** 155 mm  
**Seat Thickness (front):** 25 mm  
**Seat Thickness (back):** 35 mm

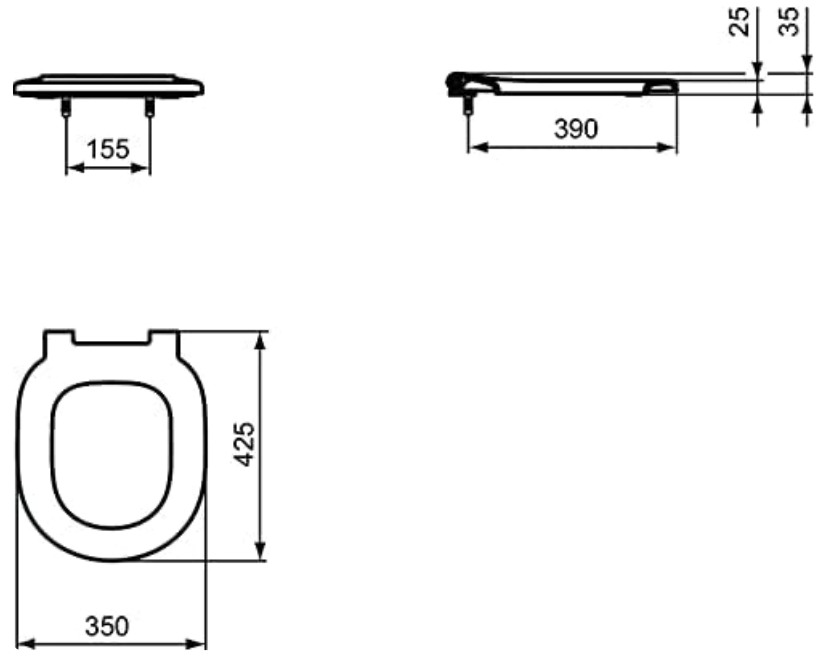


Image: Technical drawing showing key dimensions of the toilet seat.

WARRANTY INFORMATION

This product is covered by the standard manufacturer's warranty. For specific warranty terms and

conditions, please refer to the documentation provided with your purchase or contact Ideal Standard directly. Retailer return policies may also apply.

## SUPPORT

For technical assistance, spare parts, or further inquiries, please contact your retailer or visit the official Ideal Standard website. Please have your model number (E8226) and part number (E822601) available when contacting support.

You can find more information and contact details on the [Ideal Standard official website](#).