

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Schulte](#) /

› [Schulte Integrated Shower Cabin 120x80x204 cm with Right-Opening Sliding Door - User Manual](#)

Schulte 4060991009853

Schulte Integrated Shower Cabin 120x80x204 cm with Right-Opening Sliding Door - User Manual

Model: 4060991009853

1. INTRODUCTION

This user manual provides comprehensive instructions for the assembly, operation, and maintenance of your Schulte Integrated Shower Cabin. Please read this manual carefully before installation and use to ensure safe and efficient operation. Keep this manual for future reference.

Key Features

- Complete shower cabin kit including sliding shower door, fixed shower walls, shower tray, drainage system, and wall panels.
- Designed for easy assembly with detailed instructions and a practical clip system, eliminating the need for silicone.
- Generous rectangular shower space measuring 120 x 80 x 204 cm.
- Right-opening sliding door for convenient access.
- Equipped with a hand shower, shower column, and a small glass shelf for toiletries.
- Modern design featuring transparent 5mm safety glass, ergonomic chrome handles, and aluminum-silver profiles.
- Aqua green colored wall panels for a contemporary aesthetic.



Figure 1: Front view of the Schulte Integrated Shower Cabin, showcasing its modern design and right-opening sliding door.

2. SAFETY INSTRUCTIONS

Please observe the following safety precautions during installation and use of the shower cabin. Failure to do so may

result in injury or damage to the product.

- **Professional Installation Recommended:** While designed for easy assembly, professional installation is recommended for optimal safety and performance, especially for plumbing connections.
- **Handle Glass with Care:** The shower cabin features safety glass. Handle all glass panels with extreme care to prevent breakage and injury. Wear appropriate protective gloves.
- **Secure Mounting:** Ensure all components are securely mounted according to the instructions. Loose parts can cause instability and potential hazards.
- **Water Connections:** All water connections must be properly sealed to prevent leaks. Consult a qualified plumber if unsure.
- **Weight Distribution:** Do not apply excessive weight or force to the shower cabin structure, especially the glass panels or doors.
- **Children and Pets:** Keep children and pets away from the installation area during assembly.
- **Cleaning Agents:** Use only recommended cleaning agents. Abrasive cleaners can damage surfaces.

3. PACKAGE CONTENTS

Upon receiving your Schulte Integrated Shower Cabin, please verify that all components listed below are present and undamaged.

- 1 x Shower Cabin structure (profiles and glass panels)
- 1 x Shower Tray with integrated apron
- 1 x Drainage System
- 2 x Wall Panels (aqua green)
- 1 x Glass Shower Column with Hand Shower
- 1 x Mechanical Mixer
- 1 x Glass Shelf
- 1 x Mounting Kit and Accessories (screws, seals, etc.)
- 1 x Assembly Instructions Manual

4. SPECIFICATIONS

Feature	Detail
Model Number	4060991009853
Dimensions (L x W x H)	120 x 80 x 204 cm
Weight	106.7 kg
Glass Thickness	5 mm (Safety Glass)
Material	Glass, Aluminum
Color	Aluminum-Silver profiles, Aqua Green wall panels
Door Style	Sliding, Right-Opening

Feature	Detail
Assembly Required	Yes
Number of Doors	2
Number of Panels	3
Warranty	5 years (Product Warranty)



Figure 2: Dimensional overview of the Schulte Integrated Shower Cabin, showing height (204cm), width (120cm), and depth (80cm).

5. SETUP AND INSTALLATION

5.1. Before You Begin

- **Read the Manual:** Familiarize yourself with all steps before starting assembly.
- **Required Tools:** Gather all necessary tools (e.g., screwdriver, level, measuring tape, drill, protective gloves).
- **Personnel:** Assembly typically requires two people due to the size and weight of components, especially glass panels.
- **Location:** Ensure the installation area has a level floor and appropriate plumbing connections for water supply and drainage.
- **Clear Area:** Clear the installation area of any obstacles and ensure sufficient space for maneuvering components.

5.2. Assembly Steps (General Overview)

This section provides a general sequence of assembly. Refer to the detailed assembly instructions included in your package for specific diagrams and step-by-step guidance.

1. **Prepare the Shower Tray:** Position the shower tray in the desired location. Ensure it is level and stable. Connect the drainage system to the shower tray and the floor drain.
2. **Install Wall Panels:** Mount the two aqua green wall panels to the designated sides of the shower tray. Use the clip system for secure attachment.
3. **Assemble Frame:** Construct the aluminum-silver frame around the shower tray and wall panels. Ensure all profiles are correctly aligned and secured.
4. **Insert Fixed Glass Panels:** Carefully place the fixed glass panels into the frame channels.
5. **Install Sliding Door:** Mount the sliding shower door onto its runners. Ensure smooth operation and proper alignment for the right-opening mechanism.
6. **Install Shower Column:** Attach the glass shower column, including the hand shower, mechanical mixer, and glass shelf, to the designated wall panel. Connect the water supply lines to the mixer.
7. **Final Checks:** Verify all connections are tight, glass panels are secure, and the door operates correctly. Test for leaks by running water through the system.

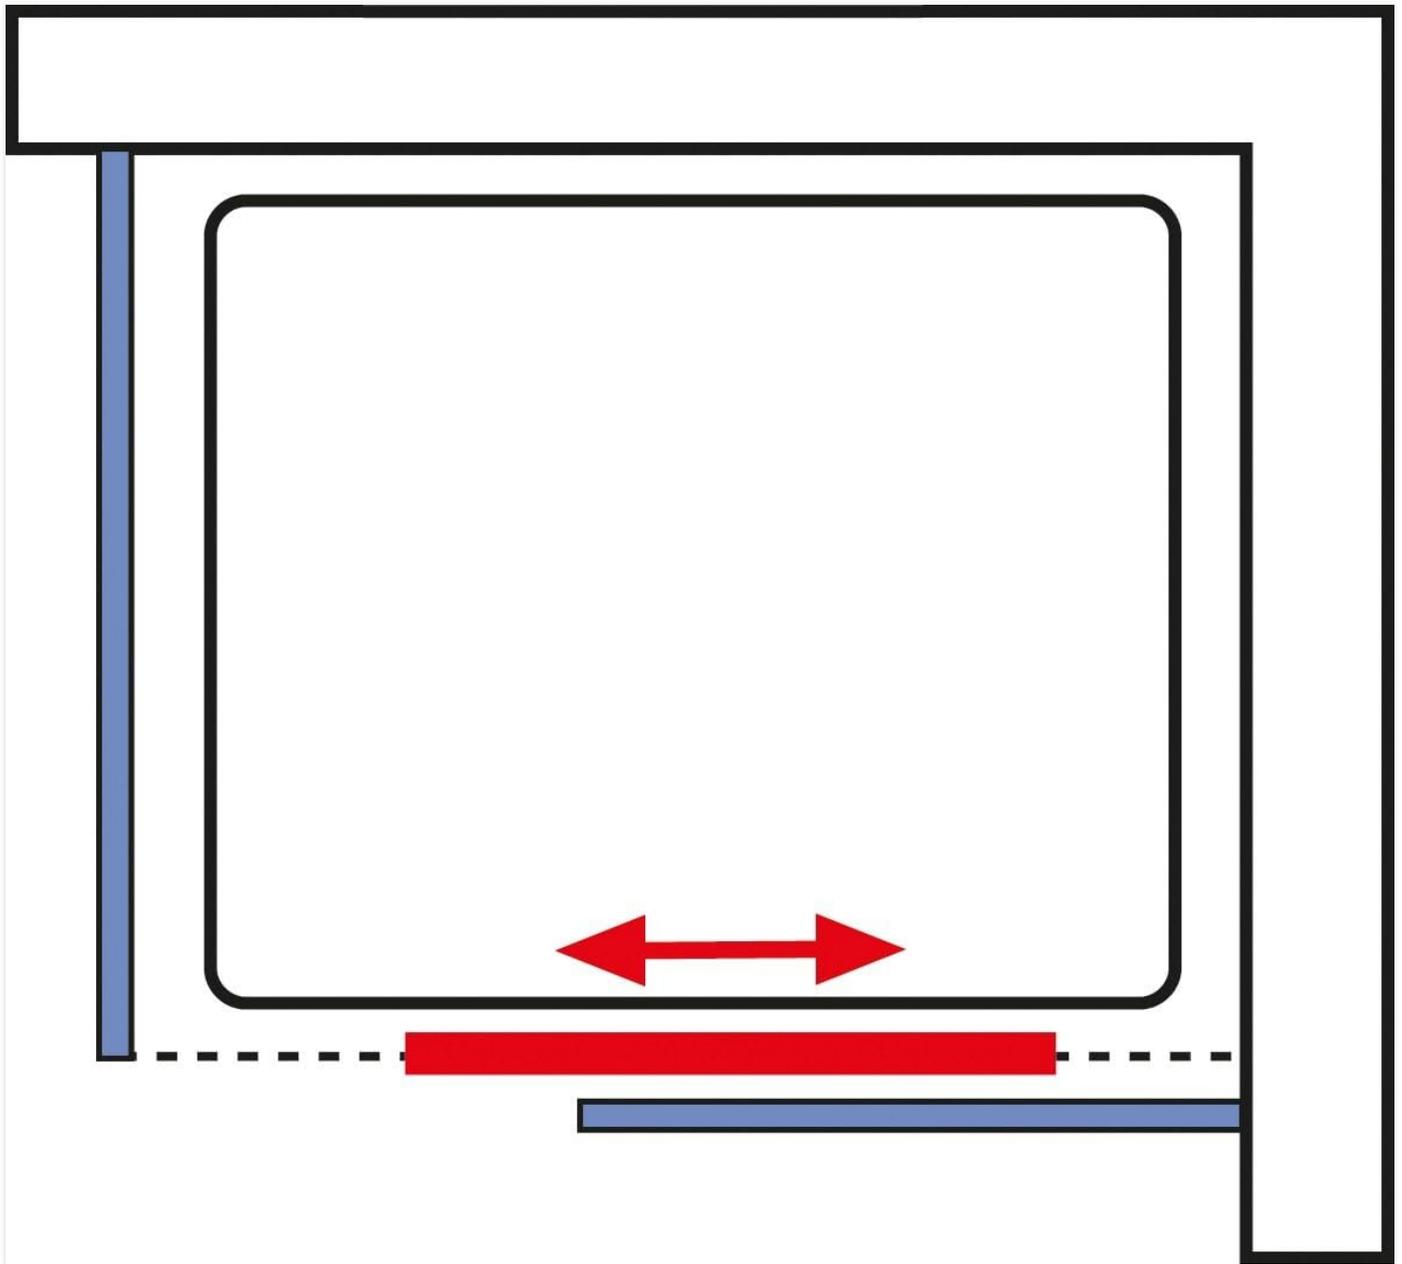


Figure 3: Installation diagram illustrating the adjustment range for positioning the shower cabin against a wall, indicated by red and blue lines with arrows.





Figure 4: Side view of the assembled shower cabin, showing the fixed glass panels and the overall structure.

6. OPERATION

Operating your Schulte Integrated Shower Cabin is straightforward.

- **Opening/Closing the Door:** Gently slide the door to the right to open and to the left to close. Avoid forcing the door.
- **Water Flow and Temperature:** Use the mechanical mixer on the shower column to adjust water flow and temperature to your preference.
- **Hand Shower:** The hand shower can be removed from its holder for targeted rinsing. Ensure it is securely placed

back after use.

- **Glass Shelf:** Utilize the integrated glass shelf for storing shower gels, shampoos, and other toiletries.



Figure 5: Detail of the hand shower and its adjustable holder on the shower column.



Figure 6: The integrated shower column, featuring the hand shower, mechanical mixer, and a convenient glass shelf.

7. MAINTENANCE AND CARE

Regular cleaning and maintenance will prolong the life and appearance of your shower cabin.

7.1. Cleaning

- **Glass Panels:** Clean glass panels regularly with a soft cloth and a non-abrasive glass cleaner. For stubborn water spots, a vinegar-water solution can be effective. Avoid harsh chemicals or abrasive sponges.
- **Profiles and Hardware:** Wipe aluminum profiles and chrome hardware with a soft, damp cloth. Use mild soap if necessary, then rinse and dry thoroughly.
- **Shower Tray:** Clean the shower tray with a non-abrasive bathroom cleaner. Ensure the drainage area is free of hair and soap residue to prevent blockages.
- **Wall Panels:** Clean the aqua green wall panels with a soft cloth and mild detergent.

7.2. Regular Checks

- **Seals:** Periodically inspect all seals for wear or damage. Replace any worn seals to prevent leaks.
- **Door Rollers:** Check the sliding door rollers for smooth operation. Clean any debris and lubricate if necessary.
- **Connections:** Ensure all plumbing connections remain tight and free of leaks.

8. TROUBLESHOOTING

This section addresses common issues you might encounter with your shower cabin.

Problem	Possible Cause	Solution
Water leaks from the cabin.	Worn or improperly installed seals; loose plumbing connections.	Check and adjust seals. Tighten all plumbing connections. If seals are damaged, replace them.
Sliding door is stiff or noisy.	Debris in rollers; rollers need lubrication; misalignment.	Clean rollers and tracks. Apply a silicone-based lubricant. Check door alignment and adjust if necessary.
Poor drainage from shower tray.	Drainage system clogged with hair or soap scum.	Remove the drain cover and clear any obstructions. Use a drain cleaner if necessary.
Water temperature/flow issues.	Issue with mechanical mixer or water supply.	Check household water supply. If issues persist, consult a qualified plumber for mixer inspection.

9. WARRANTY AND SUPPORT

9.1. Product Warranty

The Schulte Integrated Shower Cabin (Model: 4060991009853) comes with a **5-year product warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use and service. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage resulting from improper installation, misuse, neglect, accident, alteration, or the use

of unauthorized parts or cleaning agents.

9.2. Customer Support

For technical assistance, spare parts, or warranty claims, please contact Schulte customer support.

- **Website:** Visit the official Schulte website for support resources and contact information.
- **Contact Form:** Use the contact form available on the Schulte website for inquiries.
- **Phone:** Refer to the Schulte website for regional customer service phone numbers.

When contacting support, please have your model number (4060991009853) and date of purchase readily available.

