

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [INEVIFIT](#) /
- › [INEVIFIT I-BS002W Digital Bathroom Scale User Manual](#)

INEVIFIT I-BS002W

INEVIFIT I-BS002W Digital Bathroom Scale User Manual

Model: I-BS002W | Brand: INEVIFIT

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, maintenance, and troubleshooting of your INEVIFIT I-BS002W Digital Bathroom Scale. Please read this manual thoroughly before using the device to ensure accurate readings and safe operation.

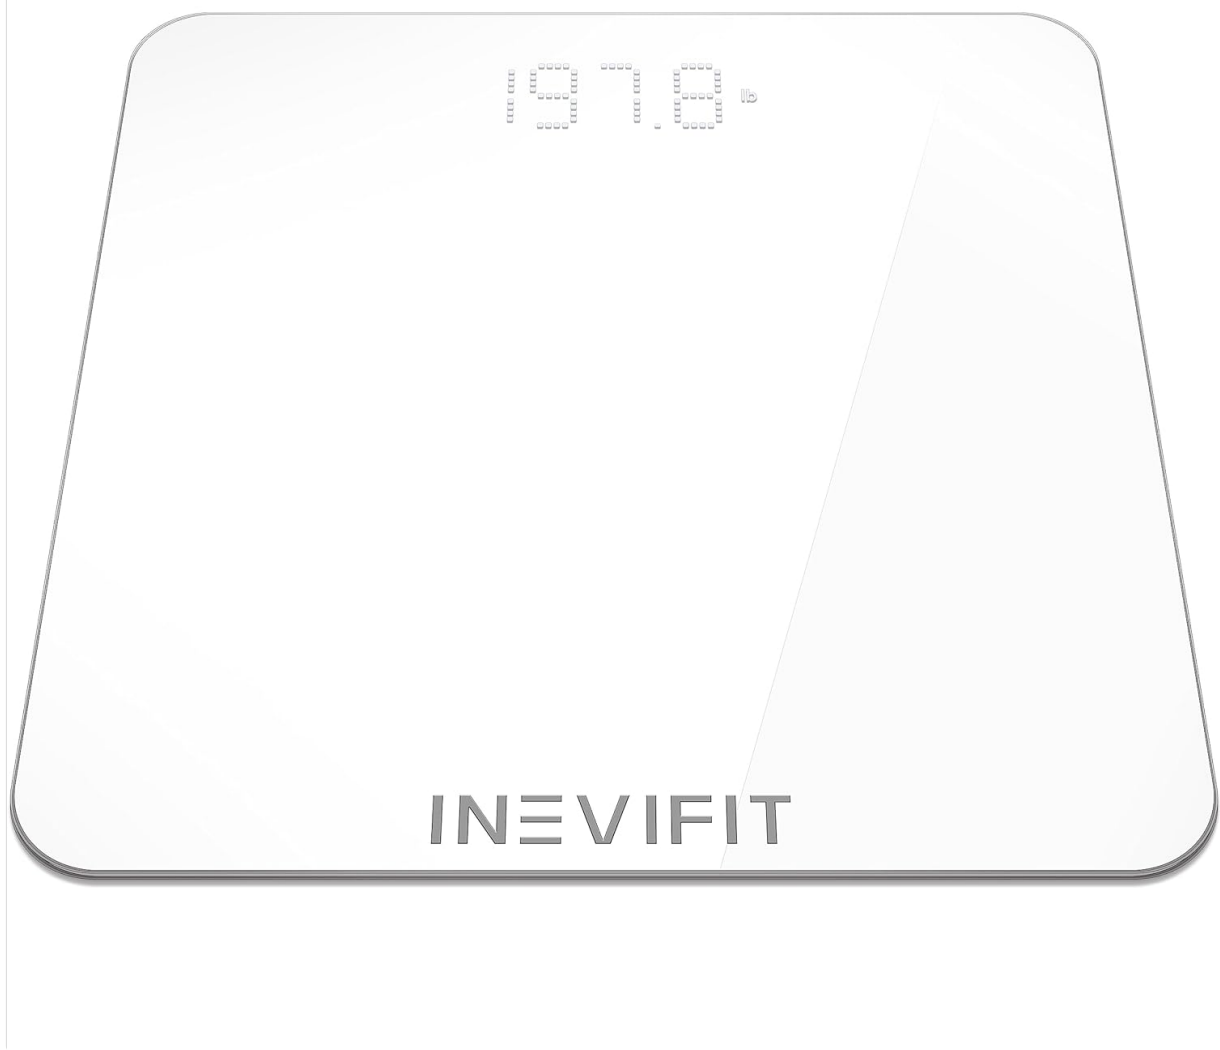


Figure 1: The INEVIFIT I-BS002W Digital Bathroom Scale.

2. KEY FEATURES

- **High Accuracy:** Equipped with auto-calibrating sensors for precise weight measurements.
- **Large Capacity:** Measures body weight up to 400 lbs (180 kgs).
- **Clear Display:** Features a large 3.6-inch LED display for easy reading.
- **Smart Functionality:** Includes Auto-On and Auto-Off sensing technology to conserve battery life.
- **Durable Design:** Constructed with a premium 6mm tempered glass platform.
- **Unit Conversion:** Easily switch between pounds (lbs) and kilograms (kg).
- **Ready to Use:** Includes 4 AAA batteries.



Figure 2: Scale dimensions and platform size.

3. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the scale from its packaging. The required 4 AAA batteries are included.
2. **Battery Installation:** Open the battery compartment on the underside of the scale and insert the 4 AAA batteries, ensuring correct polarity.
3. **Placement:** Place the scale on a hard, flat, and stable surface. Avoid carpets or uneven flooring, as this can affect accuracy.
4. **Initial Calibration:** For the first use, or if the scale has been moved, step on the scale briefly until a reading appears, then step off. The display will show '0.0' or '0.00' indicating it is calibrated and ready for use.



Figure 3: Batteries are included for immediate use.

4. OPERATION

To obtain a weight measurement:

1. Ensure the scale is on a hard, flat surface.
2. Gently step onto the center of the scale with bare feet. The scale will automatically turn on.
3. Stand still until your weight reading is displayed and stabilizes.
4. The scale will automatically turn off after a few seconds of inactivity to save power.

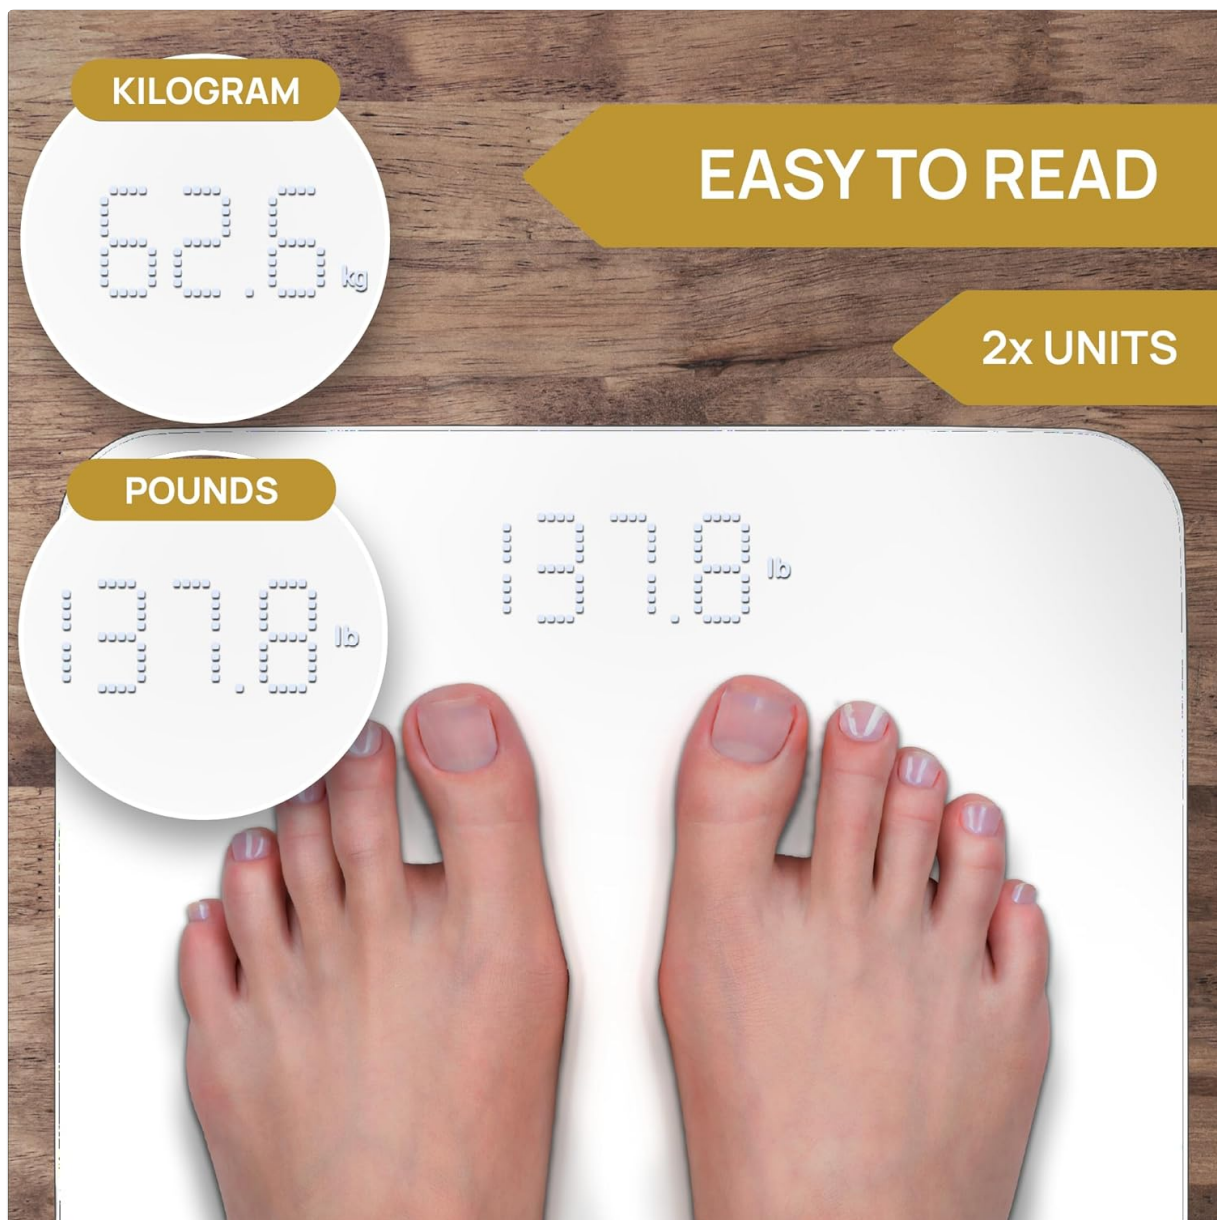


Figure 4: Taking a weight measurement.

5. UNIT CONVERSION

Your INEVIFIT scale can display weight in both pounds (lbs) and kilograms (kg).

1. Turn the scale over to access the back panel.
2. Locate the 'kg/lb' button.
3. Press this button to toggle between the desired units. The selected unit will be indicated on the display when the scale is active.



MAKE PROGRESS

WITH CONFIDENCE

Figure 5: Unit conversion switch on the back of the scale.

6. IMPORTANT SAFETY INFORMATION AND WARNINGS

- **Do Not Use When Wet:** To prevent slipping and ensure accurate readings, do not use the scale if your body or feet are wet, or if the scale surface is wet. The tempered glass surface can be very slippery when wet.
- **Stable Surface:** Always place the scale on a hard, flat, and stable surface. Using it on soft surfaces like carpet can lead to inaccurate measurements.
- **Avoid Overload:** Do not exceed the maximum weight capacity of 400 lbs (180 kgs).
- **Handle with Care:** The scale is made of tempered glass. Avoid dropping or subjecting it to strong impacts, which could cause breakage.
- **Not for Medical Diagnosis:** This scale is intended for general household use and is not a medical device. It should not be used for medical diagnosis or treatment.
- **Keep Dry:** Protect the scale from excessive moisture.

7. MAINTENANCE AND CARE

- **Cleaning:** Clean the scale surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the display shows 'Lo', replace all 4 AAA batteries with new ones.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display shows 'Lo'	Low battery power.	Replace all 4 AAA batteries.
Display shows 'Err'	Overload or unstable reading.	Ensure weight is within 400 lbs (180 kgs). Place scale on a hard, flat surface and stand still.
Inaccurate readings	Scale not calibrated, on an uneven surface, or moved.	Perform initial calibration (step on, step off). Ensure scale is on a stable, flat surface.
Scale does not turn on	Batteries are dead or incorrectly installed.	Check battery polarity or replace batteries.

9. SPECIFICATIONS

- **Model:** I-BS002W
- **Weight Capacity:** 400 lbs (180 kgs)
- **Measurement Units:** Pounds (lbs), Kilograms (kg)
- **Display:** Large LED Display
- **Platform Material:** 6mm Tempered Glass
- **Power Source:** 4 x AAA Batteries (included)
- **Product Dimensions:** 11.8 x 11.8 x 1.1 inches
- **Manufacturer:** INEVIFIT LLC

10. WARRANTY AND SUPPORT










INEVIFIT is committed to providing high-quality products and exceptional customer service. The INEVIFIT Digital Scale comes with industry-leading quality and 7-day real USA customer support. For any questions, concerns, or support needs, please visit the official INEVIFIT website or contact their customer service team. You can find more information and contact details on their Amazon store page: [Visit the INEVIFIT Store](#).

11. PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video 1: A brief overview of the INEVIFIT Digital Bathroom Scale's features and ease of use.

Related Documents - I-BS002W

<p>Healthweigh® H151-10-7 Class I MDR Personal Floor Physician Scale</p> <p>Operation Manual</p>  <p>RICE LAKE WEIGHING SYSTEMS</p>	<p>Healthweigh H151-10-7 Physician Scale Operation Manual Rice Lake Weighing Systems</p> <p>Comprehensive operation manual for the Healthweigh H151-10-7 Class I MDR Personal Floor Physician Scale by Rice Lake Weighing Systems. Covers setup, operation, maintenance, troubleshooting, specifications, and safety information.</p>
<p> Defender™ 3000 Series Base Instruction Manual</p>  <p>Manual 3000_01</p>	<p>OHAUS Defender 3000 Series Base: Installation and Maintenance Manual</p> <p>This comprehensive manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of the OHAUS Defender™ 3000 Series Base. It includes technical specifications, safety precautions, and compliance information for various models.</p>
<p>For Customer Support: 800.371.3434 • TechSupport@ohaus.com</p> <p> DEFENDER 2500 Series Drum Scale Instruction Manual Manuel de l'utilisateur série DEFENDER 2500 Manuale di istruzioni Balken- & Waagen Serie DEFENDER 2500 Manual d'instructions</p> 	<p>OHAUS DEFENDER 2500 Series Drum Scale Instruction Manual</p> <p>Comprehensive instruction manual for the OHAUS DEFENDER 2500 Series Drum Scale, covering installation, operation, safety precautions, maintenance, technical data, and warranty information.</p>
<p> Courier 3000 Instruction Manual</p> 	<p>OHAUS Courier 3000 Instruction Manual</p> <p>Comprehensive instruction manual for the OHAUS Courier 3000 weighing scale, covering installation, operation, maintenance, technical specifications, and troubleshooting.</p>
<p> Courier 1000 Instruction Manual</p> 	<p>OHAUS Courier 1000 Digital Scale Instruction Manual</p> <p>Comprehensive instruction manual for the OHAUS Courier 1000 digital scale, covering installation, operation, maintenance, calibration, technical specifications, and compliance information.</p>



**i-D33P75SD Bench Scale
Quick Start Guide**



First Quality Products, Inc. 401-291-1111 www.ohaus.com info@ohaus.com

[OHAUS i-D33P75SD Bench Scale Quick Start Guide](#)

Quick start guide for the OHAUS i-D33P75SD Bench Scale, covering installation, operation, safety precautions, calibration, maintenance, and technical specifications.