

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bio Bidet](#) /

› [Bio Bidet SlimEdge Bidet Attachment Instruction Manual](#)

Bio Bidet SlimEdge

Bio Bidet SlimEdge Bidet Attachment Instruction Manual

Model: SlimEdge | Brand: Bio Bidet

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Bio Bidet SlimEdge Bidet Attachment. The SlimEdge is a non-electric bidet attachment designed for easy installation and hygienic personal cleaning. It features dual nozzles for front and rear cold water wash and adjustable water pressure for a personalized experience.



Image: The Bio Bidet SlimEdge Bidet Attachment seamlessly integrated with a standard toilet, showcasing its slim profile and control knob.

SETUP & INSTALLATION

The Bio Bidet SlimEdge is designed for easy DIY installation without the need for a plumber, electricity, or batteries. All necessary components are included.

Included Components:

- Bidet attachment
- Mounting hardware
- T-adapter valve
- Braided metal water supply hose
- Connecting components
- Instructions (this manual)

Installation Steps:

1. **Turn off water supply:** Locate the water supply valve for your toilet and turn it off. Flush the toilet to drain the tank.

2. **Remove toilet seat:** Unscrew and remove your existing toilet seat.
3. **Attach bidet:** Place the SlimEdge bidet attachment onto the toilet bowl, aligning the mounting holes with the toilet's bolt holes.
4. **Reinstall toilet seat:** Place your toilet seat back over the bidet attachment and secure it using the original bolts. Ensure the bidet is centered and stable.
5. **Connect T-valve:** Disconnect the existing water supply hose from the toilet tank. Install the provided T-adaptor valve between the toilet tank and the water supply hose.
6. **Connect bidet hose:** Attach one end of the braided metal water supply hose to the T-adaptor valve and the other end to the bidet attachment's inlet.
7. **Turn on water:** Slowly turn the water supply valve back on. Check for any leaks.

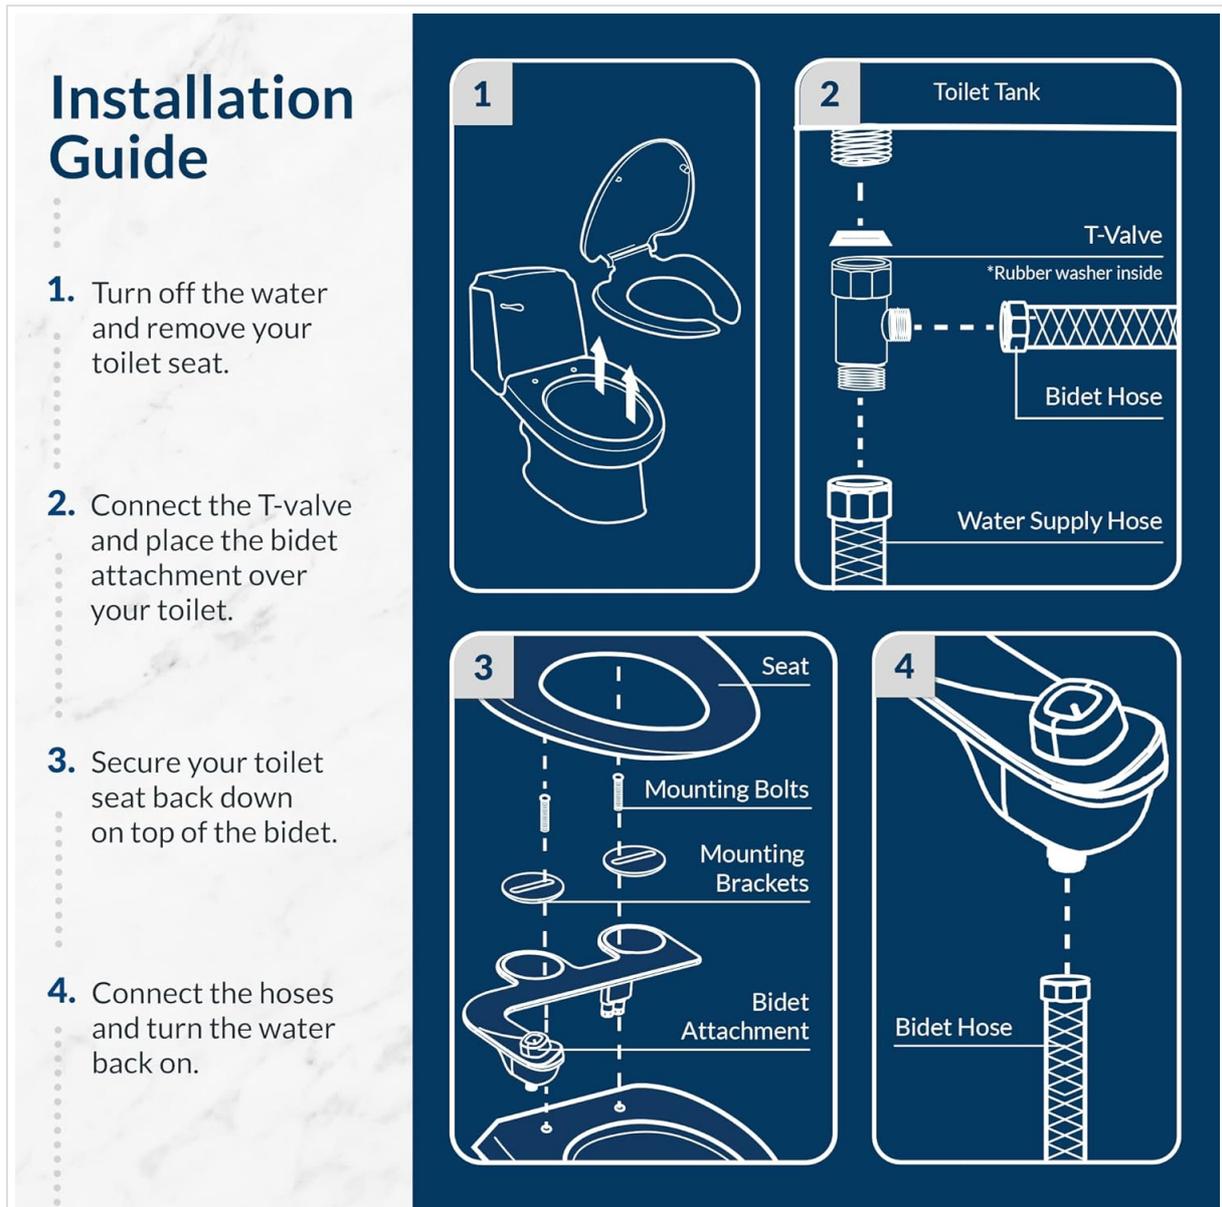


Image: A visual guide illustrating the four main steps for installing the SlimEdge bidet attachment, including turning off water, connecting the T-valve, securing the seat, and connecting hoses.

Installation Video:

Your browser does not support the video tag.

Video: Official Bio Bidet video demonstrating the installation process of the SlimEdge Bidet Attachment, highlighting its ease of setup.

OPERATING INSTRUCTIONS

The SlimEdge bidet attachment features a comfort control knob for easy operation.

Using the Control Knob:

- **Adjust Water Pressure:** Rotate the comfort control knob to increase or decrease the water pressure to your desired level. Start with low pressure and gradually increase.
- **Select Nozzle Function:** The dual nozzles offer separate functions for front and rear wash. Rotate the knob to select between the "Rear Wash" (for posterior cleansing) and "Front Wash" (for feminine cleansing) settings.
- **Turn Off:** Rotate the knob to the "OFF" position to stop the water flow.

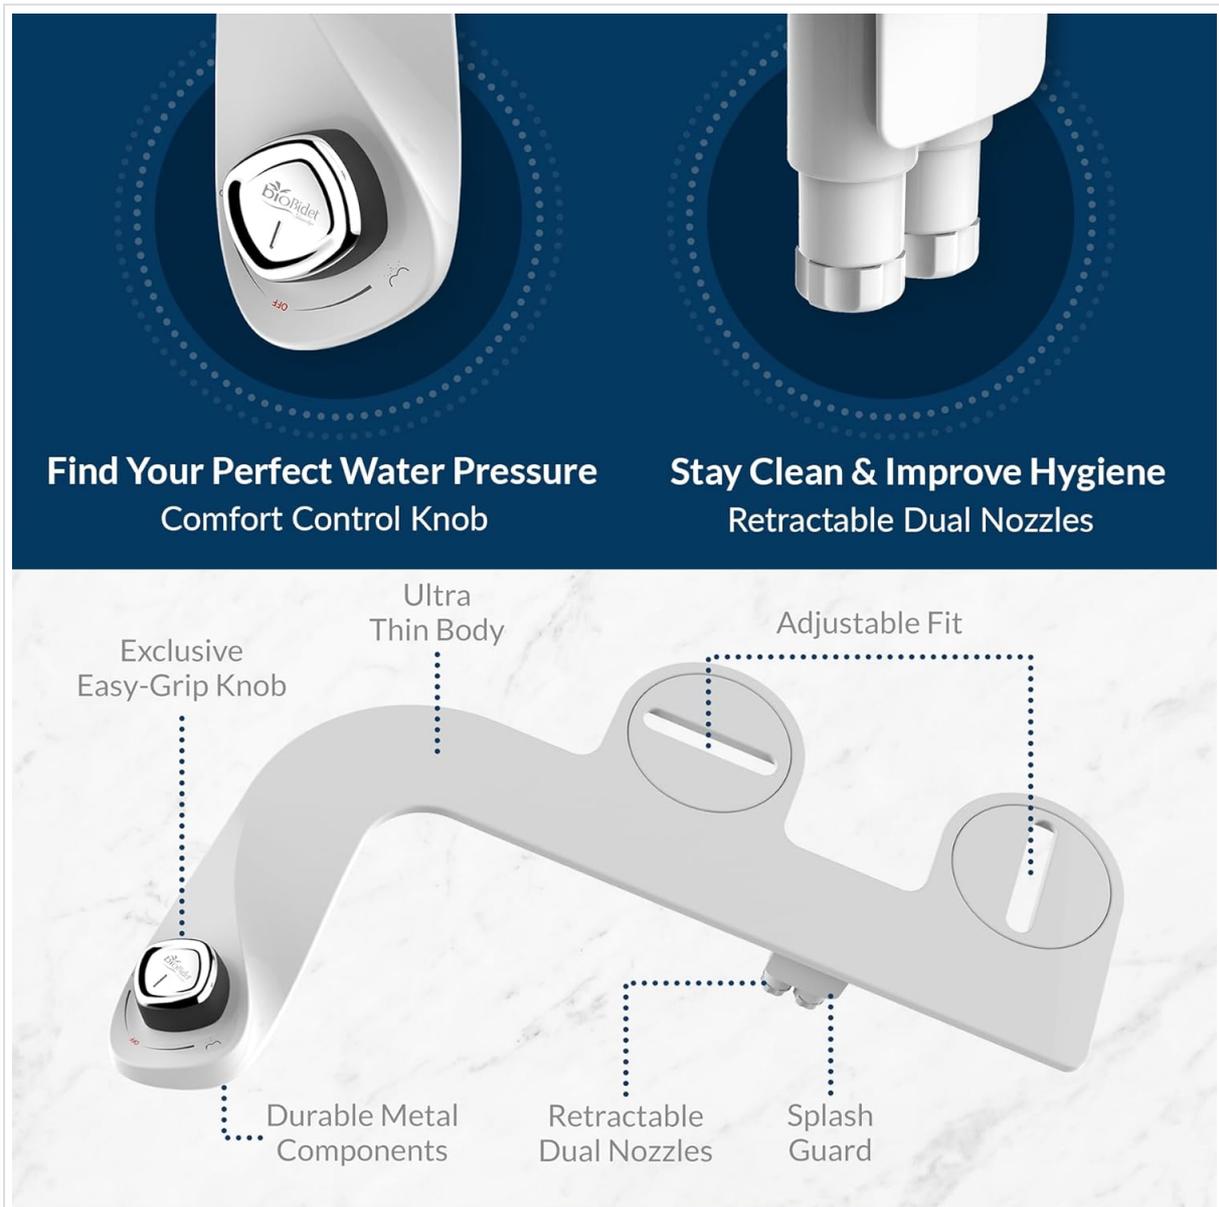


Image: Close-up view of the comfort control knob and the retractable dual nozzles, illustrating the adjustable water pressure and dual wash options.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and hygienic operation of your SlimEdge bidet attachment.

Cleaning the Nozzles:

- The nozzles are self-cleaning. Water will automatically rinse them before and after each use.
- For deeper cleaning, gently pull down the nozzles and wipe them with a soft cloth and mild, non-abrasive cleaner. Do not use harsh chemicals.

Cleaning the Bidet Body:

- Wipe the exterior of the bidet attachment with a soft, damp cloth and a mild cleaning solution.
- Avoid using abrasive cleaners, brushes, or chemical sprays that could damage the surface.

Winterization (if applicable):

- If the bidet is in an unheated area and exposed to freezing temperatures, disconnect the water supply and drain all water from the unit to prevent damage.

TROUBLESHOOTING

If you encounter any issues with your SlimEdge bidet attachment, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
No water flow	Water supply valve is off or clogged.	Ensure the water supply valve is fully open. Check for kinks in the water hose.
Water leakage	Loose connections or damaged washers.	Tighten all connections by hand. If leaks persist, check washers for proper seating or damage.
Weak water pressure	Partially closed water supply valve or low household water pressure.	Ensure the water supply valve is fully open. Check household water pressure.

SPECIFICATIONS

- **Brand:** Bio Bidet
- **Model Name:** SlimEdge
- **Mounting Type:** Toilet Mount
- **Material:** Plastic (with Brass handle material)
- **Color:** White
- **Product Dimensions:** 13"D x 15.5"W x 2.5"H
- **Item Weight:** 1 Pounds
- **Special Feature:** Easy to Install
- **Installation Type:** Single Hole
- **Power Source:** Non-Electric (Water Pressure Operated)
- **Nozzles:** Dual Nozzles (Front and Rear Wash)



**Easy Install &
Universal Fit**



**Shower Fresh
Feeling**



Image: Diagram showing the dimensions (15.5" width, 9" depth, 2.44" height) and key features like adjustable fit, comfort control knob, durable metal components, retractable dual nozzles, and splash guard.

WARRANTY & SUPPORT

Warranty Information:

The manufacturer warranty covers US and Canada customer purchases for 1 year from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support:

For further assistance, technical support, or warranty inquiries, please contact Bio Bidet customer service. Refer to the product packaging or the official Bio Bidet website for contact details.