

Tempur-Pedic TP4000

Tempur-Pedic TP4000 Fabric Task Chair Instruction Manual

Model: TP4000

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Tempur-Pedic TP4000 Fabric Task Chair. Please read this manual thoroughly before use to ensure proper function and longevity of your product.

IMPORTANT SAFETY INFORMATION

- Assembly may require tools and caution.
- Do not exceed the maximum weight limit of 242.5 lbs.
- Be cautious when using armrests to avoid injury.
- Use the tilting mechanism with care to prevent falls.
- Ensure all components are securely fastened before use.

SETUP AND ASSEMBLY

While specific step-by-step assembly instructions are not provided here, general assembly for the Tempur-Pedic TP4000 chair typically involves:

1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts are present against the included parts list (not provided in this manual).
2. **Base Assembly:** Attach the casters to the five-star base.
3. **Gas Lift Installation:** Insert the gas lift cylinder into the center of the assembled base.
4. **Seat Mechanism:** Secure the seat mechanism to the underside of the seat cushion using the provided hardware.
5. **Armrest Attachment:** Attach the armrests to the seat assembly. Ensure they are oriented correctly.
6. **Backrest Attachment:** Connect the backrest to the seat assembly.
7. **Final Assembly:** Place the assembled seat and backrest onto the gas lift cylinder.
8. **Inspection:** Before first use, inspect all connections to ensure they are tight and secure.



Image: Front view of the assembled Tempur-Pedic TP4000 Fabric Task Chair. This image shows the overall design and appearance of the chair.

OPERATING AND ADJUSTMENTS

The Tempur-Pedic TP4000 chair offers multiple adjustment features to customize your seating experience for optimal comfort and support.

- **Pneumatic Seat Height Adjustment:**

Locate the lever on the right side, beneath the seat. Pull the lever upwards to raise the seat. While seated, pull the lever upwards to lower the seat. Release the lever at the desired height.

- **Armrest Adjustments:**

The armrests are width and height adjustable. To adjust height, locate the button or lever on the side of the armrest support. Press it and move the armrest up or down. To adjust width, the armrests can be moved outward to accommodate larger frames. Specific mechanism details may vary, refer to visual cues on your chair.

- **Tilt Control Options:**

This chair features a range of tilt-control options including independent pan tilt, back tilt, and a forward tilt option. Levers located beneath the seat control these functions. Experiment with each lever to find your preferred recline and tilt settings. One lever typically locks/unlocks the tilt, while another adjusts the tension.



Image: Close-up view of the adjustment levers located on the left side beneath the seat. These levers control various chair functions such as tilt and recline.



Image: Close-up view of the adjustment levers located on the right side beneath the seat. These levers typically control seat height and tilt lock.

- **Back Height Adjustment:**

The backrest can be adjusted in height, often through a 5-step ratcheting assembly. To adjust, lift the backrest firmly upwards until it clicks into the next desired position. To reset to the lowest position, lift it to its highest point, then it will drop down. Then you can re-adjust upwards.

MAINTENANCE

Proper maintenance ensures the longevity and appearance of your Tempur-Pedic TP4000 chair.

- **Cleaning:** The fabric upholstery should be spot cleaned. Use a mild detergent and a damp cloth to gently clean soiled areas. Avoid harsh chemicals or abrasive cleaners.
- **Casters:** Periodically check the casters for hair or debris that may impede smooth rolling. Clean as necessary.
- **Fasteners:** Routinely check all screws and bolts to ensure they are tight. Tighten any loose fasteners to maintain stability and safety.

TROUBLESHOOTING

If you encounter issues with your chair, refer to the following common troubleshooting tips:

- **Chair Sinks or Does Not Hold Height:**
This typically indicates an issue with the gas lift cylinder. Contact customer support for assistance or replacement parts.
- **Difficulty Adjusting Levers:**
Ensure no weight is applied to the seat or backrest when attempting to adjust. Check for any obstructions around the levers. If levers remain stiff, a small amount of silicone lubricant may be applied to moving parts, avoiding contact with fabric.
- **Chair Wobbles or Feels Unstable:**
Check all assembly bolts and screws, especially those connecting the seat to the mechanism and the base to the gas lift. Tighten any loose connections. Ensure the casters are fully inserted into the base.
- **Casters Not Rolling Smoothly:**
Remove any hair, dust, or debris wrapped around the caster wheels. Clean the wheels and axles. If the issue persists, casters may need replacement.

SPECIFICATIONS

Brand	Tempur-Pedic
Model Number	TP4000
Color	Black
Product Dimensions	26.8"D x 26"W x 36.2"H
Back Style	High Back
Special Features	Arm Rest, Foldable (Note: 'Foldable' may refer to armrests or a general feature, not the entire chair)
Recommended Uses	Office
Style	Authentic Tempur Material

Item Weight	91.8 pounds
Maximum Weight Capacity	242.5 lbs
UPC	669245994279



Image: Diagram showing the dimensions of the Tempur-Pedic TP4000 Fabric Task Chair, including height, depth, and width.

WARRANTY AND SUPPORT

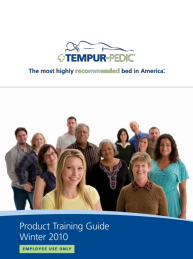

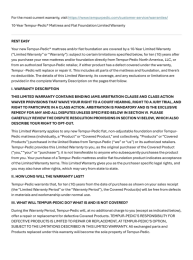

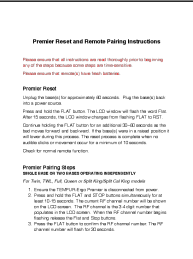

For warranty information or technical support, please refer to the documentation included with your purchase or contact Tempur-Pedic customer service directly. Keep your proof of purchase for warranty claims.

For further assistance, you may visit the official Tempur-Pedic store online:[Tempur-Pedic Store](#)



© 2023 Tempur-Pedic. All rights reserved.

Related Documents - TP4000

	<p>Tempur-Pedic Product Training Guide Winter 2010: Mattresses, Pillows, and Accessories</p> <p>Comprehensive product training guide for Tempur-Pedic mattresses, pillows, and sleep system accessories from Winter 2010. Features detailed information on TEMPUR material, model comparisons, benefits, features, specifications, and warranty information.</p>
	<p>Tempur-Pedic Ergo Smart Base Owner's Manual: Features, Setup, and Safety</p> <p>This owner's manual provides comprehensive guidance for the Tempur-Pedic Ergo Smart Base with Sleeptracker AI, covering setup, operation, safety, troubleshooting, and warranty information for enhanced sleep comfort.</p>
	<p>Tempur-Pedic 10-Year Limited Warranty for Mattresses and Flat Foundations</p> <p>Official 10-year limited warranty details for Tempur-Pedic mattresses and flat foundations, covering defects, exclusions, and the claims process. Learn about your warranty rights and responsibilities.</p>
	<p>Tempur-Pedic Adjustable Bed Owners Manual</p> <p>Comprehensive owners manual for the Tempur-Pedic adjustable bed, covering installation, operation, troubleshooting, and warranty information. Learn how to set up and use your Tempur-Pedic bed for optimal comfort and performance.</p>
	<p>Tempur-Ergo Premier Reset and Remote Pairing Guide</p> <p>Comprehensive instructions for resetting and pairing the remote control for the Tempur-Ergo Premier adjustable bed bases, covering single and dual base setups.</p>
	<p>Tempur-Ergo ProSmart Air Quick Installation Guide</p> <p>A quick installation guide for the Tempur-Ergo ProSmart Air adjustable bed base, covering base setup and mattress setup. Includes part lists, step-by-step instructions, and contact information.</p>

