

[Manuals.plus](#) /

› [Wickedbone](#) /

› Wickedbone Smart Bone Instruction Manual

Wickedbone Wickedbone-White

Wickedbone Smart Bone Instruction Manual

Brand: **Wickedbone** | Model: **Wickedbone-White**

1. PRODUCT OVERVIEW

The Wickedbone Smart Bone is an innovative, automatic, and interactive toy designed to keep your dog or cat entertained. It offers both interactive auto-play modes and app-controlled joystick functionality, adapting to your pet's actions and providing engaging play.



Image: The Wickedbone Smart Bone, a white, bone-shaped interactive toy with a central black panel and blue indicator lights.

2. SETUP AND ACTIVATION

Before first use, ensure the Wickedbone is fully charged and activated. Follow these steps:

1. **Charging:** Connect the Wickedbone to a power source using the provided USB cable. A full charge takes approximately 1 hour.
2. **Activation:** To activate the device, charge it for 1 hour, then unplug and plug it back in four times. This process ensures the internal battery management system is properly initialized.
3. **App Download:** Download the "Wickedbone" app from your device's app store (available for iOS and Android).
4. **Connection:** Open the app and follow the on-screen instructions to connect to your Wickedbone via Bluetooth. Ensure your device's Bluetooth is enabled.

APP-Controlled



Image: Visual guide for connecting the Wickedbone to the mobile application, showing steps like activating the bone, disconnecting the USB cable, and initiating the connection.

3. OPERATING MODES

3.1. Automatic & Intelligent Play Mode

In Auto Play Mode, the Wickedbone is programmed to attract your dog's attention without requiring manual operation. It features 12 types of emotional driven systems, allowing it to respond responsively to different types of touch, such as chasing, teasing, and avoiding.

Replaceable TPU Tires



Image: A Golden Retriever interacting with the Wickedbone in Auto Play Mode, demonstrating its autonomous play.

12 Emotional Interactions



Image: A visual representation of the 12 emotional interactions the Wickedbone can exhibit, including Bored, Satisfy, Crazy, Anger, Tease, Normal, Observed, Leisure, Sleep, Intimidate, Tickling, and Pissed Off.

3.2. Drive Mode (App Control)

Utilize the Wickedbone app to control the toy directly. With its virtual joystick, you can choose from 9 available motions, creating new action combinations as it runs. This mode allows for direct interaction and customized play sessions.

Auto Play Mode

Programmed to attract your dog's attention and does NOT require Manual operation!



Image: The Wickedbone mobile application interface, displaying options for Drive and Interactive modes, along with various control buttons for movement.

Safe & Durable

FDA food-grade polycarbonate of the body, cover, and the tires, protects your pet's claws and teeth.



Image: The app's settings screen, allowing users to customize parameters such as play area (Small/Wide), surface type (Hard/Soft), and movement characteristics (Speed, Swerve, Acceleration).

4. MAINTENANCE

4.1. Cleaning

The Wickedbone features detachable tires and a protecting cover, making cleaning simple and convenient. Regularly clean these components to maintain hygiene and performance.

According To Different Outdoor Environments, You Can Set Different Parameters In The App To Train The Pet's Capture Ability.

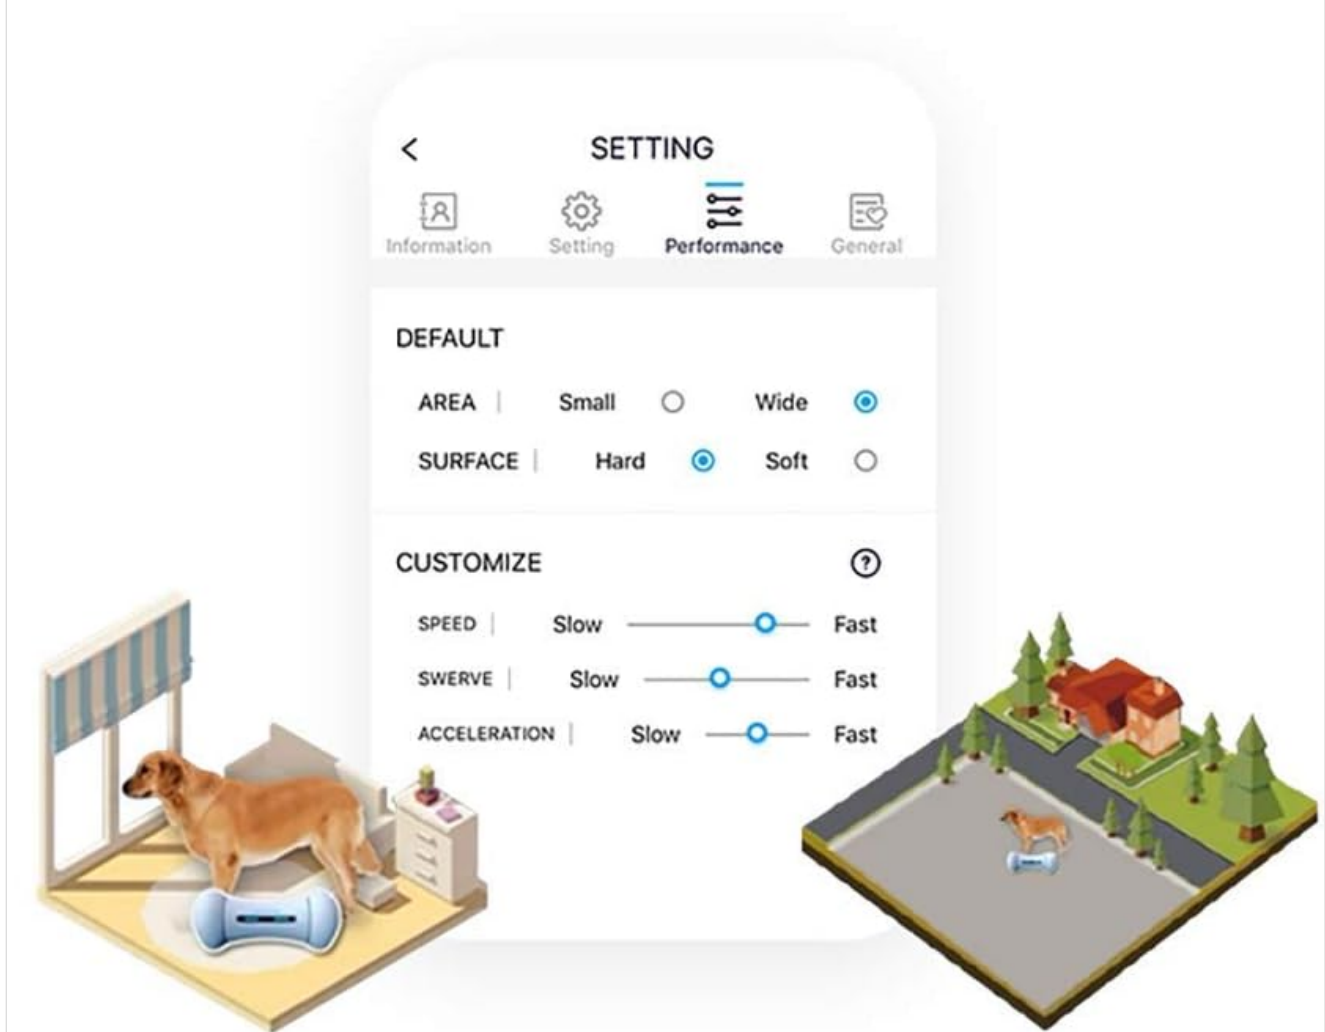


Image: A person cleaning the detachable, white, bone-shaped tires of the Wickedbone under running water in a sink, highlighting the ease of maintenance.

4.2. Battery Life

The Wickedbone is equipped with a built-in 470 mAh lithium polymer battery. After a 1-hour charge, it provides:

- More than 30 minutes of operation in App mode.
- More than 2 hours in interactive mode.
- Up to 1 month in sleep mode.

5. SAFETY AND DURABILITY

The Wickedbone is constructed from FDA food-grade polycarbonate for its body, cover, and tires. This material is designed to be strong yet soft, protecting your pet's claws and teeth during play. The inner part is made of safe PC material. If the outer shell becomes damaged, discontinue use to ensure your pet's safety.



Image: A close-up view of the Wickedbone, highlighting the FDA logo, indicating the use of food-grade materials in its construction.



1-Year Warranty

Made of tough, durable materials.

Image: A small dog resting its head on the Wickedbone, with the FDA logo prominently displayed, reinforcing the product's safety for pets.

6. SPECIFICATIONS

Feature	Detail
Item Model Number	Wickbone-White
Item Weight	10.6 ounces (0.66 Pounds)
Item Dimensions (LxWxH)	8.3 x 4.7 x 3.5 inches
Batteries	1 Lithium Polymer battery (included)
Material	FDA food-grade Polycarbonate (body, cover, tires)
Color	White
Included Components	Wickedbone x1 (with Removable Tires x2), USB Cable x1
Target Audience	Cats, Dogs, Pets (All Life Stages)
Manufacturer	Shenzhen Qianhai Meiou Innovation and Technology Co LTD

7. TROUBLESHOOTING

If you encounter issues with your Wickedbone, consider the following common solutions:

- **Connectivity Issues:** Ensure your mobile device's Bluetooth is on and you are within close range of the Wickedbone. If connection is lost, try restarting both the app and the Wickedbone. You may need to plug and unplug the charging cable to reset the device.
- **Short Battery Life:** Confirm the Wickedbone is fully charged (approx. 1 hour). Battery performance can vary based on usage mode (App vs. Interactive) and intensity of play.
- **Charging Port Cover:** The small silicone cover for the charging port is crucial for protecting the internal electronics. Store it carefully when charging to prevent loss.
- **Tire Wear:** The tires are designed to be durable but may show wear over time, especially with aggressive chewers. Replacement tires are available.
- **Limited App Range:** The app control relies on Bluetooth, which has a limited range. Ensure you are close to the Wickedbone for optimal control.

8. WARRANTY AND SUPPORT

The Wickedbone Smart Bone comes with a **1-year standard warranty** from the date of purchase.

For any questions, concerns, or technical assistance, please contact customer support:

- **Email:** help@meiou.Tech
- Customer support is available 24 hours.

© 2023 Wickedbone. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question