

[Manuals.plus](#) /

› [WALI](#) /

› WALI Monitor Wall Mount Instruction Manual

WALI GSWM001S

WALI Monitor Wall Mount Instruction Manual

Model: GSWM001S

PRODUCT OVERVIEW

The WALI Monitor Wall Mount (Model GSWM001S) is designed to securely mount a single monitor to a wall, providing flexible adjustment options for optimal viewing comfort and space saving. This gas spring arm supports monitors up to 32 inches and weighing up to 19.8 lbs, with VESA compatibility of 75x75mm or 100x100mm.



Figure 1: WALI Monitor Wall Mount (Model GSWM001S) with a monitor attached.

SETUP AND INSTALLATION

Proper installation is crucial for the safety and functionality of your monitor mount. Please follow these steps carefully. It is recommended to have a second person assist during installation, especially when mounting the monitor.

1. Prepare the Mounting Location

Identify a suitable wall location. The mount is designed for both brick walls and wood stud walls. Ensure there are no hidden electrical wires or plumbing in the drilling path. Use a stud finder for wood studs.

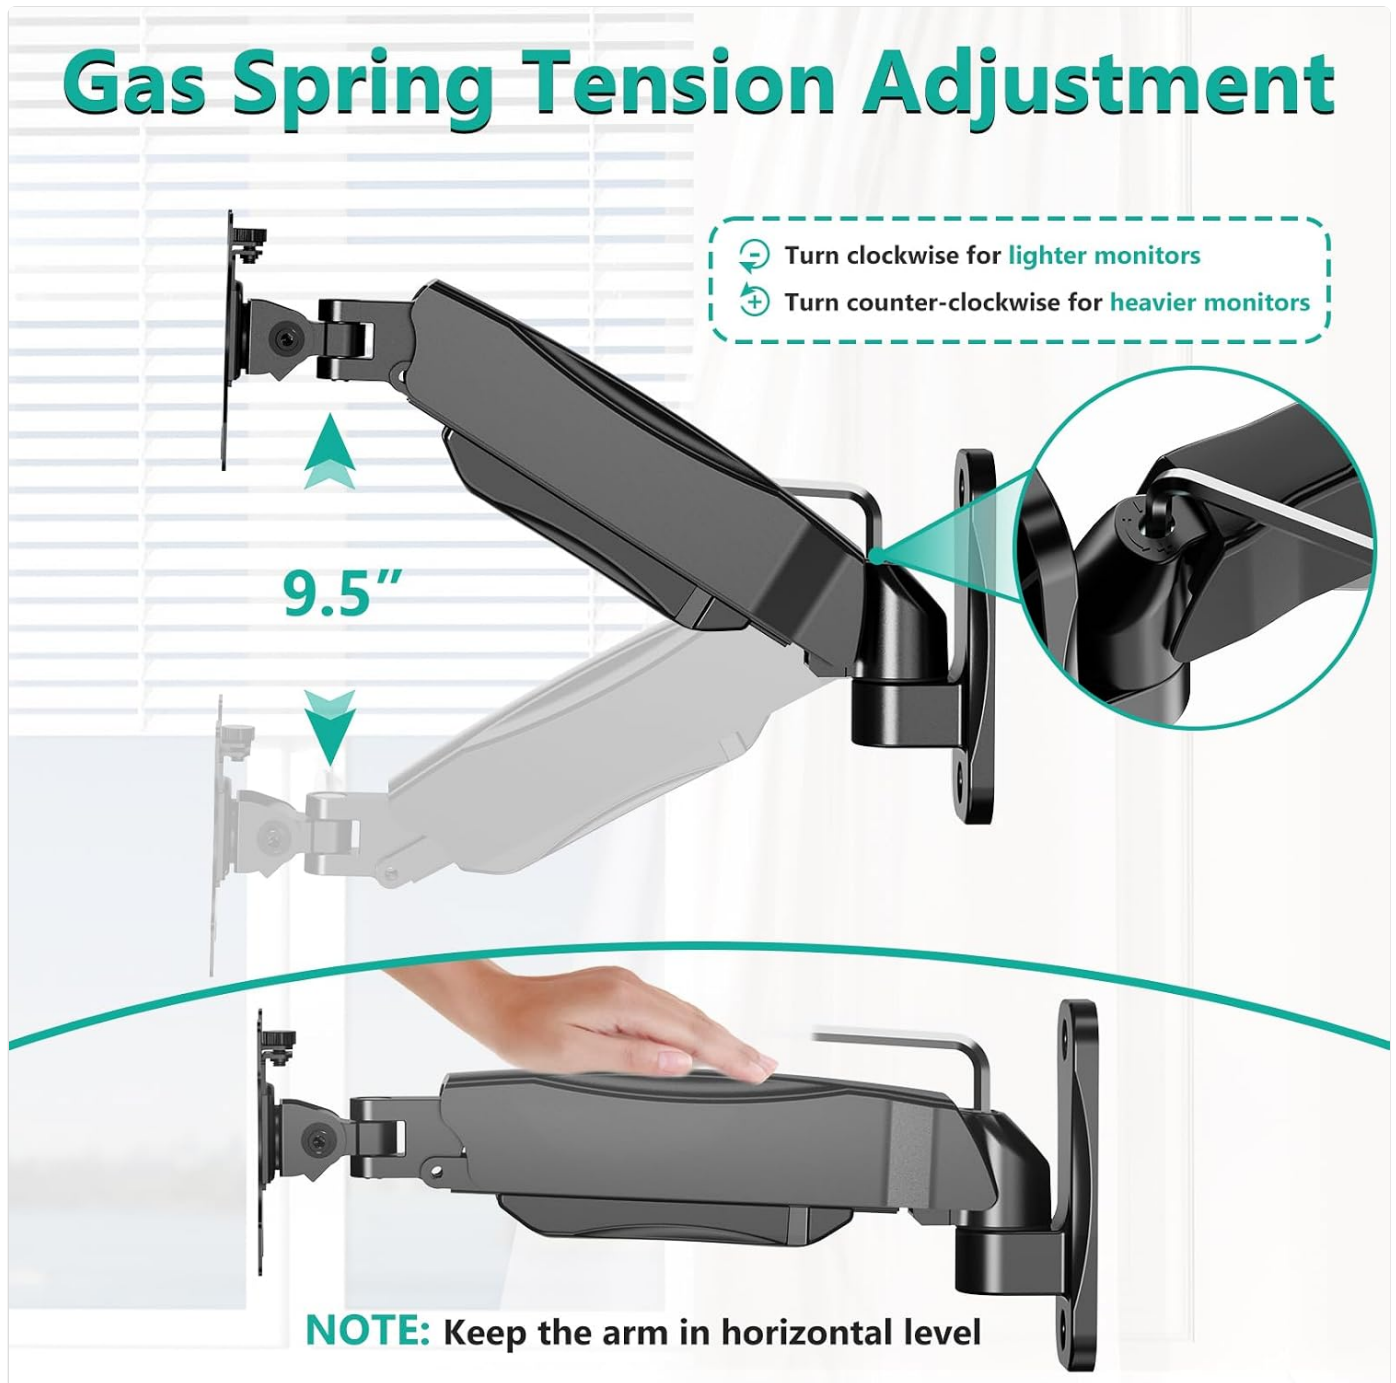


Figure 2: Marking drill points on the wall for the mount.

2. Attach VESA Plate to Monitor

The VESA plate detaches from the arm for easier monitor attachment. Secure the VESA plate to the back of your monitor using the provided screws. Ensure the screws are tightened securely but do not overtighten.

Display Compatibility



Weight Capacity
19.8lbs



VESA Size
75x75/100x100mm



Screen Size
Max 32"



Figure 3: VESA plate attached to the monitor's rear.

3. Mount the Arm to the Wall

Using the appropriate hardware for your wall type (wood stud or concrete), securely fasten the wall plate of the monitor arm to the wall. Use a level to ensure the mount is straight.

4. Attach Monitor to Arm

Carefully slide the monitor with the attached VESA plate onto the arm's mounting head. Ensure it clicks into place or is secured with the locking mechanism.

5. Cable Management

Route your monitor's cables through the integrated cable management channels on the arm. This helps maintain a clean and organized workspace.

Your browser does not support the video tag.

Video 1: Official WALI Monitor Gas Spring Wall Mount installation and adjustment guide. This video demonstrates the full setup process,

including wall mounting, monitor attachment, and various adjustments.

OPERATING AND ADJUSTMENTS

The WALI Monitor Wall Mount offers a range of adjustments to customize your viewing experience.

1. Monitor Compatibility and Capacity

- **Screen Size:** Fits monitors from 13 inches up to 32 inches.
- **Weight Capacity:** Supports monitors weighing between 4.4 lbs and 19.8 lbs.
- **VESA Compatibility:** Supports VESA patterns of 75x75mm and 100x100mm.



Figure 4: Display compatibility specifications for the mount.

2. Angle Adjustments

- **Tilt:** $+75^{\circ}$ / -45° to reduce glare and optimize viewing angle.
- **Swivel:** $+90^{\circ}$ / -90° at the arm joint and $+180^{\circ}$ / -180° at the VESA plate for flexible screen positioning.
- **Rotation:** 360° rotation allows for easy switching between landscape and portrait modes.

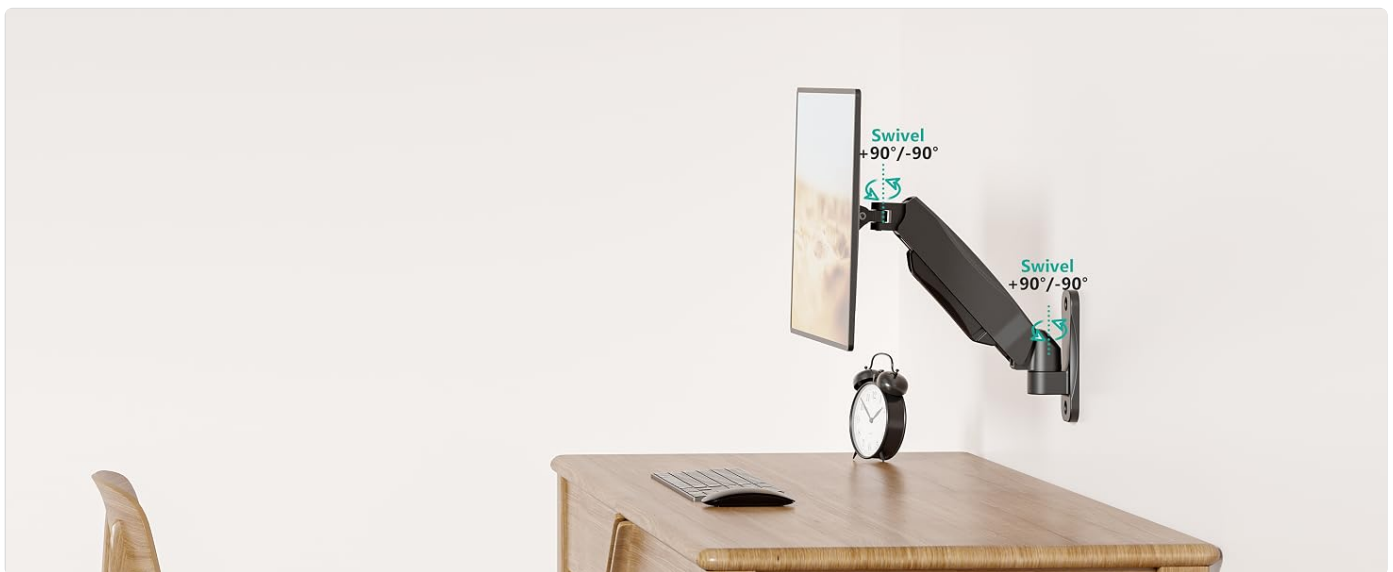


Figure 5: Overview of the mount's angle adjustment capabilities.

3. Dynamic Angle and Extension

The gas spring arm allows for smooth and effortless height adjustment and extension. The arm can extend up to 13.4

inches from the wall and retract to a minimum profile of 3.2 inches.



Figure 6: Arm extension and profile from the wall.

4. Gas Spring Tension Adjustment

To ensure the monitor stays at the desired height, adjust the gas spring tension. Use the provided Allen key to turn clockwise for lighter monitors (to increase tension) and counter-clockwise for heavier monitors (to decrease tension). Adjust until the monitor holds its position freely.

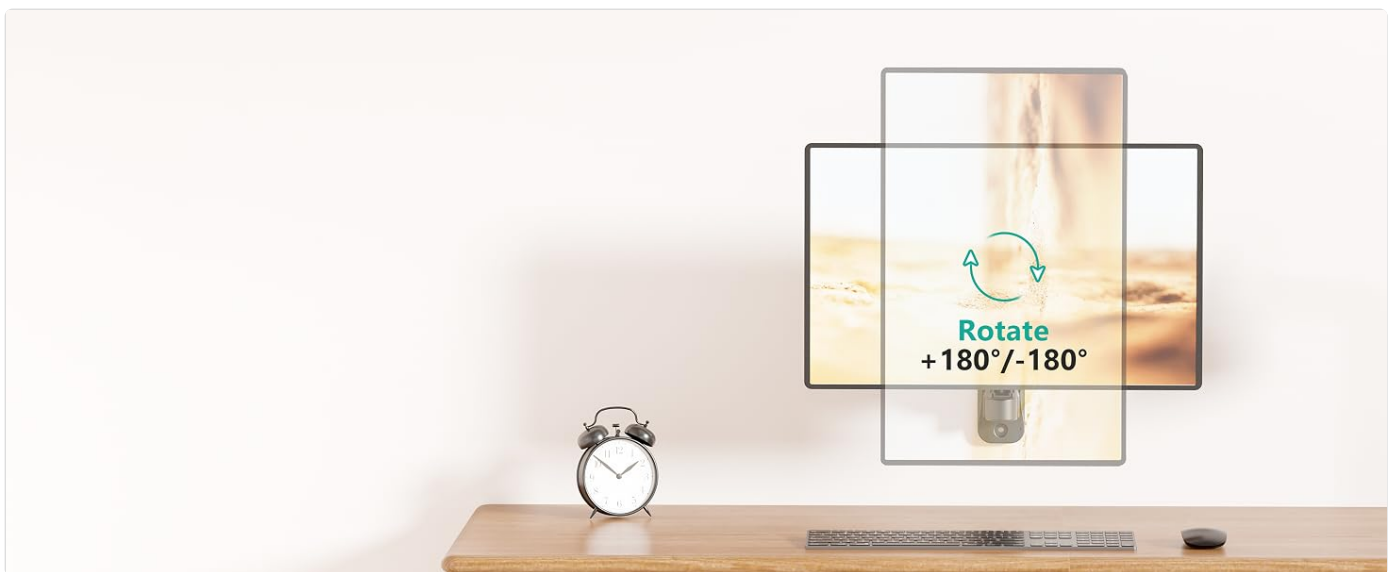


Figure 7: Gas spring tension adjustment for monitor weight.

MAINTENANCE

To ensure the longevity and optimal performance of your WALI Monitor Wall Mount, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the mount with a soft, damp cloth to remove dust and dirt. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Periodic Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Gas Spring:** If the monitor does not hold its position, re-adjust the gas spring tension as described in the "Operating and Adjustments" section.

TROUBLESHOOTING

If you encounter issues with your WALI Monitor Wall Mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Monitor sags or does not hold position.	Gas spring tension is too low for the monitor's weight.	Increase gas spring tension by turning the adjustment screw clockwise. Refer to "Gas Spring Tension Adjustment" in the Operating section.
Monitor is difficult to move or adjust.	Gas spring tension is too high for the monitor's weight, or pivot points are too tight.	Decrease gas spring tension by turning the adjustment screw counter-clockwise. Loosen screws at pivot points slightly if movement is still stiff.
Mount feels unstable on the wall.	Improper installation or loose wall mounting screws.	Ensure wall anchors are correctly installed and all wall mounting screws are securely tightened. Verify the wall structure can support the weight.

SPECIFICATIONS

- Model:** GSWM001S
- Material:** Metal
- Color:** Black
- Screen Size Compatibility:** 13" - 32"
- Weight Capacity:** 4.4 lbs - 19.8 lbs
- VESA Compatibility:** 75x75mm, 100x100mm
- Arm Extension (Max):** 13.4 inches
- Profile (Min):** 3.2 inches
- Tilt Range:** +75° / -45°
- Swivel Range:** +90° / -90° (at arm joint), +180° / -180° (at VESA plate)
- Rotation:** 360°
- Product Dimensions:** 17.44 x 7.2 x 3.46 inches
- Item Weight:** 3.15 pounds

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or visit the official WALI website. WALI provides experienced and friendly US-based customer support available to assist 7 days a week. For any questions or assistance, please contact WALI customer support via email.

Contact Information: Please refer to the contact details provided on the product packaging or the official WALI website for the most up-to-date support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question