

Adonit ADNB

Adonit Note Stylus Pen User Manual

Model: ADNB

INTRODUCTION

The Adonit Note is a high-precision stylus designed for seamless writing and drawing on compatible iPad models. It features natural palm rejection, an ultra-fine tip for accuracy, and a simple power-on operation without the need for Bluetooth pairing. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Adonit Note stylus.

COMPATIBILITY

The Adonit Note stylus is compatible with a range of iPad models. To ensure proper functionality, your iPad must be updated to iOS 13.3 or above. Additionally, any previously connected digital styluses, such as the Apple Pencil, must be disconnected before using the Adonit Note.

Compatible iPad Models:

- iPad Air (3rd / 4th Generation)
- iPad mini (5th Generation)
- iPad (6th / 7th / 8th Generation)
- iPad Pro (3rd / 4th Generation, 11" & 12.9")

For specific model numbers and further compatibility details, please refer to the Adonit support website:
www.adonit.net/support/

COMPATIBILITY



iPad Pro
(3rd / 4th Gen, 11" & 12.9")



iPad Air
(3rd / 4th Gen)



iPad
(6th / 7th / 8th Gen)



iPad Mini
(5th Gen)

* All iPad models should be updated to iOS 13.3 or above

* Disconnect any previously connected digital stylus, such as Apple Pencil

*Not sure your model numbers? Please view the Adonit website.

<https://www.adonit.net/support/>

This image illustrates the range of iPad models compatible with the Adonit Note stylus, including iPad Pro (3rd/4th Gen, 11" & 12.9"), iPad Air (3rd/4th Gen), iPad (6th/7th/8th Gen), and iPad Mini (5th Gen).

SETUP

The Adonit Note is designed for immediate use without complex pairing procedures. Simply press the power button to begin writing or drawing.

Getting Started:

1. Ensure your compatible iPad is updated to iOS 13.3 or newer.
2. If you have previously connected another digital stylus (e.g., Apple Pencil) to your iPad, disconnect it from your iPad's Bluetooth settings.
3. Locate the power button on the barrel of the Adonit Note stylus.
4. Press the power button once to turn on the stylus. A small LED indicator will illuminate.
5. The stylus is now ready for use on your iPad. No Bluetooth connection is required.

NO NEED TO CONNECT TO BLUETOOTH

Simply hit the "on" button on your device and write away.



This image highlights the power button on the Adonit Note stylus, emphasizing that no Bluetooth connection is needed for operation. Simply press the button to turn it on.

OPERATING

The Adonit Note offers a natural and precise writing experience with several key features.

Natural Palm Rejection:

Rest your hand comfortably on the iPad screen while writing or drawing. The Adonit Note's palm rejection technology ensures that only the stylus input is registered, preventing accidental marks from your palm.

NATIVE PALM REJECTION

Rest your palm comfortably on the screen while you write.




This image shows a user's hand resting naturally on the iPad screen while writing with the Adonit Note, illustrating the effective palm rejection feature.

High Accuracy and Fluency:

The ultra-fine 1mm tip of the Adonit Note provides exceptional precision, allowing for detailed writing and drawing. Experience smooth, lag-free performance for all your creative and note-taking needs.

HIGH ACCURACY AND FLUENCY

You can write or draw pictures as small as ants.

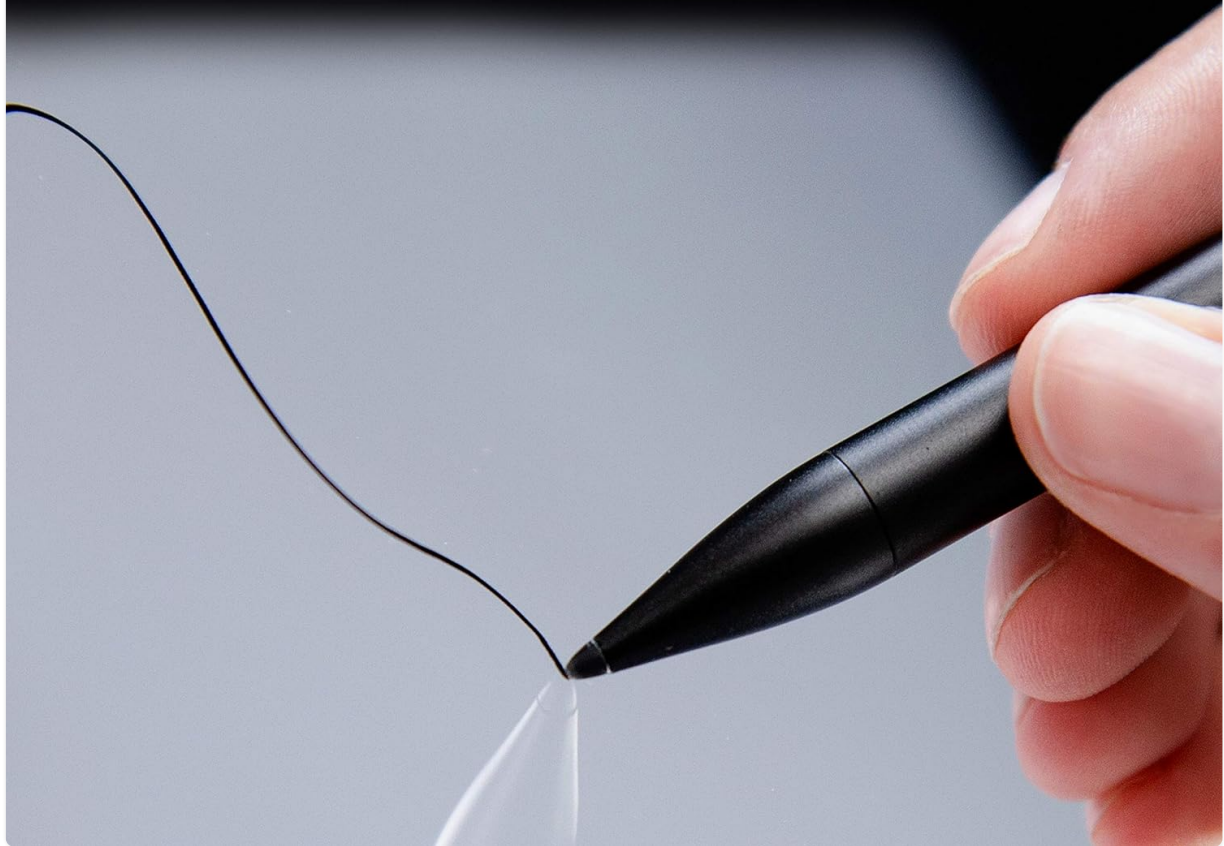


This image provides a close-up view of the Adonit Note stylus tip, showcasing its ability to draw extremely fine and accurate lines on the iPad screen.

Wake Up Notes App:

Quickly access the Notes app on your iPad by simply tapping the Adonit Note stylus on the screen. This feature allows for immediate note-taking without navigating through menus.

WAKE UP NOTES APP

Tap on iPad to activate Notes App.

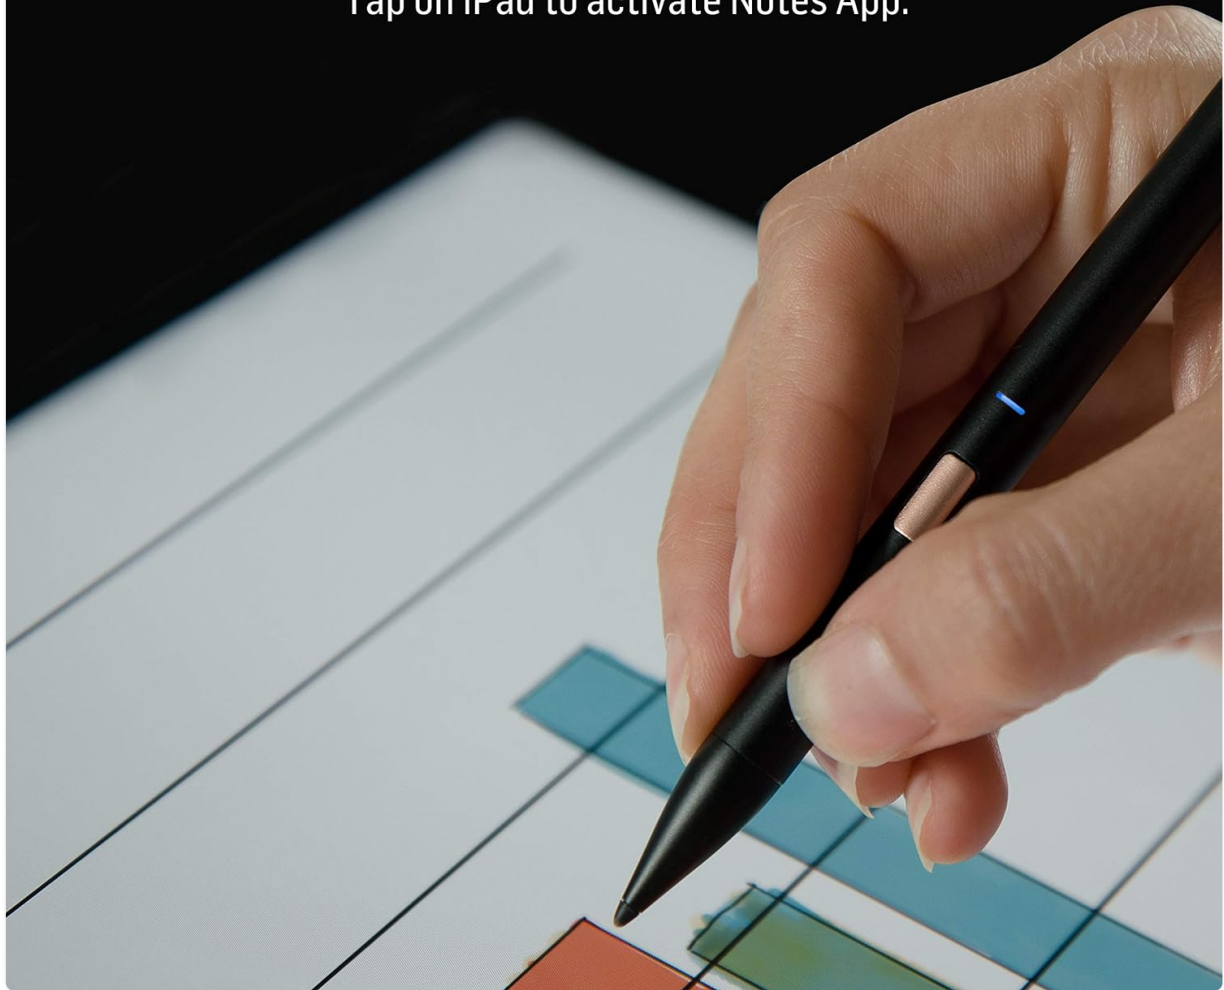

This image demonstrates the 'Wake Up Notes App' feature, where tapping the Adonit Note stylus on the iPad screen instantly opens the Notes application.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your Adonit Note stylus.

Charging the Stylus:

The Adonit Note features fast charging capabilities. A 4-minute quick charge provides approximately 1 hour of usage time. A full charge allows for up to 12 hours of continuous use. Use the included Micro-USB cable to charge the stylus.

WRITE AND CHARGE AT THE SAME TIME

A 4-minutes quick charge provides a 1-hour using time.
Works for 12 hours straight on a full charge.



4 mins = 1 hr quick charge

This image displays the Micro-USB charging ports on the Adonit Note styluses, illustrating the charging method.

Replacing the Tip:

The Adonit Note uses a spiral tip design that can be easily replaced if it becomes worn or damaged. Replacement tips are available separately.

1. Gently twist the existing tip counter-clockwise to unscrew it from the stylus.
2. Align the new tip with the stylus and twist it clockwise until securely fastened.

REPLACEABLE TIP

The Adonit Note uses a spiral tip that can be replaced easily.



This image visually demonstrates the process of replacing the spiral tip on the Adonit Note stylus by twisting it.

TROUBLESHOOTING

If you encounter issues with your Adonit Note stylus, please refer to the following common solutions:

- **Stylus Not Responding:**

- Ensure the stylus is charged. Connect it to the Micro-USB cable and a power source.
- Verify that the stylus is turned on by pressing the power button. The LED indicator should be illuminated.
- Check your iPad's iOS version. It must be iOS 13.3 or above for optimal compatibility.
- Confirm that any other digital styluses (e.g., Apple Pencil) are disconnected from your iPad's Bluetooth settings.

- **Inaccurate or Skipping Lines:**

- Inspect the stylus tip for wear or damage. If worn, replace it with a new Adonit Note tip.
- Ensure your iPad screen is clean and free of smudges or debris.

- **Palm Rejection Not Working:**

- Verify your iPad's iOS is up to date.
- Ensure no other styluses are connected via Bluetooth, as this can interfere with palm rejection.
- **No Pressure Sensitivity or Tilt:**
 - Please note that the Adonit Note stylus does not support pressure sensitivity or tilt functionality. This is by design for a consistent writing experience.

SPECIFICATIONS

Feature	Detail
Model Number	ADNB
Dimensions (L x W x H)	6.02 x 0.36 x 0.36 inches (15.29 x 0.91 x 0.91 cm)
Item Weight	0.106 ounces (3 grams)
Material	Aluminum
Battery Type	1 Lithium Polymer battery (included)
Battery Life (Standby)	Up to 12 hours
Charging Port	Micro-USB
Color	Black
Operating System Compatibility	iOS (version 13.3 or above required)

WARRANTY AND SUPPORT

Adonit provides a 12-month warranty for the Adonit Note stylus and its parts, ensuring quality and durability.

What's in the Box:

- Adonit Note Stylus x 1
- Micro-USB Cable x 1
- User Guide x 1

Additional Resources:

- For the official User Manual (PDF), please visit:[Adonit Note User Manual PDF](#)
- For further support and FAQs, visit the Adonit support website:www.adonit.net/support/

For any inquiries or assistance, please contact Adonit customer support through their official website.