

Dr Trust IGH00165

Dr Trust USA 3-in-1 Nano Ionic Facial Steamer, Humidifier, and Towel Warmer

Model: IGH00165

INTRODUCTION

The Dr Trust USA 3-in-1 Nano Ionic Facial Steamer, Humidifier, and Towel Warmer is a versatile appliance designed for personal care. It combines three functions: a facial steamer for skin rejuvenation, a room humidifier to add moisture to the air, and a towel warmer for warm, moist towels. This manual provides essential information for safe and effective use.



Figure 1: Dr Trust USA 3-in-1 Nano Ionic Facial Steamer, Humidifier, and Towel Warmer.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of burns, electrocution, fire, or injury, always follow these basic safety precautions:

- Read all instructions before use.
- Do not operate if the cord or plug is damaged.
- Keep the appliance away from water. Do not immerse in water or other liquids.
- Unplug from the outlet when not in use and before cleaning.
- Do not use outdoors.
- Use only pure, filtered water in the water tank.
- Keep out of reach of children.
- Do not add essential oils or other substances directly into the water tank. Use the designated aroma tray if available.
- Ensure the device is placed on a stable, flat surface during operation.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Dr Trust 3-in-1 Steamer:

- **Steam Spout:** Directs steam.
- **Water Tank (225 ml capacity):** Holds water for steaming and humidifying.
- **Control Knob:** Selects operating modes (Off, Warm Towel, Facial Steamer, Humidifier).
- **Towel Chamber:** For warming small towels.
- **Inner Ionization Plate:** Generates nano-ionic steam.
- **Auto Shut-off Sensor:** Safety feature to prevent dry boiling.
- **Measuring Cup:** For accurate water filling.



Figure 2: Key components of the Dr Trust 3-in-1 Nano Ionic Facial Steamer.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wipe the exterior of the unit with a soft, damp cloth. Ensure the water tank and steam spout are clean.
3. **Fill Water Tank:**
 - Remove the water tank from the main unit.
 - Use the provided measuring cup to fill the water tank with pure, filtered water. Do not exceed the maximum fill line.
 - Securely place the water tank back into the main unit.



Get Your Steam Session Started Instantly



Rapid Mist Generation within Seconds

18,000 Times Finer Steam Particles Delivers Quicker Results

Feel Good, Look Great, and Breathe Easy With All-in-1 Device



Facial Steamer & Inhaler
Unclogs Pores & Clears Sinuses



Towel Warming Function
Bring the Spa Home



Built-in Humidifier
Adds Moisture To Dry Indoor Air

Figure 3: Filling the water tank with pure, filtered water.

- Connect Power:** Plug the power cord into a suitable electrical outlet (220V, 50Hz).

OPERATING INSTRUCTIONS

1. Facial Steamer Mode

This mode generates nano-ionic steam to open pores, cleanse skin, and improve product absorption.

- Ensure the water tank is filled.
- Turn the control knob to the "Facial Steamer" setting.
- Steam will begin to generate within seconds.
- Position your face approximately 20 cm (8 inches) from the steam spout. Close your eyes and relax.
- The facial steaming session typically lasts 15-20 minutes. The device will automatically shut off when the water level is low.




Get Your Steam Session Started Instantly

Rapid Mist Generation within Seconds

18,000 Times Finer Steam Particles Delivers Quicker Results

Feel Good, Look Great, and Breathe Easy With All-in-1 Device



Facial Steamer & Inhaler
Unclogs Pores & Clears Sinuses



Towel Warming Function
Bring the Spa Home



Built-in Humidifier
Adds Moisture To Dry Indoor Air

Figure 4: Using the facial steamer for skin rejuvenation.


Fruit Sauna Facial / Aromatherapy

For an enhanced experience, you can add fruits, vegetables, or essential oils:

1. Unlock and remove the steam head.
2. Place small pieces of fruits, vegetables, or a few drops of essential oil into the designated aroma tray (if available) or a small beaker placed in the towel chamber.
3. Replace the steam head and lock it into position.
4. Proceed with facial steaming as described above.

Elevate Your Glow with Nano Ionic Steam

All-in-One Solution for Glowing Skin & Clear Breathing

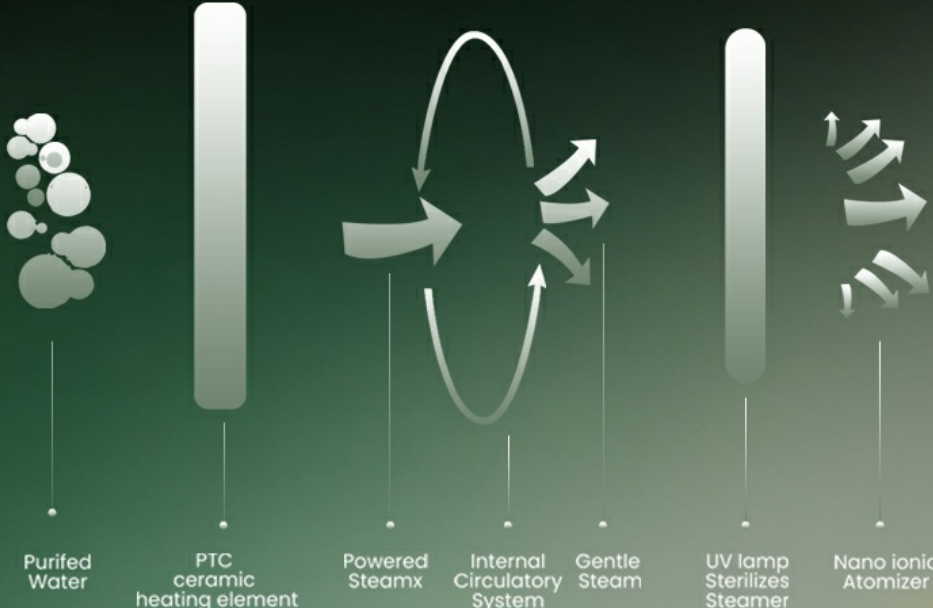

Purified Water

PTC ceramic heating element

Powered Steamx

Internal Circulatory System

Gentle Steam

UV lamp Sterilizes Steamer

Nano ionic Atomizer

2. Humidifier Mode

Use this mode to add moisture to the air in your room, helping to alleviate dry skin, irritated sinuses, and congestion.

1. Ensure the water tank is filled.
2. Turn the control knob to the "Humidifier" setting.
3. The device will start humidifying the room within 30 seconds.
4. This mode can run for up to 30-40 minutes on a full tank, depending on the setting.


3. Warm Towel Mode

Quickly warm small towels or flannels for a soothing experience, ideal for relaxing tired eyes, relieving headaches, or removing makeup.

1. Ensure the water tank is filled.
2. Unlock and remove the steam head.
3. Roll up a small, clean towel or flannel and place it into the towel chamber.
4. Replace the steam head and lock it into position.
5. Turn the control knob to the "Warm Towel" setting.
6. Allow a few minutes for the towel to warm and become moist.
7. Carefully remove the warm towel (it may be hot) and apply it to your face or desired area.

Easy Fill, Easy Use 225 ml BPA-Free Tank

With One Fill,
Enjoy Steam for
up to 15–40 Minutes
(depending on
your setting).

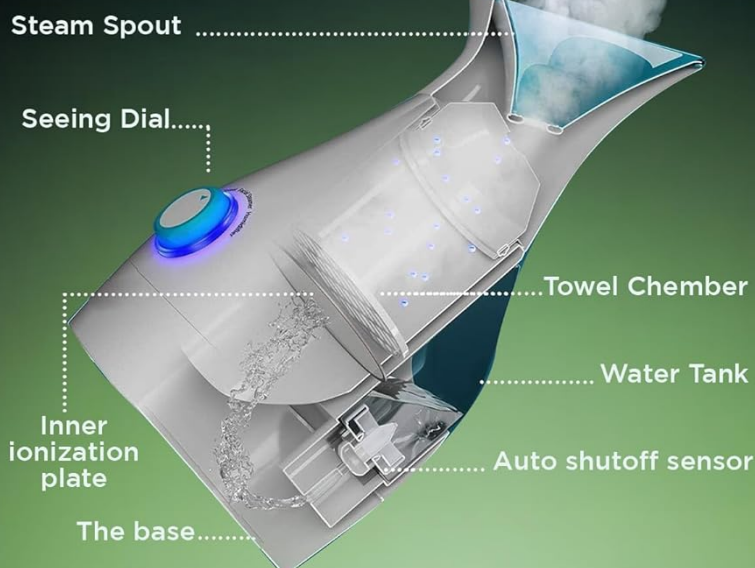

One Device, Endless Benefits



Moisturize
your skin



Curb the
growth of acne &
Remove Dead Skin



Open and
unclogged pores



Improve Skin
Products Absorption



Quickly Clear Sinus
and Congestion

Figure 6: Preparing a warm towel using the towel warming function.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your device.

1. **Unplug:** Always unplug the device and allow it to cool completely before cleaning.
2. **Empty Water Tank:** Remove the water tank and empty any remaining water.
3. **Clean Water Tank:** Rinse the water tank with clean water. For thorough cleaning, use a mild detergent and a soft brush, then rinse thoroughly.
4. **Clean Steam Spout/Towel Chamber:** Wipe the steam spout and towel chamber with a soft, damp cloth. If mineral deposits accumulate, use a solution of white vinegar and water (1:1 ratio) to gently clean, then rinse with clean water.
5. **Dry:** Ensure all parts are completely dry before reassembling or storing the device.
6. **Storage:** Store the device in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam production.	Water tank empty or not properly seated. Device not plugged in.	Fill water tank and ensure it's correctly placed. Check power connection.
Weak steam output.	Mineral buildup in the heating element. Insufficient water.	Clean the heating element as per maintenance instructions. Ensure water tank is adequately filled.
Device shuts off unexpectedly.	Low water level (auto shut-off activated). Overheating.	Refill water tank. Allow device to cool down before restarting.

SPECIFICATIONS

Feature	Detail
Model Name	IGH00165
Brand	Dr Trust
Functions	Facial Steamer, Room Humidifier, Towel Warmer
Water Tank Capacity	225 Milliliters
Power Source	Corded Electric (220V, 50Hz)
Material	Plastic
Item Weight	1 kg
Item Dimensions (LxWxH)	20 x 16 x 31 Centimeters
Manufacturer	Nureca Limited
Country of Origin	India

WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the warranty card included with your product or visit the official Dr Trust website. Contact details for customer support are typically provided in the product packaging or on the manufacturer's website.

Manufacturer Contact: Nureca Limited, B2-166, Time Square, 7th and 8th Floor, CTS No 349 and 349-1, Western Express Highway, Andheri East, Mumbai, Mumbai City, Maharashtra, 400069, India. Tel: 7527013265.