

[Manuals.plus](#) /

› [MEE audio](#) /

› MEE audio MX1 PRO In-Ear Monitor Headphones User Manual

MEE audio MX1 PRO

MEE audio MX1 PRO In-Ear Monitor Headphones User Manual

Model: MX1 PRO

Brand: MEE audio

INTRODUCTION



Image: MEE audio MX1 PRO In-Ear Monitor Headphones.

The MEE audio MX1 PRO In-Ear Monitor Headphones are designed for musicians and audio enthusiasts seeking balanced sound performance, noise isolation, and a durable, modular design. Featuring a single full-range dynamic driver, these monitors deliver clear audio with balanced bass and crisp detail, suitable for various applications including mixing, monitoring, and general listening.



MX1 PRO Dynamic-Driver In-Ear Monitors

Single full-range moving coil driver tuned for balanced audio performance

MX1 PRO DYNAMIC DRIVER



Advanced Moving Coil Driver

delivers dynamic audio with well-balanced bass, good clarity, and crisp detailing

Balanced Audio Performance



suggested for: monitoring, mixing, general listening

Image: MX1 PRO Dynamic Driver and Balanced Audio Performance.

What's in the Box

Your MEE audio MX1 PRO package includes the following components:

- MX1 PRO In-Ear Monitors (Clear)
- Standard Audio-Only Cable
- Headset Cable with Built-in Microphone and Remote
- Protective Carrying Case
- Comply™ Memory Foam Eartips
- Silicone Eartips (4 pairs)
- Shirt Clips (2 pairs)
- 1/4" (6.3mm) Adapter
- User Manual (this document)



Superior Fit & Comfort

Flexible over-the-ear memory wire provides a secure fit for all ears and all-day comfort

Image: All components included in the MEE audio MX1 PRO package.

SETUP

1. Attaching the Cables

The MX1 PRO features detachable cables for easy replacement and customization. To attach a cable:

1. Identify the left (L) and right (R) earpieces and cable connectors.
2. Align the connector notch on the cable with the connector grooves on the earpiece.
3. Push the connector firmly into the earpiece until it clicks into place. Ensure a secure connection.

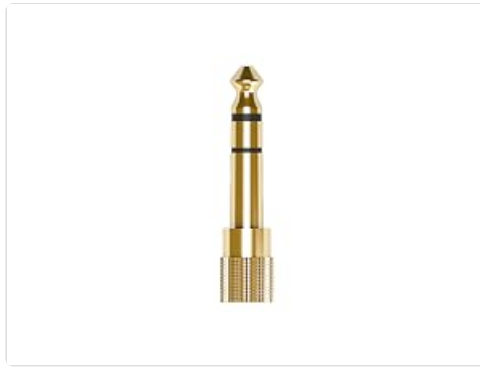


Image: Proper cable attachment to the in-ear monitor.

2. Choosing and Installing Eartips

Selecting the correct eartips is crucial for optimal sound quality and comfort. Experiment with the included silicone and Comply™ memory foam eartips to find the best fit for your ears.

1. Gently remove the pre-installed eartips by pulling them off the nozzle.
2. Select a new pair of eartips. For memory foam tips, compress them before insertion.
3. Push the new eartip onto the earpiece nozzle until it is securely seated.


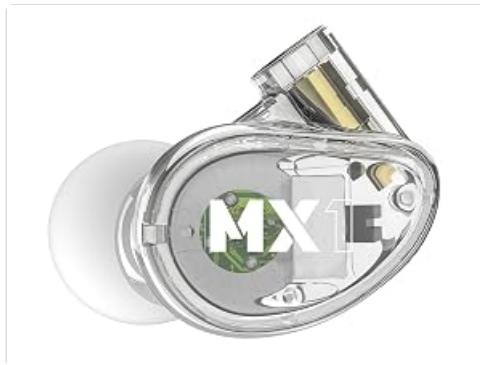


Image: Steps for replacing eartips.

3. Wearing the In-Ear Monitors

The MX1 PRO is designed for an over-the-ear fit with memory wire for secure placement.

1. Identify the left (L) and right (R) earpieces.
2. Place the earpiece into your ear canal.
3. Loop the memory wire cable over and behind your ear. Adjust the memory wire to conform to the shape of your ear for a secure and comfortable fit.
4. Use the included shirt clips to secure the cable to your clothing, reducing cable noise and preventing accidental dislodgement.

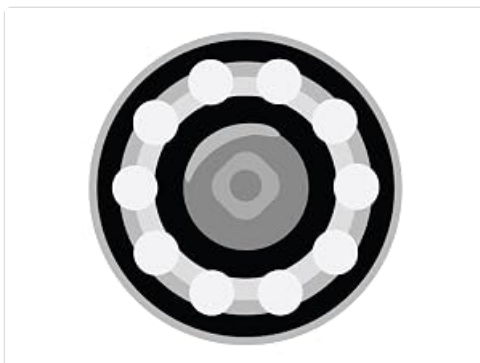

Images: Correct insertion and over-the-ear cable routing.



Image: Using the shirt clip for cable management.

OPERATING INSTRUCTIONS

Connecting to Audio Devices

Plug the 3.5mm jack of the chosen cable into your audio source (e.g., smartphone, tablet, computer, mixing console). If connecting to a device with a 1/4" (6.3mm) jack, use the included adapter.

Using the Headset Cable (with Microphone and Remote)

The headset cable allows for hands-free calls and media control with compatible smartphones and tablets. Refer to your device's manual for specific remote control functions (e.g., play/pause, track skip, answer/end call).

MAINTENANCE

Cleaning the Earpieces and Eartips

Regular cleaning helps maintain sound quality and hygiene.

- Remove eartips from the earpieces.
- Wipe the earpieces and eartips with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- Ensure all components are completely dry before reattaching eartips and using the monitors.

Cable Care

To prolong the life of your cables:

- Avoid sharp bends or kinks in the cable.
- Do not pull on the cable to disconnect it from devices or earpieces; always grasp the connector.
- Store the cables neatly, preferably coiled, in the provided carrying case when not in use.

Storage

Always store your MX1 PRO in the protective carrying case to prevent damage from impacts, dust, and tangling.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or sound from only one side	Loose cable connection, incorrect earpiece insertion, faulty audio source.	Ensure cables are fully seated. Re-insert earpieces. Test with another audio source.
Poor sound quality (e.g., muffled, lacking bass)	Improper eartip seal, dirty eartips/nozzle, incorrect eartip size.	Adjust earpiece position for a tight seal. Clean eartips and nozzle. Try different eartip sizes.

Problem	Possible Cause	Solution
Discomfort or earpieces falling out	Incorrect eartip size, improper memory wire adjustment.	Experiment with different eartip sizes. Re-shape the memory wire for a more secure fit around your ear.

SPECIFICATIONS

Feature	Detail
Model Name	MX1 PRO
Driver Type	Dynamic Driver
Connectivity Technology	Wired (Detachable Cables)
Headphones Jack	3.5 mm Jack (1/4" adapter included)
Ear Placement	In Ear (Over-the-ear fit with memory wire)
Noise Control	Sound Isolation
Item Weight	0.8 Ounces
Color	Clear
Manufacturer	MEE audio
UPC	616312624898

OFFICIAL PRODUCT VIDEOS

MEE Professional MX1 PRO Dynamic-Driver In-Ear Monitors

Your browser does not support the video tag.

Video: An overview of the MEE Professional MX1 PRO Dynamic-Driver In-Ear Monitors, highlighting their features and balanced audio performance.
(Duration: 0:37)

MEE Professional Modular In-Ear Monitors

Your browser does not support the video tag.

Video: Demonstrates the modular design of MEE Professional In-Ear Monitors, showcasing how components can be interchanged and customized.
(Duration: 0:56)

WARRANTY AND SUPPORT

MEE audio products are designed for durability and performance. For specific warranty information and support, please refer to the official MEE audio website or contact their customer service.

Optional protection plans are available for purchase to extend coverage beyond the standard manufacturer's warranty:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan covering multiple eligible purchases)

For further assistance, visit the [MEE audio Store on Amazon](#) or contact MEE audio directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question