

Serta Serta Motion Essentials 3 (III)

Serta Motion iSeries / Motion Essentials III Replacement Remote Control User Manual

Model: Serta Motion Essentials 3 (III)



1. INTRODUCTION

This user manual provides essential information for the proper setup, operation, and maintenance of your new Serta Motion iSeries or Motion Essentials III Replacement Remote Control. This genuine Serta replacement remote is designed to restore full functionality to your compatible adjustable bed base.



Image: Front view of the Serta Motion iSeries / Motion Essentials III Replacement Remote Control, showing the 'HEAD', 'FOOT', 'FLAT', and 'ZERO G' buttons, and the Serta logo.

2. COMPATIBILITY

This replacement remote control is specifically designed to work with the following Serta adjustable bed bases:

- **Serta Motion iSeries** adjustable bed bases
- **Serta Motion Essentials III** adjustable bed bases

Important Note: If your current bed base includes a massage function and features 6 buttons on its remote, you likely require the Motion Essentials 4 version. This remote does not support massage options. Please verify your bed base model before attempting to pair this remote.

3. SETUP

3.1 Battery Installation

The remote control requires **3 AAA batteries** (not included). To install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover open in the direction indicated by the arrow (if present).
3. Insert 3 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

3.2 Pairing the Remote Control

This remote requires pairing with your adjustable bed base to function. The pairing process is generally straightforward:

1. **Locate the Control Box:** Find the control box attached to your adjustable bed frame, usually underneath the bed.
2. **Power Cycle (if necessary):** Unplug the bed base from the power outlet for 30 seconds, then plug it back in. This can help reset the system for pairing.
3. **Press the Pairing Button:** On the control box, there should be a small button, often labeled "Pair," "Learn," or "Sync." Press and hold this button for approximately 3-5 seconds. The indicator light on the control box should begin to flash.
4. **Pair the Remote:** While the control box light is flashing, immediately press and hold the "FLAT" button on your new remote control. Hold it until the indicator light on the control box stops flashing and remains solid, or until the bed base responds.
5. **Test Functionality:** Release the button on the remote. Test all buttons on the remote (HEAD, FOOT, FLAT, ZERO G) to ensure proper operation.

If the remote does not pair successfully, repeat the steps. Ensure you are within close proximity to the bed base during the pairing process.

4. OPERATING INSTRUCTIONS

The Serta Motion iSeries / Motion Essentials III remote control features intuitive buttons for adjusting your bed base:

- **HEAD Up (▲):** Press and hold to raise the head section of the bed.
- **HEAD Down (▼):** Press and hold to lower the head section of the bed.
- **FOOT Up (▲):** Press and hold to raise the foot section of the bed.
- **FOOT Down (▼):** Press and hold to lower the foot section of the bed.
- **FLAT:** Press to return the bed to a completely flat position.
- **ZERO G:** Press to move the bed to the "Zero Gravity" preset position, which elevates the head and foot to promote pressure relief and circulation.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace all three AAA batteries at the same time.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.
- **Protection:** Avoid dropping the remote or exposing it to excessive moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead batteries.	Replace with new AAA batteries.
Remote not responding.	Remote is not paired.	Follow the "Pairing the Remote Control" steps in Section 3.2.
Remote not responding.	Power outage or bed unplugged.	Ensure the bed base is properly plugged into a working power outlet. Check for tripped circuit breakers.
Bed only moves in one direction.	Obstruction under the bed.	Check for any objects obstructing the movement of the bed base.
Remote is for a different model.	Incorrect remote for your bed base.	Verify your bed base model and ensure it is compatible with the Serta Motion iSeries or Motion Essentials III remote. This remote does not support Motion Essentials 4 with massage.

7. SPECIFICATIONS

Brand: Serta

Model: Serta Motion Essentials 3 (III)

Product Dimensions: 6 x 2 x 1 inches

Item Weight: 3 ounces

Batteries Required: 3 AAA batteries

Compatible Devices: Serta Motion iSeries and Motion Essentials III adjustable beds

Special Feature: Ergonomic design

Color: Grey

Max Number of Supported Devices: 1

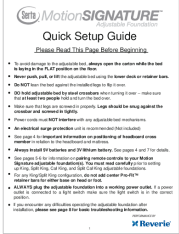





Manufacturer: Motion Essentials Remotes

8. WARRANTY AND SUPPORT

For specific warranty information regarding your Serta Motion iSeries or Motion Essentials III Replacement Remote Control, please refer to the documentation provided with your original adjustable bed base or contact Serta customer support directly. As this is a replacement part, warranty terms may vary.

For technical support or further assistance with pairing and operation, please contact the manufacturer or your point of purchase.

Related Documents - Serta Motion Essentials 3 (III)

	<p>Serta Motion SIGNATURE Adjustable Foundation Quick Setup Guide</p> <p>Comprehensive quick setup guide for the Serta Motion SIGNATURE Adjustable Foundation, covering unpacking, assembly, remote pairing, and troubleshooting. Learn how to install and operate your adjustable bed base.</p>
	<p>Serta Motion Perfect Adjustable Bed Base Owner's Manual & Installation Guide</p> <p>Comprehensive owner's manual and installation guide for the Serta Motion Perfect adjustable bed base by Ergomotion. Learn about safety precautions, parts list, base overview, installation steps, remote control functions, pairing, syncing, troubleshooting, and customer service information.</p>
	<p>Serta Motion Essentials VI Owner's Manual</p> <p>This manual provides instructions for the Serta Motion Essentials VI adjustable base, covering safety precautions, parts list, installation, operation, and troubleshooting.</p>
	<p>Serta Motion Perfect Adjustable Bed Owner's Manual</p> <p>Comprehensive owner's manual for the Serta Motion Perfect adjustable bed base, covering safety precautions, parts list, installation, remote control operation, troubleshooting, and more. Learn how to set up and use your Serta adjustable bed.</p>
	<p>Serta MotionPerfect.II Adjustable Foundation Owner's Manual & Installation Guide</p> <p>Comprehensive guide for the Serta MotionPerfect.II Adjustable Foundation, covering safety precautions, installation steps, remote control operation, troubleshooting, and customer service information. Learn how to set up and use your adjustable bed base.</p>
	<p>Baselogic Platinum Adjustable Base Owner's Manual</p> <p>Comprehensive owner's manual for the Baselogic Platinum Adjustable Base, covering safety information, installation, operation, and troubleshooting. Learn how to set up and use your adjustable bed base for optimal comfort and support.</p>