

Manuals.plus /

› UPTATSUPPLY /

› UPTATSUPPLY Poseidon Tattoo Cartridge Needles Instruction Manual (Model 10)

## UPTATSUPPLY 10

# UPTATSUPPLY Poseidon Tattoo Cartridge Needles

## INSTRUCTION MANUAL - MODEL 10

### Introduction

---

The UPTATSUPPLY Poseidon Tattoo Cartridge Needles are designed for professional tattoo artists, offering precision, stability, and hygiene. This manual provides essential information for the proper use, maintenance, and understanding of your tattoo cartridge needles.

#### Key Features:

- One-time joint design for hygienic standards.
- Constructed from stainless steel for durability and optimal ink flow.
- Special tip material ensures stable needle operation.
- Inner membrane prevents ink spit-back, promoting smoother lines and fewer clogs.
- Compatible with all standard cartridge grips and machines.
- Each cartridge is sterilized by EO Gas and individually blister-packed.

### Product Overview

---

The Poseidon Tattoo Cartridge Needles feature a high-wear-resistant plastic shell, ensuring durability and precision. Every detail is refined to achieve higher standards in tattooing.


# High-Wear-Resistant Plastic Shell

Every detail is refined to achieve higher standards




*Image: High-Wear-Resistant Plastic Shell for durability and precision.*

The cartridges are designed with precision-engineered components, masterfully crafted to redefine artistic precision in tattooing. This includes the needle wire, needle shell, needle cap, and silicone components.

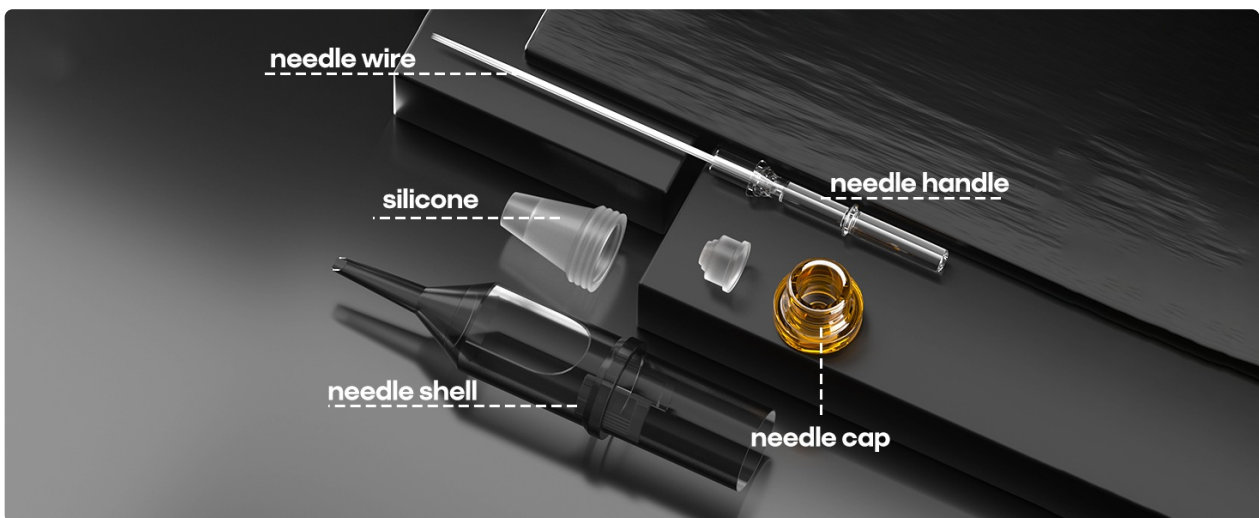

*Image: Precision-engineered components for optimal performance.*

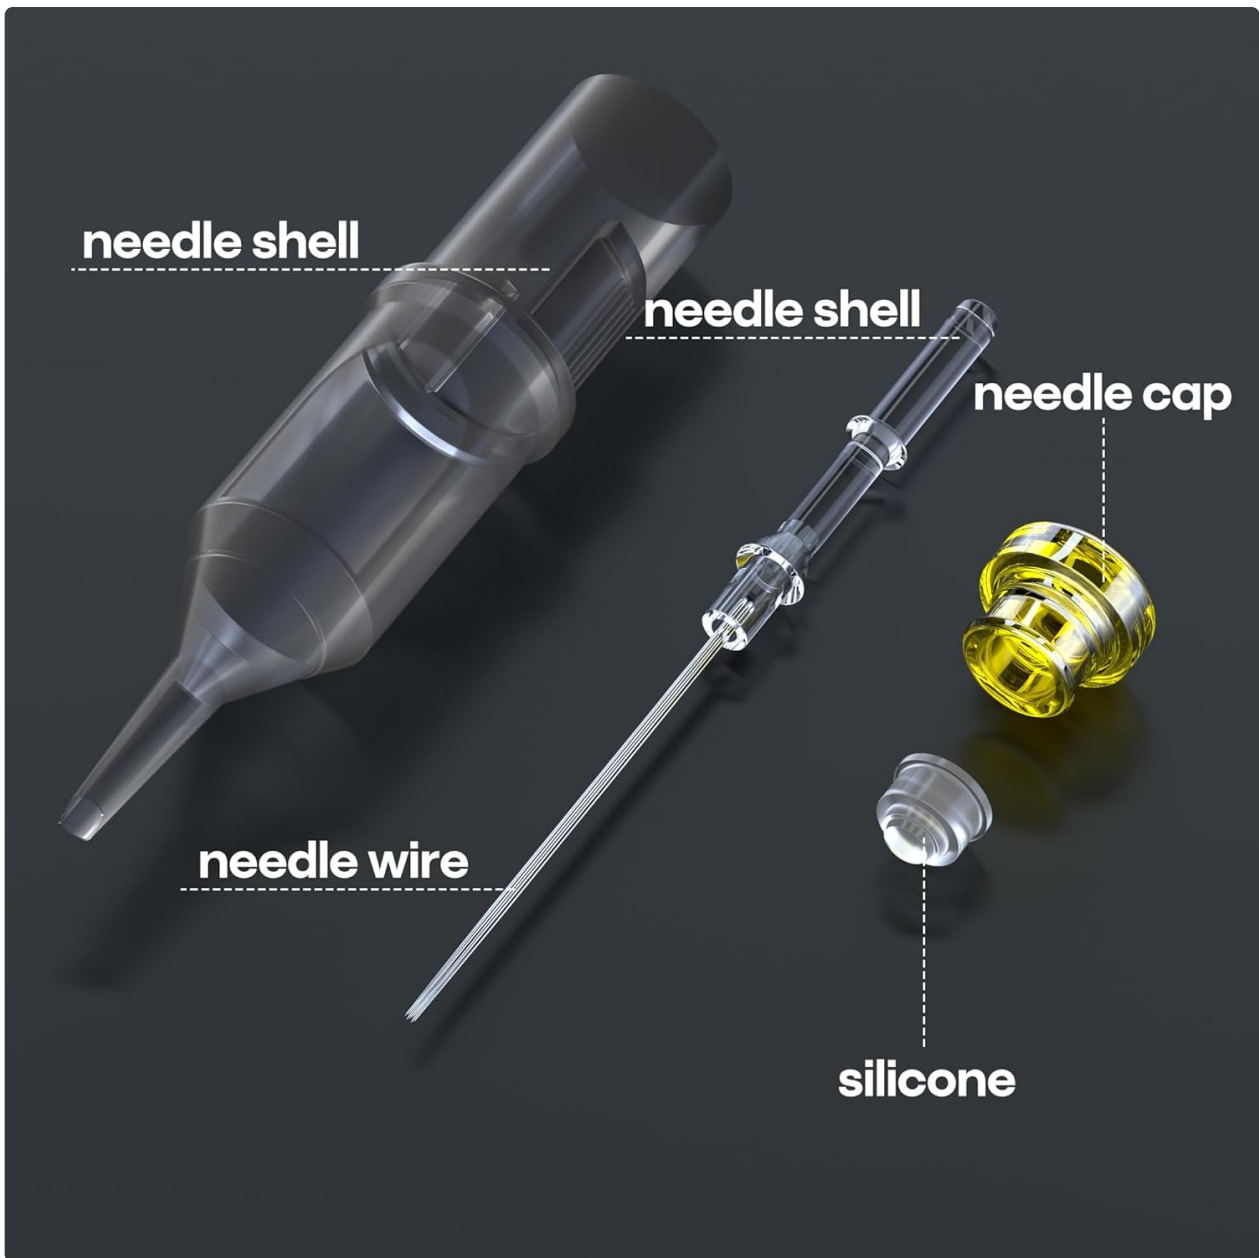


*Image: Detailed view of the needle shell, needle wire, needle cap, and silicone components.*

An anti-backflow membrane is integrated to stop ink spit-back, guaranteeing smoother lines and fewer clogs, which contributes to overall safety and comfort.

# ANTI-BACKFLOW NEEDLE

ANTI-BACKFLOW  
NEEDLE

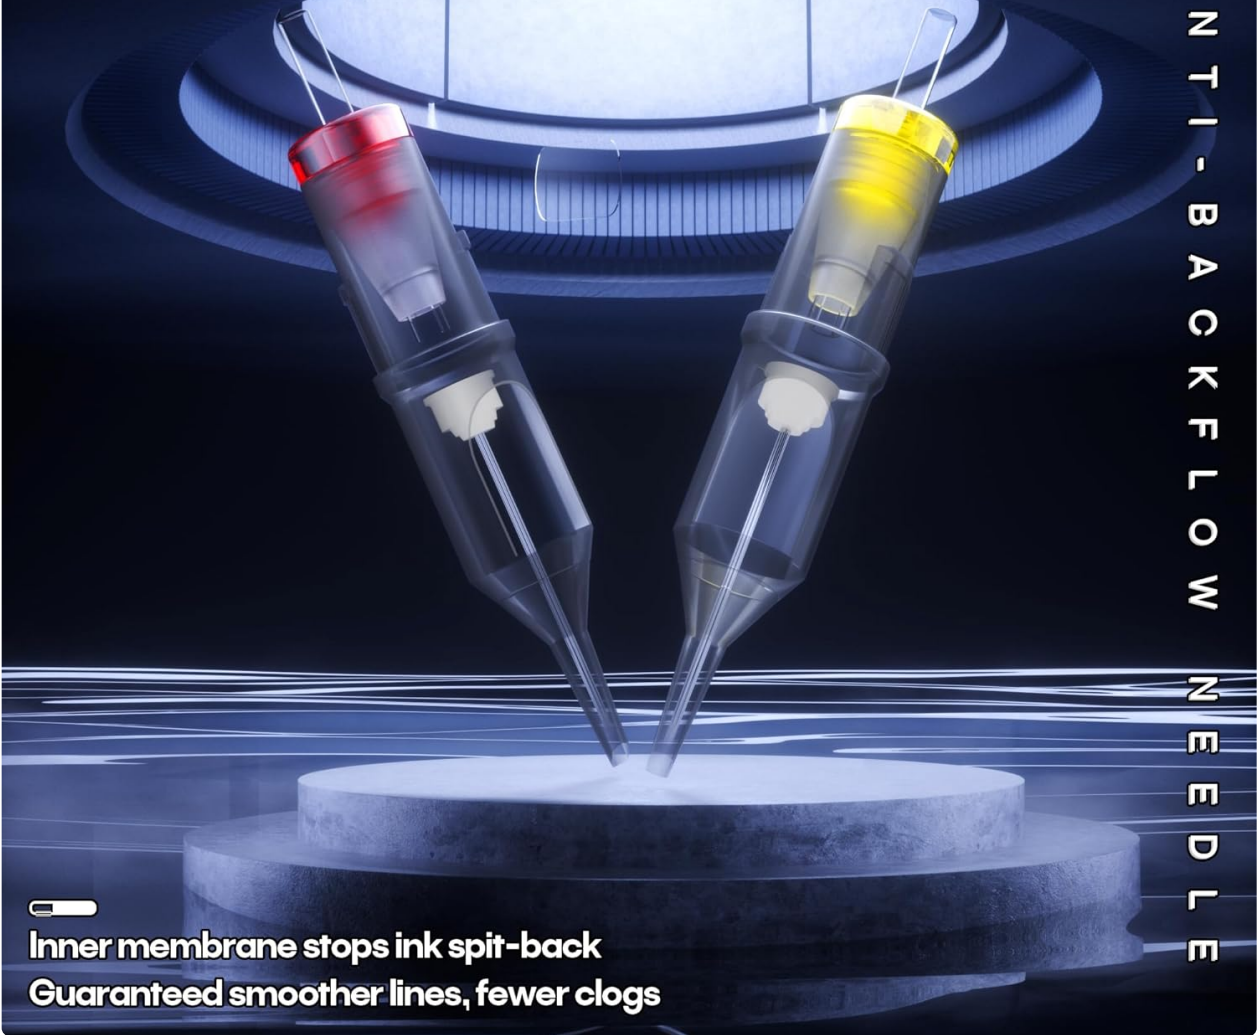

**Inner membrane stops ink spit-back**  
**Guaranteed smoother lines, fewer clogs**

*Image: Illustration of the anti-backflow membrane within the needle cartridge.*

The design prioritizes safety and comfort, aiming to reduce skin lesions and protect the tattoo machine through precise silicone hardness control, adding no extra load on the motor.

# SAFETY

**COMFORTABLE**


**Reduce skin lesions**

**Monitor Rebound Frequency for Safety**

**Protect the machine**

**Precise Silicone Hardness Control**

**No Added Load on the Motor**

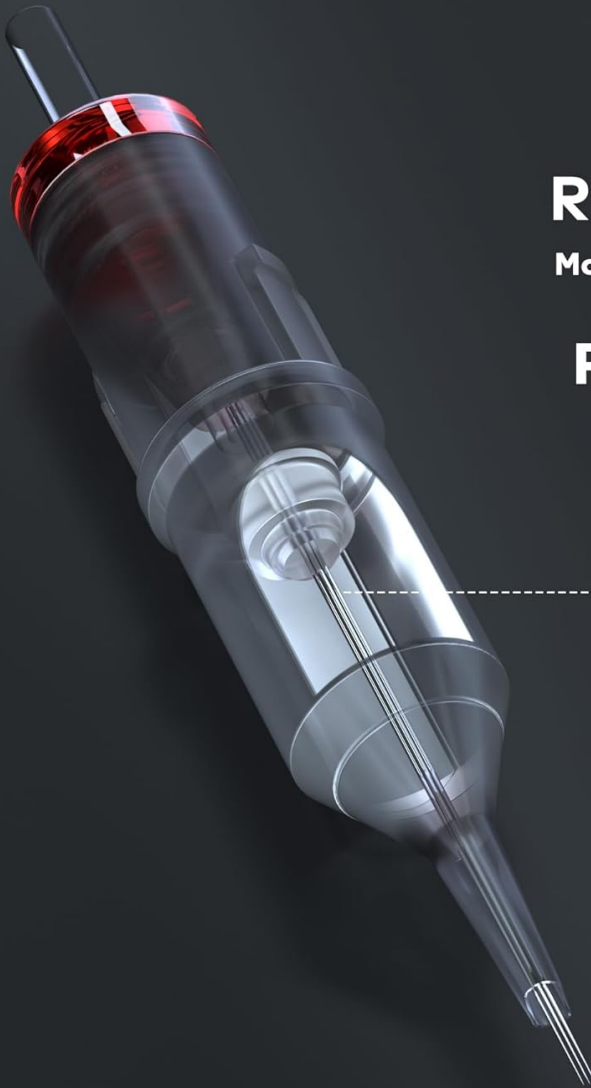

*Image: Visual representation of the safety and comfort features, including silicone hardness control.*

## Setup


Ensure you are working in a clean, sterile environment. Always wear appropriate personal protective equipment, including gloves.

1. **Inspect Packaging:** Before use, carefully inspect each individual blister pack. Ensure the packaging is undamaged and the sterilization indicator is correct. Do not use if the package is compromised.
2. **Select Needle:** Choose the appropriate needle type and size for your tattooing needs. Refer to the specifications section for details on the mixed assortment.
3. **Attach to Machine:** These cartridges are compatible with all standard cartridge grips and machines. Gently insert the cartridge into your tattoo machine's grip until it clicks securely into place.
4. **Check Needle Extension:** Adjust the needle extension on your machine as required for your technique.

The needle and shell are perfectly matched to ensure high stability and smooth ink flow during operation.

# PERFECT MATCH

The needle and shell are perfectly matched to ensure high stability and smooth ink flow.

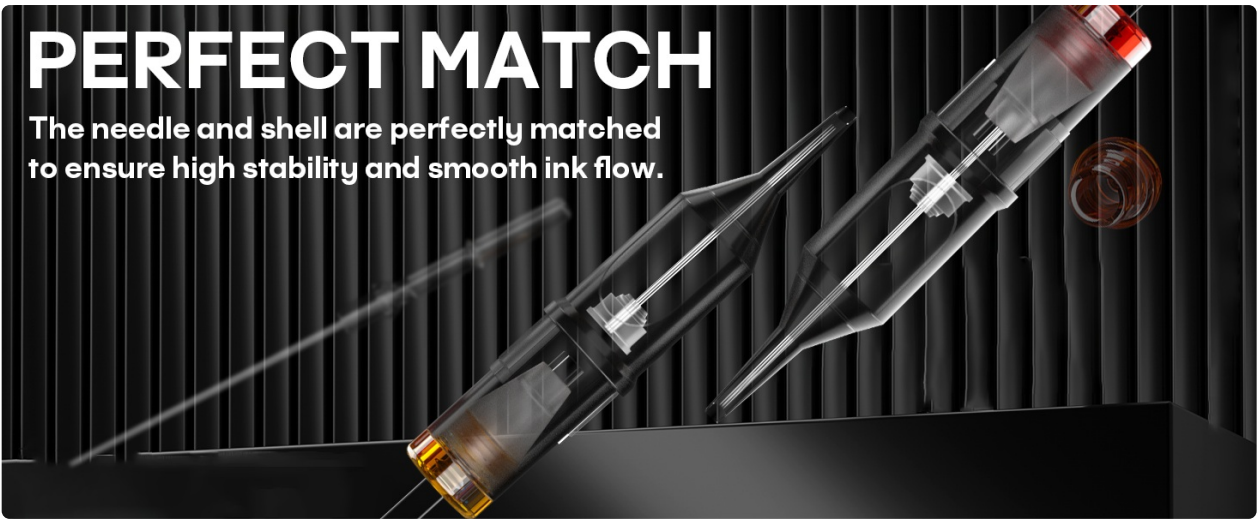

*Image: Illustrates the perfect match between needle and shell for stability.*

The cartridges are designed for broad compatibility with 99% of tattoo pens on the market.



## Compatible with 99% of tattoo pens on the market.

*Image: Demonstrates the cartridge's compatibility with various tattoo pens.*

**Operating**

Once the needle cartridge is securely installed and your machine is set up, you can begin tattooing. The design ensures consistent ink flow and stable needle movement for precise work.

1. **Dip in Ink:** Gently dip the needle tip into your tattoo ink cap. The internal membrane will help draw and hold the ink efficiently.
2. **Begin Tattooing:** Proceed with your tattooing process, maintaining proper technique and hygiene. The stable needle operation and anti-backflow system are designed to enhance your work.
3. **Monitor Performance:** Pay attention to ink flow and needle stability. The high-quality construction aims to provide a consistent experience.

For a visual guide on using the Poseidon Tattoo Cartridge Needles, please watch the official product video below:

Your browser does not support the video tag.

*Video: An overview of the Poseidon Tattoo Cartridge Needles, demonstrating their features and use.*

Your browser does not support the video tag.

*Video: Demonstrates the packaging and various needle types included in the 50-piece set.*

## Maintenance

---

Poseidon Tattoo Cartridge Needles are designed for single-use only to ensure maximum hygiene and safety. Proper disposal after each use is crucial.

1. **Single Use:** Each cartridge is intended for one-time use only. Do not clean, sterilize, or reuse cartridges.
2. **Disposal:** After use, safely remove the cartridge from your machine and dispose of it in a designated sharps container according to local regulations for biohazardous waste.
3. **Storage:** Store unused cartridges in their original, sealed, and undamaged packaging in a cool, dry place away from direct sunlight.

## Troubleshooting

---


While our needles are manufactured to high standards, here are some common issues and potential solutions:

- **Ink Spit-Back:** The integrated inner membrane is designed to prevent ink spit-back. If this occurs, ensure the cartridge is correctly seated in your machine and that the machine's voltage is appropriate for the needle type.
- **Unstable Needle:** The special tip material and precise silicone hardness control aim for stable needle operation. If you experience instability, check that the cartridge is fully engaged with the machine's drive bar and that your machine is functioning correctly.
- **Poor Ink Flow:** Ensure the needle is adequately dipped into the ink cap. If issues persist, verify the ink consistency and check for any blockages in the cartridge.
- **Damaged Packaging:** If any individual blister packing is damaged upon receipt, do not use the needle. Contact customer support for a replacement.

## Specifications

---

The Poseidon Tattoo Cartridge Needles are available in a 50-piece assorted mixed pack, including various configurations for different tattooing techniques. Each needle is sterilized by EO Gas and individually blister-packed.

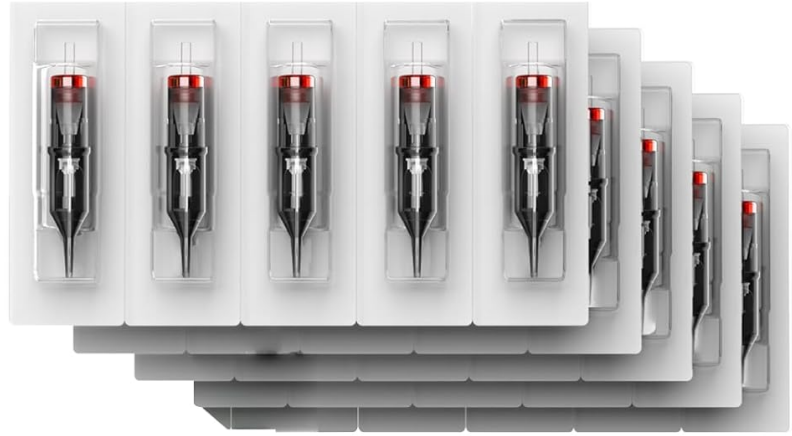

*Image: Example of the individual blister packaging for hygiene.*



**Disinfection  
sign**

**The exact model  
number of the product  
is marked on the back**



**PS:1007RL in 5RL shell/1009RL in 7RL shell.  
1015M1 in 13M1 shell/1021M1 in 19M1 shell.  
1015RM in 13RM shell/1021RM in 19RM shell.  
Cause 0.30mm is thin,suitable for small shell.**

*Image: Close-up of the sterilization indicator and model number on the packaging.*

The mixed assortment typically contains 5 pieces each of the following:

- 1005RL (Round Liner)
- 1007RL (Round Liner)
- 1009RL (Round Liner)
- 1205RS (Round Shader)
- 1207RS (Round Shader)
- 1209RS (Round Shader)
- 1015M1 (Magnum)
- 1021M1 (Magnum)
- 1015CM/RM (Curved Magnum/Round Magnum)
- 1021CM/RM (Curved Magnum/Round Magnum)

*Note: RS-type needles correspond to Model #12; all other needles in this pack are Model #10.*


**Shell Size Note:** Due to the 0.30MM diameter of some needles being very thin, they are housed in slightly larger shells for stability:

- 1007RL in 5RL shell


- 1009RL in 7RL shell
- 1015M1 in 13M1 shell
- 1021M1 in 19M1 shell
- 1015CM in 13CM shell
- 1021CM in 19CM shell


**50**  
pcs


**MIX**





ITEM	TAPER	GAUGE
RL(Round Liner)	7.0mm	0.30mm
RS(Round Shader)	3.5mm	0.35mm
RM(Round Magnum)	3.5mm	0.30mm
M1(Magnum)	3.5mm	0.30mm


  
 1005RL x 5


  
 1205RS X 5


  
 1015CM X 5


  
 1015M1 X 5


  
 1007RL x 5

  
 1207RS X 5

  
 1021CM X 5

  
 1021M1 X 5

  
 1009RL x 5

  
 1209RS X 5

*Image: Table detailing needle types, taper, and gauge in the mixed pack.*

**General Product Specifications:**

- **Product Dimensions:** 9.45 x 6.69 x 4.72 inches
- **Weight:** 8.47 ounces
- **Number of Pieces:** 50
- **Water Resistance Level:** Not Water Resistant

**Warranty and Support**

UPTATSUPPLY is committed to customer satisfaction. We offer a 100% satisfaction guarantee, providing a replacement or full refund for ALL products. No reason needed, smooth and simple!

For any questions, concerns, or support needs, please visit the official UPTATSUPPLY Store on Amazon or contact customer service directly.

**Visit the UPTATSUPPLY Store**