

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gotega](#) /
- › [Gotega 2 Pack 12 Inch Stainless Steel Shower Grab Bar Instruction Manual](#)

Gotega grab2bar

Gotega 2 Pack 12 Inch Stainless Steel Shower Grab Bar Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective installation, operation, and maintenance of your Gotega 2 Pack 12 Inch Stainless Steel Shower Grab Bars. Please read these instructions thoroughly before installation and retain them for future reference. Proper installation is crucial for ensuring the safety and stability of the grab bars.

2. PRODUCT OVERVIEW

The Gotega 2 Pack 12 Inch Stainless Steel Shower Grab Bars are designed to provide reliable support and enhance safety in various areas of your home, particularly in bathrooms. Constructed from durable 304 stainless steel, these grab bars are corrosion-resistant and built for long-term use. Each bar can support up to 500 lbs when properly installed, offering robust assistance for individuals needing extra stability. Their versatile design allows them to be used not only for support in bathtubs and showers but also as towel racks or for hanging clothes. They are suitable for a wide range of users, including seniors, the elderly, children, individuals recovering from surgery, those with limited mobility, and anyone experiencing balance issues.



Toilet



Bathtub



Stairway



Shower

Image: Visual comparison demonstrating enhanced safety with grab bar installation.

IT CAN BE USED HORIZONTALLY OR VERTICALLY



Sideways



Erect

Image: The grab bar can be installed horizontally or vertically to suit user needs.

Suitable For :

- Seniors
- Elderly
- Children
- Postsurgery
- Limited Mobility
- Balance Issues



Image: The grab bar is suitable for seniors, elderly, children, post-surgery patients, individuals with limited mobility, and those with balance issues.

3. PACKAGE CONTENTS

Your Gotega 2 Pack 12 Inch Stainless Steel Shower Grab Bar package includes:

- 2 x 12 Inch Stainless Steel Shower Grab Bars
- Mounting Hardware (screws and wall anchors)



Image: Contents of the 2-pack, including two grab bars and all necessary mounting hardware.

4. SAFETY INFORMATION

- Always ensure the grab bar is securely fastened to a structural support (e.g., wall studs) or using appropriate heavy-duty anchors for your wall type.
- Do not install on drywall alone without proper anchors or stud support.
- Regularly check the grab bar and its mounting hardware for any signs of looseness, corrosion, or damage. Tighten screws as needed.
- Do not exceed the maximum weight capacity of 500 lbs.
- Clean the grab bar regularly to prevent soap scum or mineral buildup, which could reduce grip.

5. INSTALLATION GUIDE

Follow these steps for proper installation of your Gotega Shower Grab Bar:

1. **Prepare the Grab Bar:** Slide the decorative cover over one end of the grab bar.
2. **Attach the Base:** Secure the three-hole base to the grab bar using the provided large screw.

3. **Mark Drill Positions:** Hold the assembled grab bar against the wall at the desired installation height and orientation. Use a pencil to mark the positions for drilling through the three holes on the base.
4. **Drill Holes:** Using an electric drill, carefully drill holes at the marked positions. Ensure the drill bit size matches the recommended size for the wall anchors.
5. **Insert Wall Anchors:** Gently hammer the wall anchors into the drilled holes until they are flush with the wall surface.
6. **Secure the Grab Bar:** Align the grab bar's base with the inserted wall anchors. Insert the smaller screws through the three-hole base and into the wall anchors. Tighten them securely with a screwdriver.
7. **Conceal Hardware:** Slide the decorative cover over the base to hide the mounting hardware.



Image: Visual guide illustrating the installation process from preparing the bar to securing it to the wall.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and installation process of the Gotega grab bars.

6. OPERATING AND USAGE


Once installed, your Gotega Shower Grab Bar provides stable support for various activities. It can be used in:

- **Bathrooms:** For assistance when entering or exiting the shower or bathtub, or for support near the toilet.
- **Stairways:** To provide an additional handhold for navigating stairs.
- **Laundry Rooms & Kitchens:** For general support or as a convenient place to hang items.

Always test the stability of the grab bar by applying moderate pressure before relying on it for full support.



Laundry room

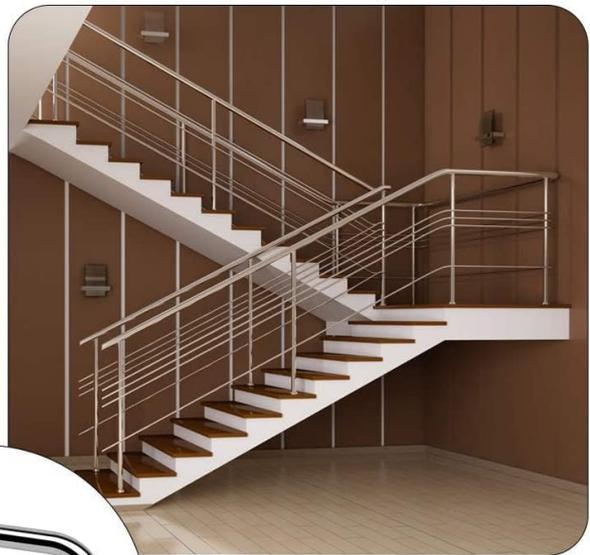

Stairways



Bathroom



Kitchen

Image: Examples of grab bar placement in a laundry room, stairways, bathroom, and kitchen.



Image: The grab bar can also function as a towel rack.

7. MAINTENANCE

To maintain the appearance and functionality of your stainless steel grab bars:

- Clean regularly with a soft cloth and mild soap or a non-abrasive stainless steel cleaner.
- Avoid using harsh chemicals, abrasive cleaners, or scouring pads, as these can scratch the surface or damage the finish.
- Dry the grab bar thoroughly after cleaning to prevent water spots and maintain its shine.

8. TROUBLESHOOTING

If you encounter issues with your grab bar, consider the following:

- **Grab Bar Feels Loose:** This is a critical safety concern. Immediately cease using the grab bar. Check all mounting screws and tighten them. If the wall anchors appear to be failing or stripping, consider replacing them with higher-quality, heavy-duty wall anchors suitable for your specific wall material (e.g., toggle bolts for drywall, masonry anchors for tile/concrete). Ensure the grab bar is always mounted into a structural stud whenever possible for maximum security.
- **Corrosion or Rust Spots:** While made of stainless steel, prolonged exposure to certain chemicals or harsh conditions can cause surface discoloration. Clean with a stainless steel cleaner. If rust appears, it may be surface rust from external sources; clean thoroughly and consider applying a protective stainless steel polish.


9. SPECIFICATIONS

Brand	Gotega
Material	304 Stainless Steel
Color	Silver
Item Weight	0.37 Kilograms (13 ounces)
Product Dimensions	12.79"L x 0.96"W
Style	Modern
Finish Type	Powder Coated
Weight Capacity	500 Pounds (Minimum)
Model Number	grab2bar
UPC	754407085923
Included Components	2 Pack 12 Inch Shower Grab Bar, Stainless Steel Bathroom Grab Bar

Any Question Please Contact Us(Before/ After Order)



Option 1

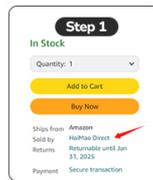

Option 2

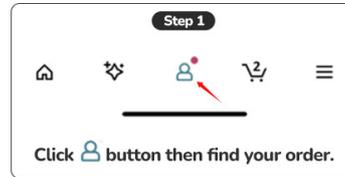


Image: The grab bar is designed to support a maximum weight of 500 lbs, ensuring robust safety.

10. WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to the product listing on the retailer's website or contact the seller directly for warranty inquiries.

11. SUPPORT

For any questions, concerns, or assistance with your Gotega Shower Grab Bars, please contact the seller directly through the platform where you made your purchase. The seller is committed to providing high-quality products and excellent service.



Image: Instructions on how to contact the seller for support before or after an order.

