

[Manuals.plus](#) /

› [Nuvita](#) /

› Nuvita Sterieasy Pro Digital 1084 Electric Steam Sterilizer User Manual

Nuvita NU-ALST1084

Nuvita Sterieasy Pro Digital 1084 Electric Steam Sterilizer

User Manual

INTRODUCTION

Thank you for choosing the Nuvita Sterieasy Pro Digital 1084 Electric Steam Sterilizer. This device is designed to efficiently sterilize baby bottles and accessories using natural steam, ensuring a hygienic environment for your baby's feeding items. Please read this manual carefully before first use and keep it for future reference.



Image: The Nuvita Sterieasy Pro Digital 1084 Electric Steam Sterilizer, fully assembled and ready for use, positioned on a clean kitchen counter.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the sterilizer.
- Do not immerse the base unit in water or other liquids.
- Keep the appliance out of reach of children.
- Always place the sterilizer on a stable, heat-resistant surface.
- Use only distilled water to prevent limescale buildup.
- Do not open the lid during operation as hot steam can cause burns.
- Allow the unit to cool down before cleaning or storing.
- This product is BPA-free.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Nuvita Sterieasy Pro Digital 1084 sterilizer:

1. Lid
2. Upper basket (for teats, pacifiers, small accessories)
3. Lower basket (for bottles)
4. Bottle stand/rack
5. Heating plate
6. Base unit with digital display and control buttons



Image: An exploded view of the sterilizer, illustrating its various detachable components including the lid, baskets, bottle stand, and base unit.

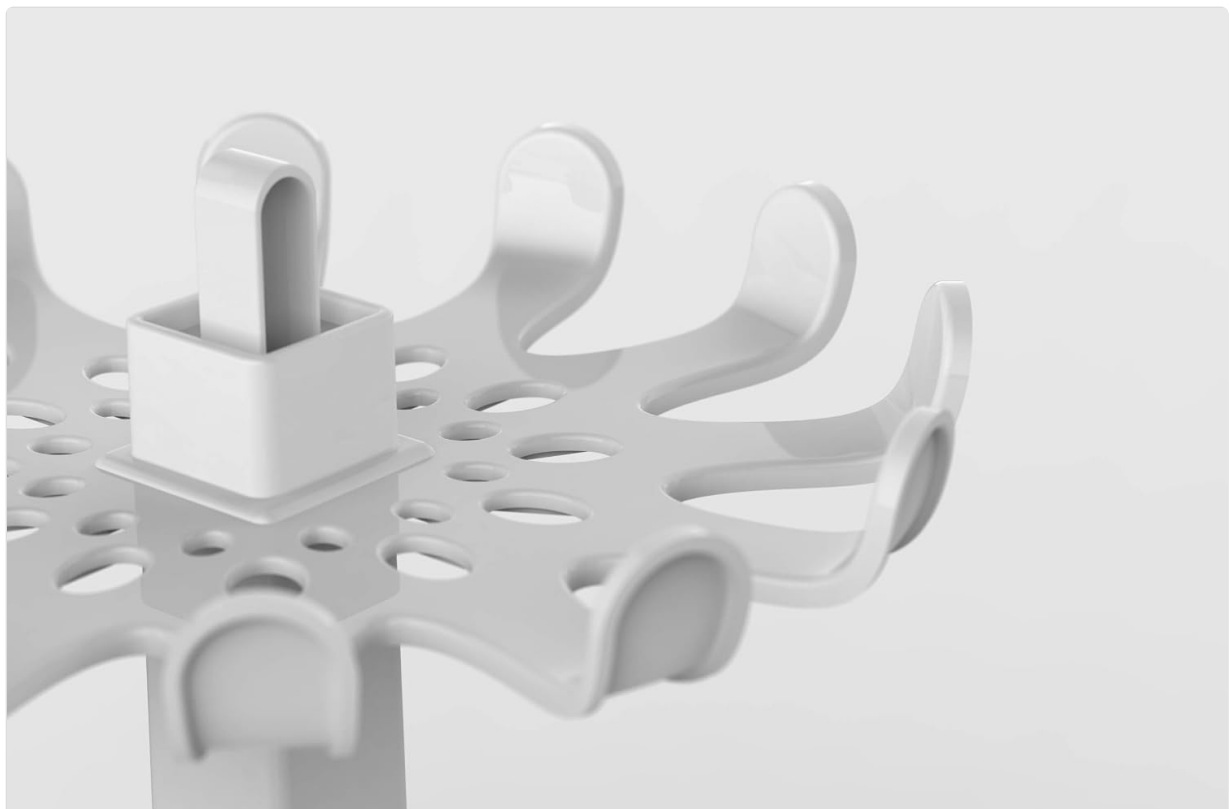


Image: A detailed view of the bottle rack and the upper basket, designed to hold teats, pacifiers, and other small baby accessories during sterilization.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.

2. **Clean:** Before first use, wash all removable parts (lid, baskets, bottle stand) in warm soapy water, rinse thoroughly, and dry. Wipe the base unit with a damp cloth.
3. **Assemble:**
 - Place the lower basket onto the base unit.
 - Insert the bottle stand into the lower basket.
 - Place the upper basket on top of the bottle stand.
 - Cover with the lid.
4. **Position:** Place the assembled sterilizer on a flat, stable, and heat-resistant surface, away from children.

OPERATING INSTRUCTIONS

The Nuvita Sterieasy Pro Digital 1084 sterilizes up to 6 bottles in approximately 6 minutes.

1. **Prepare Items:** Wash all bottles, teats, and accessories thoroughly before placing them in the sterilizer.
2. **Add Water:** Pour 90ml of distilled water onto the heating plate in the base unit. Do not overfill.
3. **Load Sterilizer:**
 - Place bottles upside down on the bottle stand in the lower basket. This sterilizer accommodates both glass and wide-neck bottles.
 - Place teats, pacifiers, and other small accessories in the upper basket.
4. **Close Lid:** Securely place the lid on the sterilizer.
5. **Connect Power:** Plug the sterilizer into a suitable electrical outlet.
6. **Start Cycle:** Press the power button (usually indicated by a power symbol) on the base unit. The digital display will show the sterilization countdown.
7. **Cycle Completion:** The sterilizer will automatically switch off when the cycle is complete. A beep may sound.
8. **24-Hour Sterilization:** Items inside the sterilizer will remain sterile for up to 24 hours if the lid remains unopened. The digital display will show a countdown every 8 hours to remind you of the remaining sterility time.
9. **Remove Items:** Allow the unit to cool for a few minutes before carefully removing the lid. Use tongs to remove hot items to avoid burns.



Image: The sterilizer loaded with baby bottles and various accessories, demonstrating its capacity and arrangement for effective steam sterilization.



Image: A close-up view of the digital display and control buttons on the sterilizer's base unit, showing the countdown timer.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your sterilizer.

1. **Unplug:** Always unplug the sterilizer and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** Wash the lid, baskets, and bottle stand in warm soapy water, rinse

thoroughly, and dry. These parts are often dishwasher-safe (check product markings if available).

3. **Clean Heating Plate:** Wipe the heating plate with a damp cloth to remove any water residue. For limescale buildup, use a descaling solution suitable for kitchen appliances or a mixture of white vinegar and water.
 - Pour 50ml of white vinegar and 50ml of water onto the heating plate.
 - Let it stand for 30 minutes to an hour, or until the limescale dissolves.
 - Pour out the solution and rinse the heating plate thoroughly with clean water.
 - Wipe dry.
4. **Clean Base Unit:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water.
5. **Storage:** Store the clean and dry sterilizer in a cool, dry place.



Image: A top-down view of the sterilizer's heating plate, showing its stainless steel surface which requires regular cleaning to prevent limescale buildup.

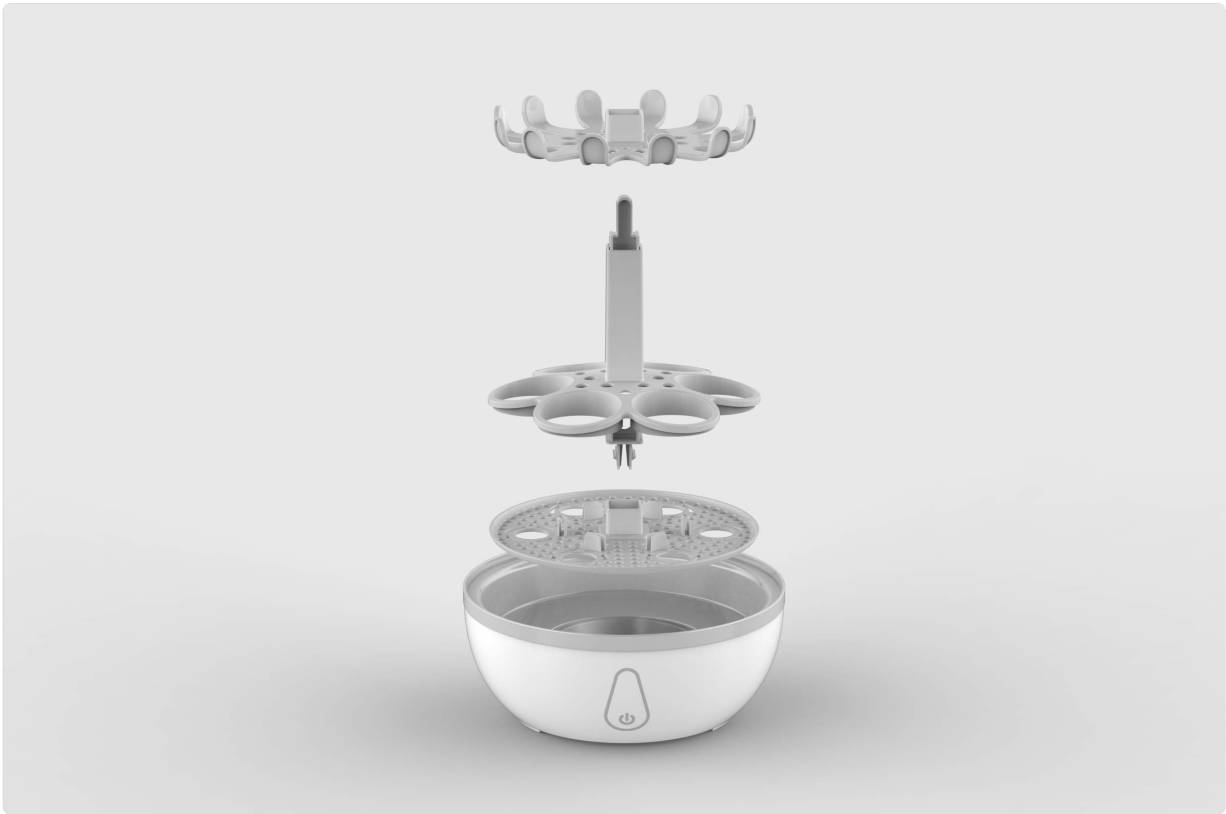


Image: A close-up of the stainless steel heating element at the base of the sterilizer, highlighting its design for efficient steam generation and ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sterilizer does not turn on.	Not plugged in; power outlet fault; unit fault.	Check power connection. Try a different outlet. If still not working, contact customer support.
Sterilization cycle takes too long or doesn't complete.	Insufficient water; excessive limescale buildup.	Ensure 90ml of water is added. Descale the heating plate as per maintenance instructions.
White/brown residue on heating plate.	Limescale buildup from tap water.	Descale the heating plate. Use distilled water for future cycles.
Items are not completely dry after sterilization.	This is normal for steam sterilization; condensation occurs.	Allow items to air dry or use a clean, dry cloth. The sterilizer's primary function is disinfection, not drying.

TECHNICAL SPECIFICATIONS

- **Model Number:** NU-ALST1084
- **Dimensions (L x W x H):** 33.8 x 25.9 x 26.4 cm
- **Weight:** 1.73 kg
- **Sterilization Time:** Approximately 6 minutes
- **Sterility Duration:** Up to 24 hours (if lid remains unopened)
- **Material:** BPA-free

- **Manufacturer:** Nuvita

WARRANTY AND SUPPORT

The Nuvita Sterieasy Pro Digital 1084 Electric Steam Sterilizer comes with a **24-month warranty** from the date of purchase.

If you encounter any questions, issues, or require assistance with your product, please do not hesitate to contact Nuvita customer support. Please have your model number (NU-ALST1084) and proof of purchase ready when contacting support.

For more information and support, please visit the official Nuvita website or contact your local distributor.