

## RENPHO JD-618

# RENPHO Foot Spa Bath Massager (Model JD-618) Instruction Manual

Brand: RENPHO | Model: JD-618

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the RENPHO Foot Spa Bath Massager. Keep this manual for future reference.

- Use the foot massager with caution around water and electricity.
- Ensure the power supply is compatible with the product's voltage and power (120V, 60Hz, 500W).
- Do not use without water. Always add water first before turning on the unit.
- Do not stand in the foot spa. Use while seated.
- Avoid pulling the power cord forcefully, as this may disconnect internal wiring and prevent the machine from operating.
- Keep out of reach of children and pets.
- If you experience any discomfort, discontinue use immediately.

## 2. PRODUCT OVERVIEW

The RENPHO Foot Spa Bath Massager is designed to provide a relaxing and therapeutic foot massage experience. It features motorized massage rollers, fast heating capabilities, powerful bubble jets, and automatic shiatsu massaging rollers to relieve discomfort and stress.


### Key Features:

- **PTC Heater with Adjustable Temperature:** Heats quickly and maintains a constant temperature between 95°F to 118°F (35°C to 48°C). Features overheating protection and multiple insulation for safety.

- **Timer Function:** Set the massage duration from 10 to 60 minutes.
- **3 Automatic Massage Modes:** High-quality rollers target acupuncture points with continuous rolling, even time intervals, or unequal time intervals. Default massage time is 15 minutes.
- **Powerful Bubble Jets:** Provides invigorating bubbles for enhanced foot relaxation.
- **Easy Portability & Drainage:** Equipped with wheels and a handle for easy movement. Features a drain pipe for convenient water emptying without lifting.
- **Removable Medicine Box:** Allows for the addition of essential oils, bath salts, or other foot care products for a customized spa experience.

## 3 Electric Massage Modes

provide a better experience and deep relaxation than non-electric foot bath

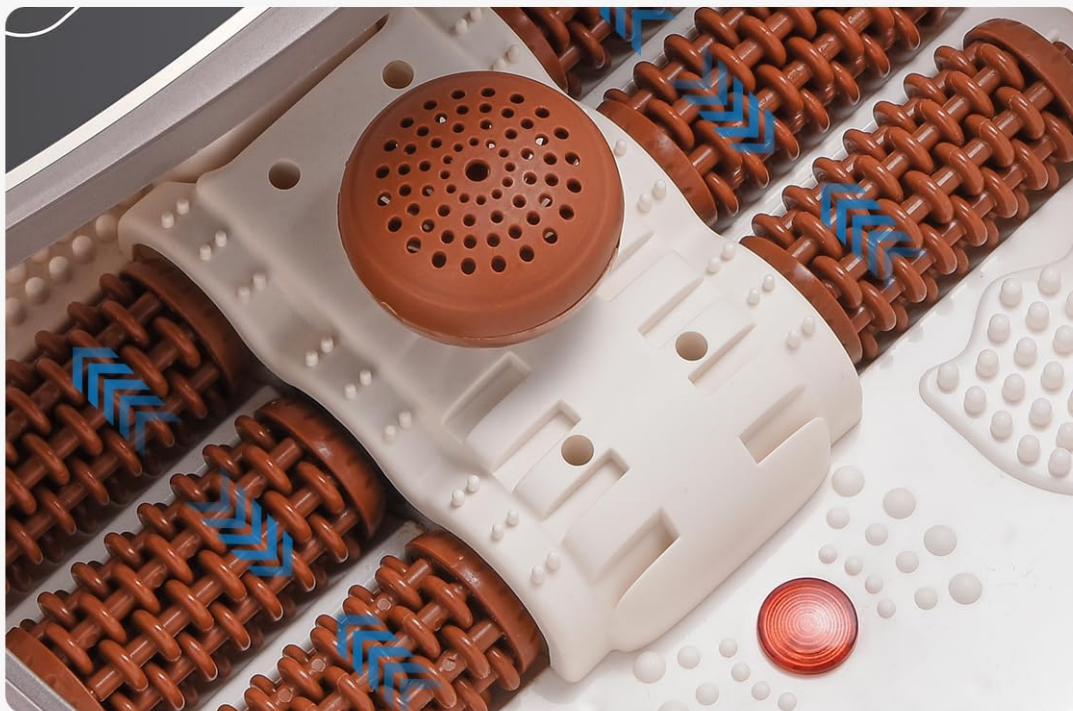

Shiatsu



Pushing



Kneading

Figure 2.1: The RENPHO Foot Spa Bath Massager in its operational state.

# Adjustable temperature and keep warm

35-48°C and 95°F-118°F



Figure 2.2: Close-up of the intuitive control panel for easy operation.

# Red Lights and Bubbles



Figure 2.3: Internal view showing the motorized massage rollers and bubble jet outlets.

## 3. SETUP INSTRUCTIONS

1. **Unfold the Foot Spa:** The foot spa is designed to be collapsible for easy storage. Gently pull up the sides of the unit until it fully expands into its operational shape.
2. **Positioning:** Place the foot spa on a flat, stable surface. Ensure the power cord can reach an outlet without being stretched or creating a tripping hazard.
3. **Fill with Water:** Fill the foot spa with water. For faster heating, you may use warm water initially. Do not exceed the "Max Water Line" indicated inside the basin.



4. **Connect Power:** Plug the power cord into a compatible 120V, 60Hz electrical outlet.

Your browser does not support the video tag.

Video 3.1: Demonstration of unfolding the RENPHO Foot Spa and initial setup.



Hidden Handle



Insulated & Dust Cover



Drain Pipe

Figure 3.1: Product dimensions and key components including the hidden handle and drain pipe.

## 4. OPERATING INSTRUCTIONS

Once the foot spa is set up and filled with water, you can begin your relaxing experience using the control panel.

1. **Power On:** Press the Power button (**ON/OFF**) on the control panel to turn on the unit. The display will show the current water temperature.
2. **Adjust Temperature:** Use the **TEMP+** and **TEMP-** buttons to set your desired water temperature between 95°F and 118°F (35°C and 48°C). The PTC heater will quickly reach and maintain this temperature.
3. **Select Massage Mode:** Press the **MASSAGE** button to cycle through the 3 automatic massage modes: continuous rolling, even time intervals, and unequal time intervals. The default massage time is 15 minutes.
4. **Activate Bubble Jets & Red Light:** Press the **RED LIGHT & BUBBLE** button to activate the powerful bubble jets and the soothing red light function. Press again to turn off.
5. **Set Timer:** Press the **TIMER** button to set the desired duration for your foot spa session, from 10 to 60 minutes.
6. **Using the Removable Medicine Box:** Open the removable medicine box located inside the foot spa to add essential oils, bath salts, or other foot care products. Close securely before use.

# Removable Medicine Box

put essential oils, bath salts, etc.  
in it for a comfortable experience

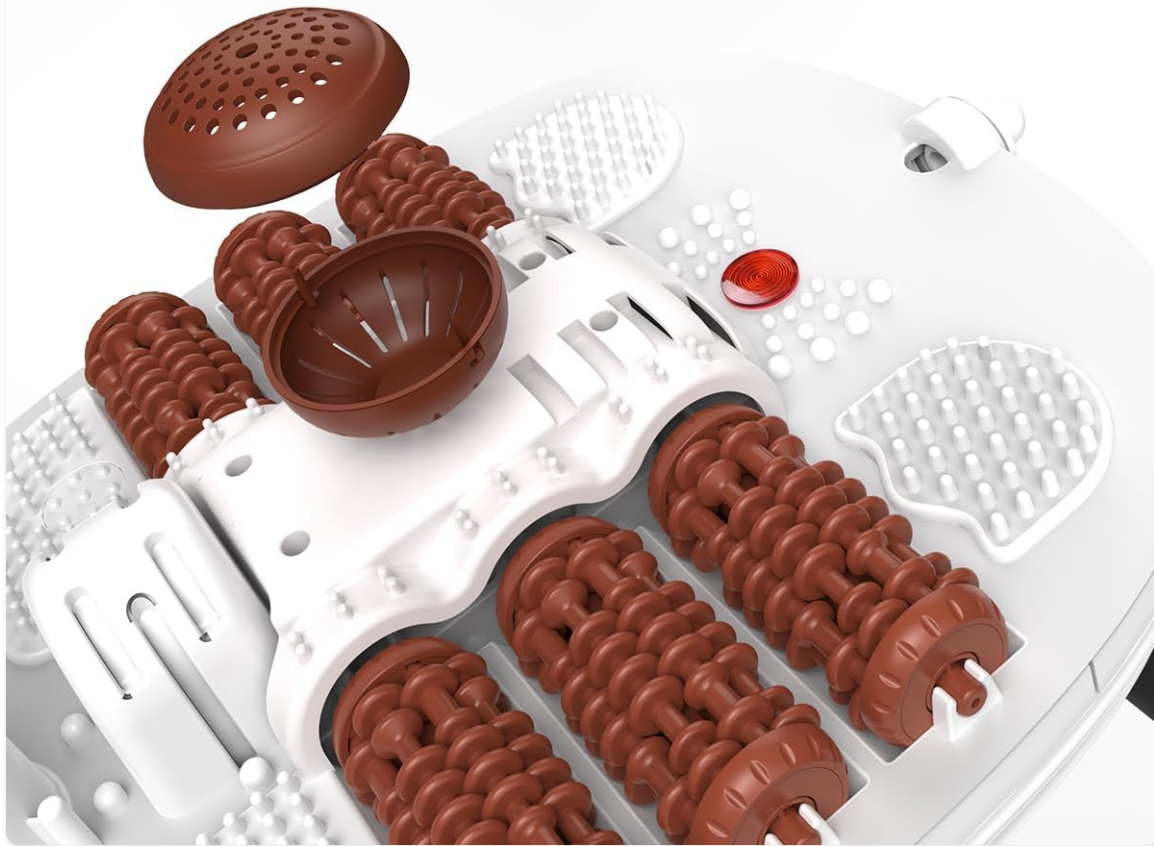


Figure 4.1: The adjustable temperature feature ensures your water stays warm throughout your session.



## Enjoy the Foot Spa Massage for Get a Comfortable Life

60in/150cm Cord  
Max Feet Size:13in

Figure 4.2: The three automatic massage modes provide varied and targeted relief for your feet.





Figure 4.3: Enjoy the soothing red lights and invigorating bubbles for a complete spa experience.



Figure 4.4: The removable medicine box allows for personalized aromatherapy or bath salt treatments.

## 5. MAINTENANCE AND CLEANING

1. **Drain Water:** After use, unplug the unit. Use the integrated drain pipe to empty the water. This eliminates the need to lift the heavy unit when full.
2. **Clean the Basin:** Rinse the basin with clean water. Use a soft cloth and mild soap to wipe down the interior and exterior surfaces. Avoid abrasive cleaners.
3. **Dry Thoroughly:** Ensure all parts are completely dry before folding and storing the unit.
4. **Storage:** Collapse the foot spa for compact storage. Use the hidden handle for easy transport.

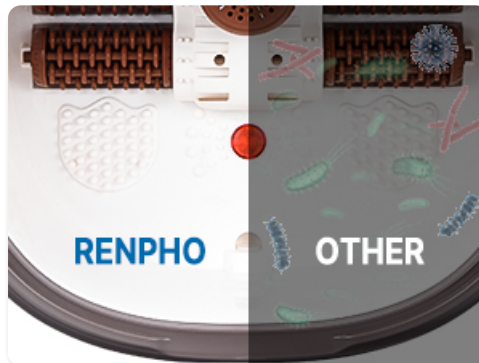


Figure 5.1: The convenient drain pipe allows for easy water removal.

## 6. TROUBLESHOOTING

- **Unit does not turn on:**
  - Ensure the power cord is securely plugged into a working outlet.
  - Check if the power switch is in the "ON" position.
  - Verify that the internal wires are not disconnected due to forceful pulling of the power cord.
- **Water is not heating:**
  - Confirm that the temperature setting is activated and set to your desired level.
  - Ensure there is sufficient water in the basin, above the minimum water line.
- **No bubbles or massage:**
  - Check if the respective functions (Bubble/Red Light, Massage) are activated on the control panel.
  - Ensure the unit is properly powered and has water.

## 7. SPECIFICATIONS

Feature	Detail
Brand	RENPHO
Model Number	JD-618
Product Dimensions	48.26 x 40.64 x 31.24 cm (19 x 16 x 12.3 inches)
Item Weight	3.7 Kilograms (8.16 lbs)
Power Source	Corded Electric
Circuit	120V, 60Hz, 500W
Material	Plastic
Temperature Range	95°F to 118°F (35°C to 48°C)
Special Features	Heat, Portable, Timer, Motorized Massage, Bubble Jets

## 8. WARRANTY AND SUPPORT

RENPHO products typically come with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, or visit the official RENPHO website for detailed warranty information and customer support contacts.

For any questions, technical assistance, or warranty claims, please contact RENPHO customer support.