

Leggett & Platt Prodigy PT

Leggett & Platt Prodigy PT Adjustable Base User Manual

Model: Prodigy PT (Twin XL)

[Information](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

Welcome to the user manual for your Leggett & Platt Prodigy PT Adjustable Base. This advanced adjustable base is designed to enhance your sleep experience by combining innovative technology with superior comfort. It allows for effortless adjustment of head and foot positions, includes a full-body massage feature, and offers convenient control options via a wireless remote or a Bluetooth-enabled app.

The Prodigy PT features pillow articulation, Wallhugger technology to keep you close to your nightstand, USB charging ports, and under-bed lighting, all contributing to a restful and personalized sleep environment.



Figure 1: Leggett & Platt Prodigy PT Adjustable Base in an articulated position. This image shows the base with its head and foot sections raised, demonstrating its adjustability.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your adjustable base. Failure to follow these guidelines may result

in injury or damage to the product.

- **Weight Capacity:** Do not exceed the maximum weight recommendation of **850 pounds** (including mattress and occupants). Exceeding this limit may cause damage to the base and void the warranty.
- **Moving Parts:** Be cautious of moving parts during operation. Keep hands, feet, and pets clear of the mechanism when adjusting the base.
- **Remote Control Use:** Use the remote control carefully. Avoid placing heavy objects on the remote or exposing it to liquids.
- **Pillow-Tilt Feature:** Be mindful of the precise pillow-tilt feature to avoid discomfort or injury, especially when adjusting the head section.
- **Children and Pets:** Do not allow children or pets to play on or under the adjustable base.
- **Power Cord:** Ensure the power cord is not pinched or tangled. Do not operate the base if the power cord is damaged.
- **Emergency Power-Down:** In case of a power outage, the base includes an emergency power-down feature to return the bed to a flat position. Refer to the troubleshooting section for details.

3. SETUP AND INITIAL ASSEMBLY

The Leggett & Platt Prodigy PT Adjustable Base requires minimal assembly. It is designed with a zero-clearance foundation, making it suitable for use with solid-surface platform beds.

3.1 Package Contents

Before beginning, ensure all components are present:

- Adjustable Base Frame
- Legs (quantity varies by size)
- Wireless Remote Control
- Power Supply and Cord
- Sync Cable (for split sizes only)

3.2 Assembly Steps

1. **Unpack:** Carefully remove all components from the packaging. Place the adjustable base upside down on a clean, flat surface to access the leg attachment points.
2. **Attach Legs:** Screw the provided legs into the designated threaded receivers on the underside of the base. Hand-tighten firmly. Ensure all legs are securely attached and the base is stable.
3. **Position Base:** With assistance, carefully flip the adjustable base upright and position it in your desired location.
4. **Connect Power:** Plug the power cord into the power supply, and then plug the power supply into a grounded electrical outlet. Ensure the connection is secure.
5. **Pair Remote (if necessary):** The remote control is typically pre-paired. If not, refer to the troubleshooting section for remote pairing instructions.
6. **Place Mattress:** Carefully place your mattress on top of the adjustable base.

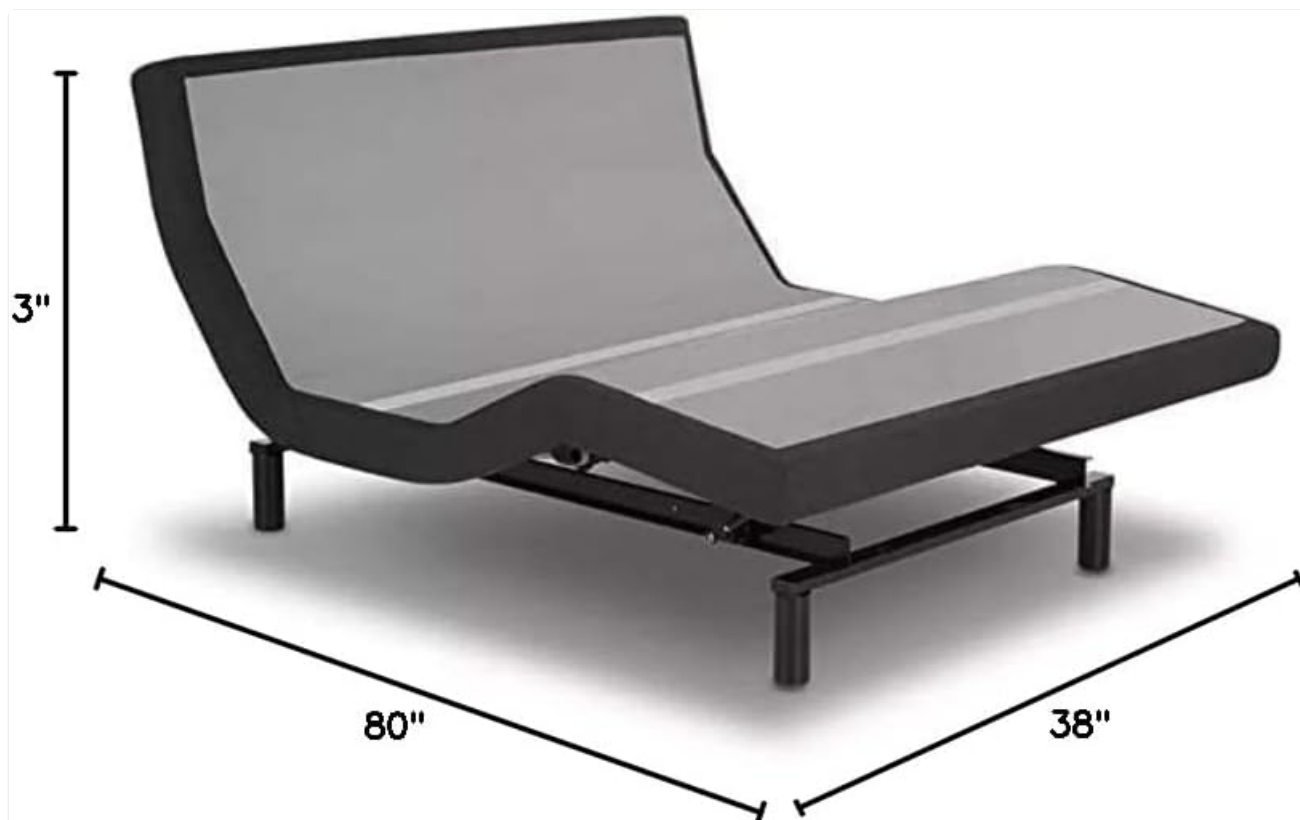


Figure 2: Dimensions of the Twin XL Prodigy PT Adjustable Base. The base measures approximately 80 inches in length, 38 inches in width, and 3 inches in height (excluding legs).

4. OPERATING INSTRUCTIONS

Your Prodigy PT adjustable base can be controlled using the included wireless remote or via a Bluetooth-enabled app on your smartphone or tablet.

4.1 Wireless Remote Control

The capacitive-touch wireless remote provides intuitive control over all base functions. Familiarize yourself with the button layout:



Figure 3: Prodigy PT Wireless Remote Control. This image displays the layout of the remote's buttons, including controls for head, foot, massage, and preset positions.

- **HEAD Up/Down Arrows:** Adjusts the head section of the base up or down.
- **FOOT Up/Down Arrows:** Adjusts the foot section of the base up or down.
- **FLAT Button:** Returns the entire base to a flat position with a single touch.
- **SNORE Button:** Reprogrammable preset position designed to alleviate snoring by slightly raising the head.
- **ZGRAV (Zero Gravity) Button:** Reprogrammable preset position that elevates the head and feet to create a feeling of weightlessness, promoting circulation and reducing pressure on the lower back.
- **MEM (Memory) Button:** One customizable programmable position. To set, adjust the bed to your desired position, then press and hold the MEM button until the bed slightly moves or the remote indicates it's saved.
- **SET Button:** Used in conjunction with programmable positions.
- **MESSAGE Button:** Activates the full-body dual massage with wave feature. Press repeatedly to cycle through massage modes (wave, standard, off).
- **UBL (Under-Bed Light) Button:** Turns the under-bed lighting on or off.
- **Flashlight Button:** Activates a convenient flashlight on the remote control for navigating in the dark.
- **LOCK Button:** Locks the remote to prevent accidental adjustments. Press and hold to lock/unlock.

4.2 Advanced Features

- **Pillow Articulation:** The head section includes precise pillow-tilt for extra comfort, allowing you to fine-tune

your head support.

- **Wallhugger Engineering:** This technology keeps you close to your nightstand as the head section elevates, ensuring your side table remains within reach.
- **USB Charging Ports:** The base is equipped with dual USB ports (Type A and C) for convenient charging of your devices.
- **Bluetooth App Control:** Download the Leggett & Platt adjustable base app for Apple or Android devices to control your bed from your smartphone or tablet. The app offers the same functionalities as the remote.



Figure 4: Prodigy PT Premium Model Adjustable Base Features. This diagram highlights key features such as head and foot articulation, zero-clearance foundation, Wallhugger technology, wireless remote, Bluetooth app control, 850 lb. weight capacity, height-adjustable legs, anti-snore, zero gravity, programmable positions, remote flashlight, under-bed light, one-touch flat button, dual USB ports, dual massage with wave, emergency power-down, and sync cable for split sizes.

5. CARE AND MAINTENANCE

Proper care will ensure the longevity and optimal performance of your adjustable base.

- **Cleaning:**
 - For general cleaning, wipe the frame with a soft, damp cloth.
 - Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.
 - For fabric areas, use a mild fabric cleaner or follow the cleaning instructions for your mattress.
- **Power Cord:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and

contact customer support.

- **Connections:** Periodically check all electrical connections to ensure they are secure.
- **Moving Parts:** The mechanical components are designed to be maintenance-free. Do not attempt to lubricate or disassemble any part of the motor or lifting mechanism.
- **Weight Distribution:** Ensure weight is evenly distributed on the bed. Avoid sitting on the extreme edges of the base when it is in an articulated position.

6. TROUBLESHOOTING GUIDE

If you experience issues with your adjustable base, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Base does not operate.	No power, loose connection, remote not paired.	Check if the power cord is securely plugged into the wall outlet and the power supply. Verify the outlet is functional by plugging in another device. Ensure the remote control batteries are not depleted. If the remote is not paired, follow the pairing instructions below.
Remote control not responding.	Batteries low/dead, remote not paired, remote locked.	Replace the remote control batteries. Ensure the remote is not in "LOCK" mode (press and hold the LOCK button to unlock). Re-pair the remote control: Unplug the base for 30 seconds, then plug it back in. Within 10 seconds, press and hold the "PAIR" button (usually located on the control box under the base) until the base responds.
Motor makes noise but base does not move.	Weight exceeds capacity, obstruction.	Reduce the weight on the bed. The maximum weight capacity is 850 lbs. Check for any obstructions under the bed that might be preventing movement.
Base is stuck in an articulated position during power outage.	Loss of power.	Utilize the emergency power-down feature. This typically involves connecting a 9V battery (not included) to a specific port on the control box to lower the bed. Refer to the control box diagram for exact location.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Prodigy PT
Brand	Leggett & Platt
Size	Twin XL
Product Dimensions (L x W x H)	80" x 38" x 3" (excluding legs)
Item Weight	140 pounds

Feature	Detail
Maximum Weight Capacity	850 lbs (including mattress and occupants)
Special Features	Pillow tilt, Wallhugger engineering, Dual USB ports (Type A & C), Under-bed lighting, Full-body dual massage with wave, Bluetooth app control, One-touch flat, Reprogrammable anti-snore & zero gravity positions, Customizable memory position, Remote flashlight.
Finish Type	Fabric (Black Upholstery)
Included Components	Legs, Wireless Remote Control
Assembly Required	No (minimal leg attachment)
Compatible Mattress Size	TXL (Twin XL)
Form Factor	Low-profile, Zero Clearance Foundation
UPC	697478465563

8. WARRANTY AND CUSTOMER SUPPORT


Leggett & Platt stands behind the quality of its products. While specific warranty details are typically provided with your purchase documentation, Leggett & Platt adjustable bases generally come with a limited warranty covering manufacturing defects.




For detailed warranty information, service, or technical assistance, please contact Leggett & Platt Customer Service directly. Have your model number (Prodigy PT) and proof of purchase ready when contacting support.

Leggett & Platt Customer Service: Please refer to the contact information provided in your product packaging or visit the official Leggett & Platt website for the most current support details.


Note: Protection plans may be available for purchase separately through your retailer. These plans offer extended coverage beyond the manufacturer's warranty.

Related Documents

	<p>L&P Adjustable Base App Instructions and Setup Guide</p> <p>Comprehensive guide to setting up and using the L&P Adjustable Base mobile application for iOS and Android devices. Learn how to pair your base, control features like head/foot articulation, massage, and settings.</p>
---	--

	<p>Raven K-120 Adjustable Base Owner's Manual</p> <p>Comprehensive owner's manual for the Raven K-120 adjustable base by Leggett & Platt, covering installation, operation, troubleshooting, and warranty information.</p>
	<p>Leggett & Platt 18 Button PT Glass Top Remote Control User Guide for Adjustable Beds</p> <p>Learn how to operate and program your Leggett & Platt 18 Button PT Glass Top Remote Control for adjustable beds. This user guide covers functions, programming, troubleshooting, and important safety information for models 292-0048-C and EDR15775.</p>
	<p>LP Adjustable Bed Control App Setup Guide</p> <p>Instructions for setting up and connecting the LP Adjustable Bed Control app to your adjustable bed. Learn how to download the app, pair your bed, and control its features via your smartphone.</p>

Documents - Leggett & Platt – Prodigy PT

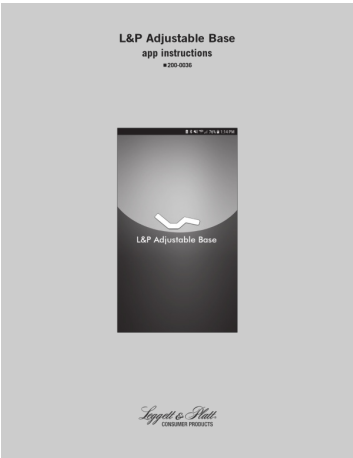

[L&P Adjustable Base App Instructions and Setup Guide](#)

Comprehensive guide to setting up and using the L&P Adjustable Base mobile application for iOS and Android devices. Learn how to pair your base, control features like head/foot articulation, massage, and settings.

lang:en score:36 filesize: 858.99 K page_count: 8 document date: 2019-07-01

lang:en score:21 filesize: 234.44 K page count: 1 document date: 2021-12-08

