

Lamicall BM02-B

Lamicall Bike Phone Holder Instruction Manual

Model: BM02-B | Brand: Lamicall

1. INTRODUCTION

Thank you for choosing the Lamicall Bike Phone Holder. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new phone holder, ensuring a secure and convenient experience while cycling or riding. This holder is designed to securely grip your smartphone on various handlebars, offering shockproof protection and adjustable viewing angles.

2. WHAT'S IN THE BOX

- 1 x Lamicall Bike Phone Holder Unit
- 1 x Handlebar Mounting Bracket
- 4 x Silicone Pads (for handlebar diameter adjustment)


3. SETUP & INSTALLATION

Follow these steps to properly install your Lamicall Bike Phone Holder:


- 1. Prepare the Handlebar Mount:** Unscrew the bolt on the handlebar mounting bracket. Depending on your handlebar's diameter, insert the appropriate number of silicone pads into the bracket to ensure a snug fit. The mount fits handlebars with a diameter from 0.59 to 1.57 inches (15-40mm).
- 2. Attach to Handlebar:** Place the prepared mounting bracket around your bike or motorcycle handlebar. Tighten the bolt securely until the bracket is firmly attached and does not rotate freely.
- 3. Connect Phone Holder:** The phone holder unit connects to the handlebar mount via a ball joint. Loosen the screw on the back of the phone holder unit. Align the ball joint from the handlebar mount with the socket on the phone holder and push until it snaps into place. Tighten the screw to secure the phone holder to the desired angle.

Handlebar Compatibility

Fit diameter in 0.6-1.57" handlebar.

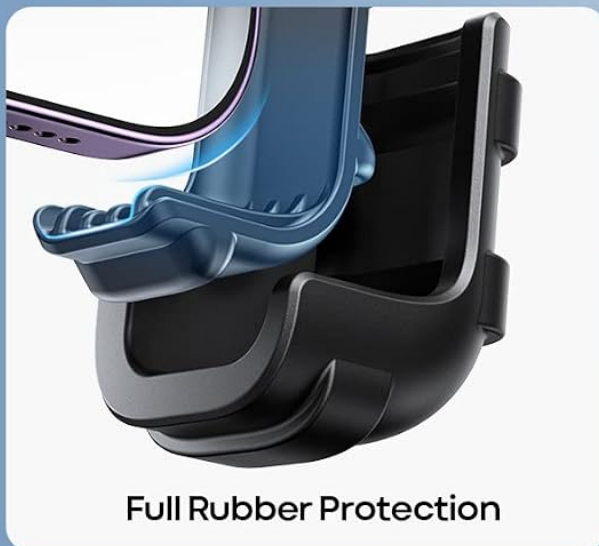

Full Rubber Protection

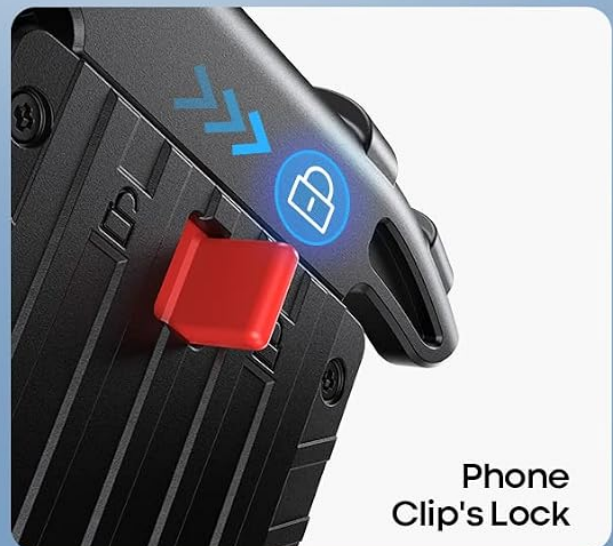

Phone
Clip's Lock

Image: Handlebar Compatibility - The mount fits handlebars from 0.59 to 1.57 inches (15-40mm) using adjustable silicone pads.

4. OPERATING INSTRUCTIONS

Using your Lamicall Bike Phone Holder is simple and secure:

1. **Insert Phone:** Push the top part of the phone holder upwards to extend the arms. Carefully slide your smartphone into the holder, ensuring all four corners are securely gripped by the holder's claws. The holder is compatible with phones from 4.7 to 6.8 inches with a thickness up to 0.59 inches (15mm, including phone

case).

2. **Lock Phone in Place:** Locate the red switch on the back of the phone holder. After inserting your phone, push this red switch to the locked position. This mechanism ensures your phone is tightly secured and prevents accidental drops, even on bumpy roads.
3. **Adjust Viewing Angle:** The phone holder features 360-degree rotation. Loosen the ball joint screw slightly, adjust your phone to either a horizontal or vertical screen orientation, or any desired angle, then tighten the screw to fix the position. This allows for convenient GPS navigation, music playback, or call answering during your ride.
4. **Remove Phone:** To remove your phone, first unlock the red switch on the back. Then, push the top part of the holder upwards to release the grip and carefully slide your phone out.

One-Hand Operation

Enjoy a free and easy riding.



Image: One-Hand Operation - Easily insert or remove your phone with one hand.

360° Rotation

Provides the best viewing angle of use.



Image: 360° Rotation - Provides the best viewing angle of use.

5. COMPATIBILITY

The Lamicall Bike Phone Holder is designed for wide compatibility:

- **Phone Size:** Suitable for smartphones ranging from 4.7 to 6.8 inches.
- **Phone Thickness:** Accommodates phones with a thickness of up to 0.59 inches (15mm), including most

phone cases.

- **Handlebar Diameter:** Fits handlebars with a diameter between 0.59 to 1.57 inches (15-40mm).
- **Compatible Devices:** Includes various models like iPhone 16/15/14/13/12 series, Samsung Galaxy S24/S23/S22/S21/S20 series, Note 9, LG, Google Pixel, Motorola, ZTE, HTC, and BlackBerry phones within the specified size range.
- **Vehicle Types:** Suitable for various types of bicycles, motorcycles, strollers, shopping carts, electric scooters, electric bikes (ebikes), and dirt bikes.

Wide Compatibility

Thick Case Friendly



Min size **4.7**inch - Max size **6.8**inch

Fit diameter in 0.6-1.57" (15-40mm) handlebars.



6. MAINTENANCE

To ensure the longevity and optimal performance of your phone holder, follow these simple maintenance tips:

- **Cleaning:** Wipe the holder with a soft, damp cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive cleaners.
- **Check Tightness:** Periodically check all screws and connections to ensure they remain tight, especially the handlebar clamp and the ball joint screw. Tighten if necessary.
- **Storage:** When not in use for extended periods, store the phone holder in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

If you encounter any issues with your Lamicall Bike Phone Holder, refer to the following common solutions:

- **Phone feels loose in the holder:**
 - Ensure the red locking switch on the back of the holder is fully engaged.
 - Verify your phone's size and thickness are within the specified compatibility range (4.7-6.8 inches, up to 0.59 inches thick).
- **Mount is sliding or rotating on the handlebar:**
 - Tighten the screw on the handlebar mounting bracket.
 - Ensure the correct number of silicone pads are used to achieve a snug fit for your handlebar diameter.
- **Phone holder unit is not holding its angle:**
 - Tighten the screw on the ball joint connection at the back of the phone holder.

8. SPECIFICATIONS

Feature	Detail
Brand	Lamicall
Model	BM02-B
Item Weight	7 ounces
Product Dimensions	4.2 x 3.1 x 1.5 inches
Handlebar Diameter Compatibility	0.59 to 1.57 inches (15-40mm)
Phone Size Compatibility	4.7 to 6.8 inches
Phone Thickness Compatibility	Up to 0.59 inches (15mm, including phone case)
Mounting Type	Handlebar Mount
Special Features	Adjustable, Shockproof Protection, One-Hand Operation, 360° Rotation

9. WARRANTY & SUPPORT

Lamicall offers a 30-day return policy for refund or replacement. For any product-related inquiries, technical support, or warranty claims, please contact the Lamicall Store directly through your purchase platform or visit the official Lamicall website for further assistance.

Visit the [Lamicall Store](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question