

[Manuals.plus](#) /

› [RENPHO](#) /

› RENPHO Steam Foot Spa Bath Massager Instruction Manual

RENPHO RP-SF101

RENPHO Steam Foot Spa Bath Massager

MODEL: RP-SF101

Brand: RENPHO

Introduction

The RENPHO Steam Foot Spa Bath Massager offers a unique and relaxing foot care experience. Utilizing advanced atomization technology, it generates steam quickly and efficiently, providing warmth and promoting circulation without the need for large volumes of water. Designed for ease of use and safety, this foot spa is an ideal solution for relieving foot pain, stress, and tension, suitable for various users including the elderly, insomniacs, and athletes.



Image: The RENPHO Steam Foot Spa Bath Massager, showcasing its compact design and integrated control panel.

Safety Information

Please read all safety instructions carefully before using the RENPHO Steam Foot Spa Bath Massager to ensure safe operation and prevent injury or damage.

- Ensure the foot spa is placed on a level, stable surface to prevent water overflow from the collection box.
- Do not immerse the unit in water or other liquids.
- Only use clean tap water in the water tank. Do not add essential oils or other substances directly to the water tank, as this may damage the unit or affect steam production.
- The device features multiple insulation protections and leak protection. If the water tank is empty, the water lack indicator light will flash, and the unit will automatically shut off after 10 seconds to prevent damage.
- Keep out of reach of children and pets.
- Unplug the device from the power outlet when not in use, before cleaning, and before adding or removing parts.

- Do not operate if the cord or plug is damaged, or if the unit malfunctions or has been dropped or damaged in any manner.
- Consult a physician before use if you have any medical conditions, especially diabetes, circulatory problems, or open wounds on your feet.

Product Overview and Components

Familiarize yourself with the different parts of your RENPHO Steam Foot Spa Bath Massager for optimal use.

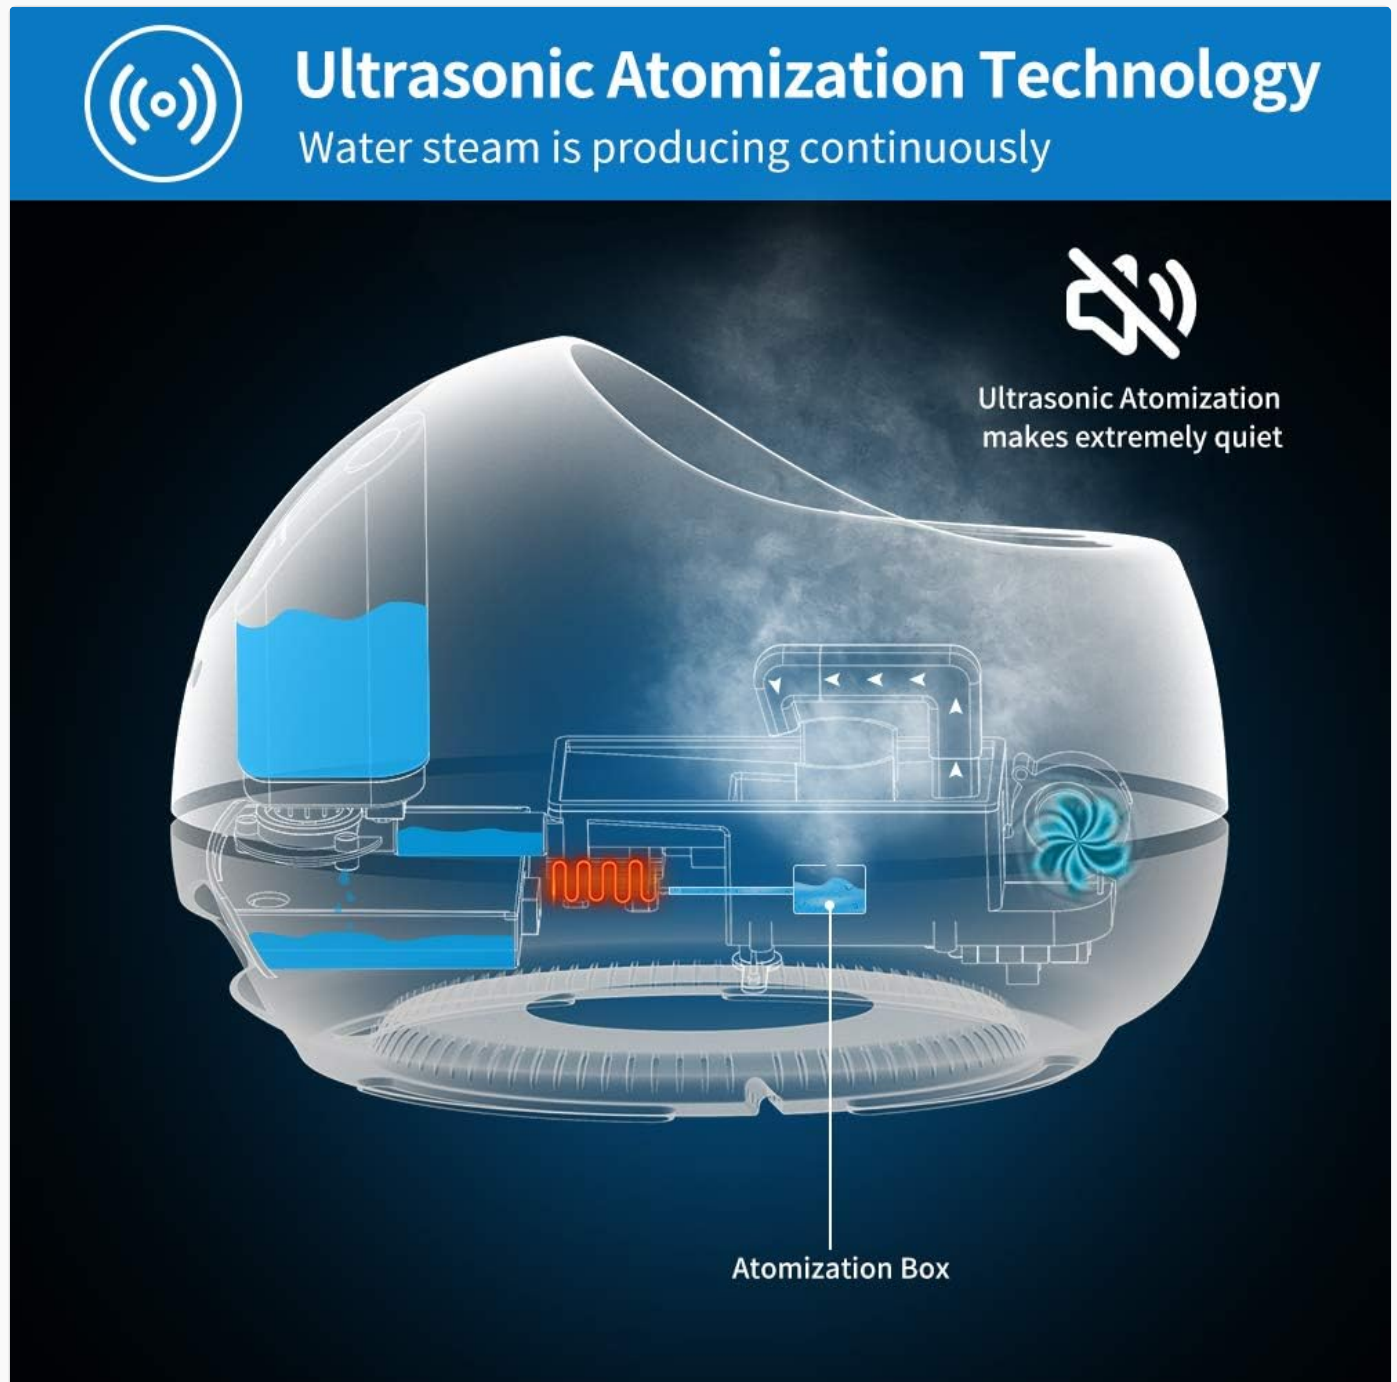


Image: Detailed diagram of the RENPHO Steam Foot Spa, highlighting its various components.

- 1. Water Tank:** Located at the top, this is where approximately 380ml of water is added for steam generation. Provides 50-65 minutes of use.
- 2. Control Panel:** Features power button, temperature adjustment buttons, timer buttons, and a water lack indicator light.
- 3. Foot Pedals (Non-Motorized):** Textured surfaces with integrated massage rollers for manual foot massage.
- 4. Herbal Pack Location:** A designated area for placing herbal packs (not included) to enhance your spa experience.
- 5. Steam Outlet Baffle:** Directs the steam towards your feet.

- 6. Water Collection Box:** Located at the bottom, collects condensed water and should be emptied after each use.
- 7. Soft Cover:** Placed over the foot opening during use to prevent steam from escaping and retain heat.



Environmental Protection

Only 4 steps to get your foot steam spa



Triple savings



	RENPHO	OTHER
Saving power	280W about(US)/ 197W about(EU)	500W about
Saving water	0.38L can using 65 mins	3-5L at least
Saving time	Heating time 5 mins	Heating time 15 mins

Image: Detailed view of the control panel, showing the power, temperature, and timer buttons, along with the water lack indicator.

Setup and Initial Use

Follow these steps to set up your foot spa for the first time and begin your relaxing experience.

- 1. Placement:** Place the foot spa on a flat, stable, and dry surface.
- 2. Fill Water Tank:** Locate the water tank opening (usually at the top, near the control panel). Pour approximately 380 ml (one cup) of clean tap water into the water tank. Do not overfill.
- 3. Optional Herbal Pack:** If desired, place a herbal pack (not included) into the designated herbal pack location.
- 4. Connect Power:** Plug the power cord into a standard electrical outlet.
- 5. Power On:** Press the **Power** button on the control panel to turn on the device. The default mode is typically mid-temperature and a 20-minute timer.

6. **Steam Generation:** The device will begin generating steam almost immediately (within 10 seconds), reaching its maximum temperature within 5 minutes.



Foot Steam Sauna

Get the joy of a steamed foot spa in the comfort of your home



Quickly Open Pores




Penetrating Skin




Eliminate fatigue

Foot water steam spa

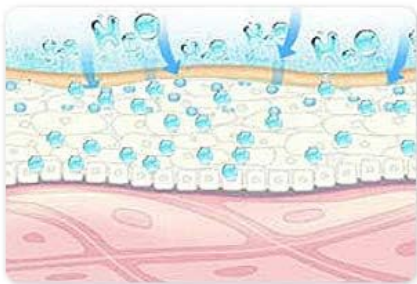

Penetrate into the deeper layers of skin

Traditional foot bath

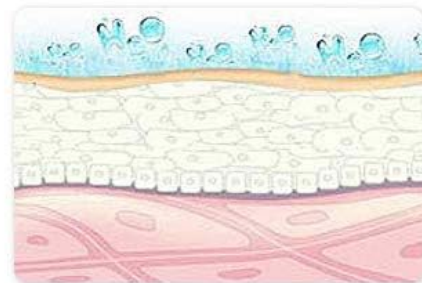

Water stays on the surface of the skin

Image: Visual representation of steam penetration during a foot spa, highlighting its effectiveness compared to traditional water baths.

Operation

Once set up, you can customize your foot spa experience using the control panel.

Temperature Adjustment: Use the **Temperature** buttons (marked with steam icons) to select your desired heat level:

- **Low (☺):** Approximately 86°F (30°C) to 100°F (38°C)
- **Mid (☺☺):** Approximately 95°F (35°C) to 109°F (43°C)
- **High (☺☺☺):** Approximately 104°F (40°C) to 118°F (48°C)

Timer Settings: Select your preferred session duration using the **Timer** buttons:

- **20 Minutes**
- **30 Minutes**

Using Massage Rollers: The foot spa includes four non-motorized pedicure massage rollers. Gently move your feet back and forth over these rollers to stimulate pressure points and enhance relaxation.

Soft Cover: Place the provided soft cover over the foot opening once your feet are inside to help retain steam and heat for a more effective session.

Water Lack Indicator: If the water tank runs low or is empty, the "Lack Water" indicator light will flash, and the unit will automatically shut off after 10 seconds as a safety measure. Refill the water tank to continue operation.



Image: A user enjoying the RENPHO Steam Foot Spa, illustrating the continuous warm steam experience.

Maintenance and Cleaning

Regular cleaning ensures the longevity and hygienic operation of your foot spa.

1. **Unplug:** Always unplug the foot spa from the power outlet before cleaning.
2. **Empty Water Collection Box:** After each use, remove the water collection box (located at the bottom of the unit) and empty any condensed water. Rinse it with clean water and dry thoroughly.

- 3. **Clean Interior:** Wipe the interior surfaces of the foot basin with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- 4. **Clean Exterior:** Wipe the exterior of the unit with a soft, dry or slightly damp cloth.
- 5. **Drying:** Ensure all parts are completely dry before storing the unit.
- 6. **Storage:** Store the foot spa in a cool, dry place away from direct sunlight.

Troubleshooting


If you encounter any issues with your RENPHO Steam Foot Spa, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No steam or insufficient steam.	Water tank is empty or low. Unit not powered on. Steam outlet blocked.	Refill the water tank with approximately 380ml of water. Ensure the unit is plugged in and the power button is pressed. Check for any obstructions in the steam outlet baffle.
Unit automatically shuts off.	Water tank is empty. Safety feature activated.	This is a normal safety feature. Refill the water tank. If the issue persists after refilling, contact customer support.
Unit does not turn on.	Not plugged in. Power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet. Try a different outlet.

Specifications

Key technical specifications for the RENPHO Steam Foot Spa Bath Massager.

- Model Number:** RP-SF101
- Product Dimensions:** 15.43 x 14.45 x 10.71 inches
- Item Weight:** 3 Pounds
- Material:** Plastic
- Color:** White
- Water Capacity:** Approx. 380 ml (for 50-65 minutes of use)
- Noise Level:** Lower than 45 dB
- Compatible Shoe Size:** Up to US13 / EU 46

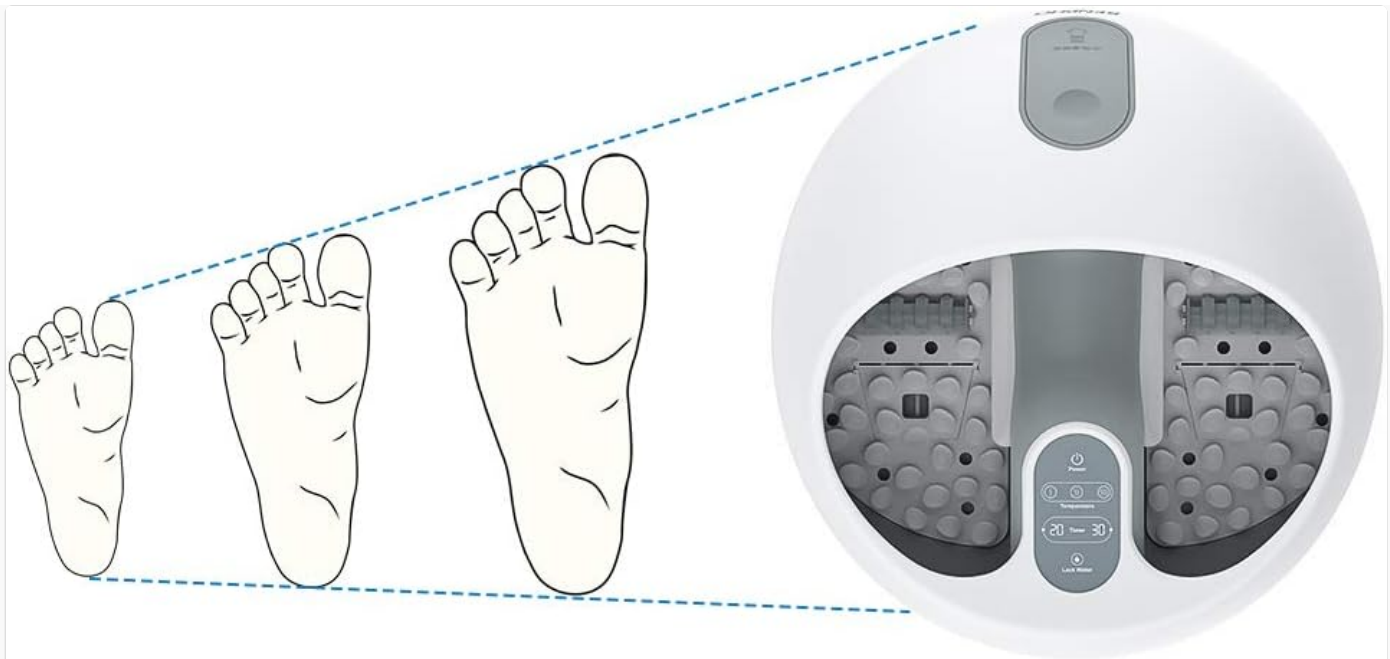

Compatible with shoe
size up to **US13/EU46**

Compatible with
most sizes of feet

Image: Foot size compatibility chart for the RENPHO Steam Foot Spa.

Warranty and Support

RENPHO is committed to providing high-quality products and customer satisfaction. For warranty information, technical support, or any inquiries regarding your Steam Foot Spa Bath Massager, please contact RENPHO customer service.

Please refer to the official RENPHO website or the product packaging for the most up-to-date contact information and warranty details.

© 2023 RENPHO. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question