

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bellababy](#) /

› [Bellababy Wipe Warmer BLA-3501-CA Instruction Manual](#)

Bellababy BLA-3501-CA

Bellababy Wipe Warmer (Model BLA-3501-CA) Instruction Manual

Constant Temperature Control with Night Light and Car Charger

1. INTRODUCTION

Thank you for choosing the Bellababy Wipe Warmer. This device is designed to provide warm, comfortable wipes for your baby, enhancing comfort during diaper changes. It features constant temperature control, a soft night light, and includes a car charger for portable use. Please read this manual thoroughly before use to ensure proper operation and safety.

2. IMPORTANT SAFETY INFORMATION

- Read all instructions before using the wipe warmer.
- Do not immerse the unit in water or other liquids. This product is an electrical appliance and is not waterproof.
- Always unplug the warmer before cleaning or when not in use for extended periods.
- Keep out of reach of children. This is not a toy.
- Use only the provided power adapter and car charger.
- Do not operate if the cord or plug is damaged, or if the unit malfunctions or has been damaged in any manner.
- Ensure the warmer is placed on a stable, flat surface away from direct sunlight or heat sources.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.
- To prevent overheating, ensure wipes remain in their original packaging inside the warmer. Do not add loose water directly into the warmer.

3. PRODUCT FEATURES

- **Dual Temperature Settings:** Choose between 40°C (104°F) and 45°C (113°F) to suit your baby's comfort and room temperature.
- **LED Display:** Real-time and target temperature are displayed for easy monitoring.

- **Soft Night Light:** Touch-controlled night light for nighttime diaper changes, automatically turns off after 10 minutes.
- **Portable Use:** Includes a car charger for convenient use during travel.
- **Large Capacity:** Accommodates most standard wipe brands and full packs of wipes (up to 7"x4"x3").
- **Surround Heating System:** Ensures wipes are warmed evenly and remain moist.
- **Easy Access:** Flip-top lid allows for quick and easy access to wipes.



Image: The Bellababy Wipe Warmer displaying temperature options on its LED screen.

Easy&Conevenient



Put in wipes with packaging
Do not have to add water

Image: Diagram illustrating the surround heating design for 24-hour constant temperature.

4. PACKAGE CONTENTS

Please check the package for the following items:

- Bellababy Wipe Warmer Unit
- AC Power Adapter (110-240V)
- Car Charger
- Instruction Manual (this document)

5. SETUP

1. **Placement:** Place the wipe warmer on a flat, stable surface near a power outlet.
2. **Power Connection:** Connect the AC power adapter to the warmer and then plug it into a standard 110-240V wall outlet. The LED display will illuminate.



Image: The wipe warmer plugged into a wall outlet.

3. Loading Wipes:

- Open the flip-top lid of the warmer.
- Take a new pack of baby wipes. It is recommended to keep the wipes in their original packaging to maintain moisture and prevent direct contact with the heating element.
- Cut an opening in the top of the wipe packaging, similar to how you would for a regular wipe dispenser.
- Place the entire wipe pack into the warmer. Ensure the first wipe is accessible through the dispenser opening.
- Close the flip-top lid securely.



Image: The wipe warmer with an open lid, showing a pack of wipes and internal dimensions.

4. **Initial Heating:** Allow approximately 1-2 hours for the wipes to reach the desired temperature after initial setup.

6. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button on the touch screen to turn the unit on or off. The LED display will show the current and target temperatures when on.
2. **Temperature Selection:** Use the temperature control buttons on the touch screen to switch between 40°C and 45°C. The selected temperature will be displayed.
3. **Night Light Operation:**
 - Touch the light icon button on the front panel to turn the soft night light on.
 - The night light will automatically turn off after 10 minutes to conserve energy and avoid disturbing sleep.
 - Touch the light icon button again to turn it off manually.



Come with a vehicle adapter to use in a car

Image: The wipe warmer with its night light on, designed for use during diaper changes without disturbing a sleeping baby.

4. **Dispensing Wipes:** Open the small dispenser flap on the flip-top lid and pull out a wipe as needed. Close the flap after use to retain moisture and heat.

5. **Using the Car Charger:**

- Unplug the AC power adapter from the warmer.
- Connect the provided car charger to the warmer's power input.
- Plug the other end of the car charger into your vehicle's 12V power outlet (cigarette lighter socket).
- The warmer will operate as usual, providing warm wipes on the go.

Surround Heating Design 24 Hours Constant Temperature

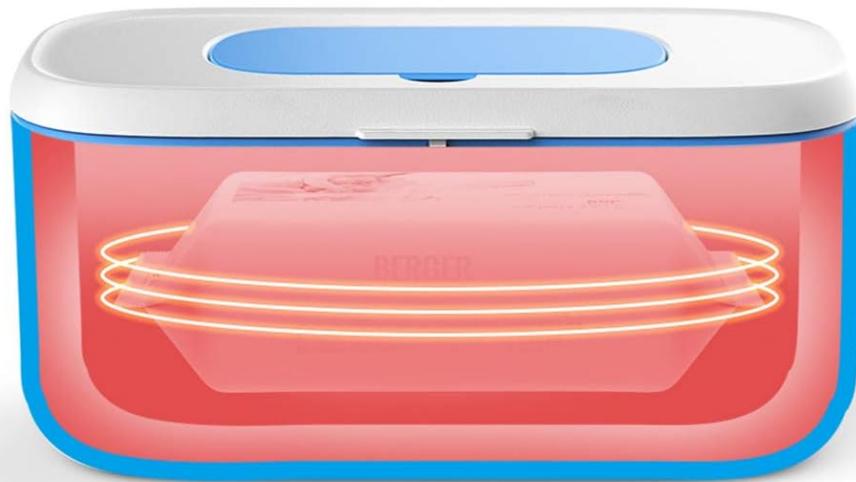


Image: The wipe warmer in use inside a car, powered by the vehicle's adapter.

7. MAINTENANCE AND CLEANING

- **Always unplug the warmer** from the power source before cleaning.
- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Do not immerse the warmer in water.**
- Periodically check for condensation inside the warmer. If condensation builds up, carefully wipe it dry with a clean cloth after removing the wipe pack and unplugging the unit.
- Ensure the lid and dispenser flap are clean and free of debris to maintain a proper seal.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wipes are not warm.	Unit not plugged in; power button off; insufficient heating time; lid not closed properly.	Ensure unit is plugged in and powered on. Allow 1-2 hours for initial heating. Close lid securely.
Night light not working.	Unit not powered on; light button not pressed.	Ensure unit is powered on. Press the light icon button.
Lid gets stuck or does not close properly.	Debris in hinge; misalignment; damaged lid.	Check for and remove any debris. Gently realign the lid. If damaged, contact customer support.
Buzzing sound from unit.	Normal operation noise; internal component vibration.	A slight buzzing sound can be normal for some electrical appliances. If the sound is excessively loud or unusual, discontinue use and contact customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

Wipes dry out quickly.	Lid not closed properly; wipes not in original packaging; low moisture wipes.	Ensure lid and dispenser flap are closed tightly. Keep wipes in their original, sealed packaging. Consider using wipes with higher moisture content.
------------------------	---	--

9. SPECIFICATIONS

- **Model Number:** BLA-3501-CA
- **Power Input:** 110-240V AC
- **Rated Power:** 24W
- **Temperature Settings:** 40°C (104°F), 45°C (113°F)
- **Dimensions (approx.):** 24.8 x 15.8 x 11.9 cm (9.76 x 6.22 x 4.69 inches)
- **Item Weight:** 870 g (1.92 lbs)
- **Night Light:** Automatic shut-off after 10 minutes

10. WARRANTY INFORMATION

For detailed warranty information, please refer to the product packaging or visit the official Bellababy website. Keep your purchase receipt as proof of purchase for any warranty claims.

11. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Bellababy Wipe Warmer, please contact Bellababy customer support through their official website or the contact information provided on the product packaging.