

Nuance Dragon 0POWM3N9-E01

Nuance PowerMic III Wired USB Dictation Microphone User Manual

Model: 0POWM3N9-E01

[Overview](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty &](#)[Support](#)

1. PRODUCT OVERVIEW

The Nuance PowerMic III is a handheld speech recognition microphone designed to enhance PC dictation efficiency. It integrates full-function, Microsoft-compatible PC mouse capabilities, reducing the need to switch between microphone, mouse, and keyboard. This device is ideal for navigating on-screen templates, recording voice, and utilizing voice fill-in features for customized reports.

Key Features:

- **Streamlined Workflow:** Designed to simplify review and editing processes.
- **USB Plug-and-Play:** Easy installation with standard USB connectivity.
- **Integrated PC Mouse Functions:** Full mouse capabilities for on-screen navigation and selection.
- **Unidirectional Microphone with Noise-Cancellation:** Ensures high accuracy in various environments by minimizing background noise.
- **Dragon Product Compatibility:** Seamless integration with Nuance Dragon speech recognition software.

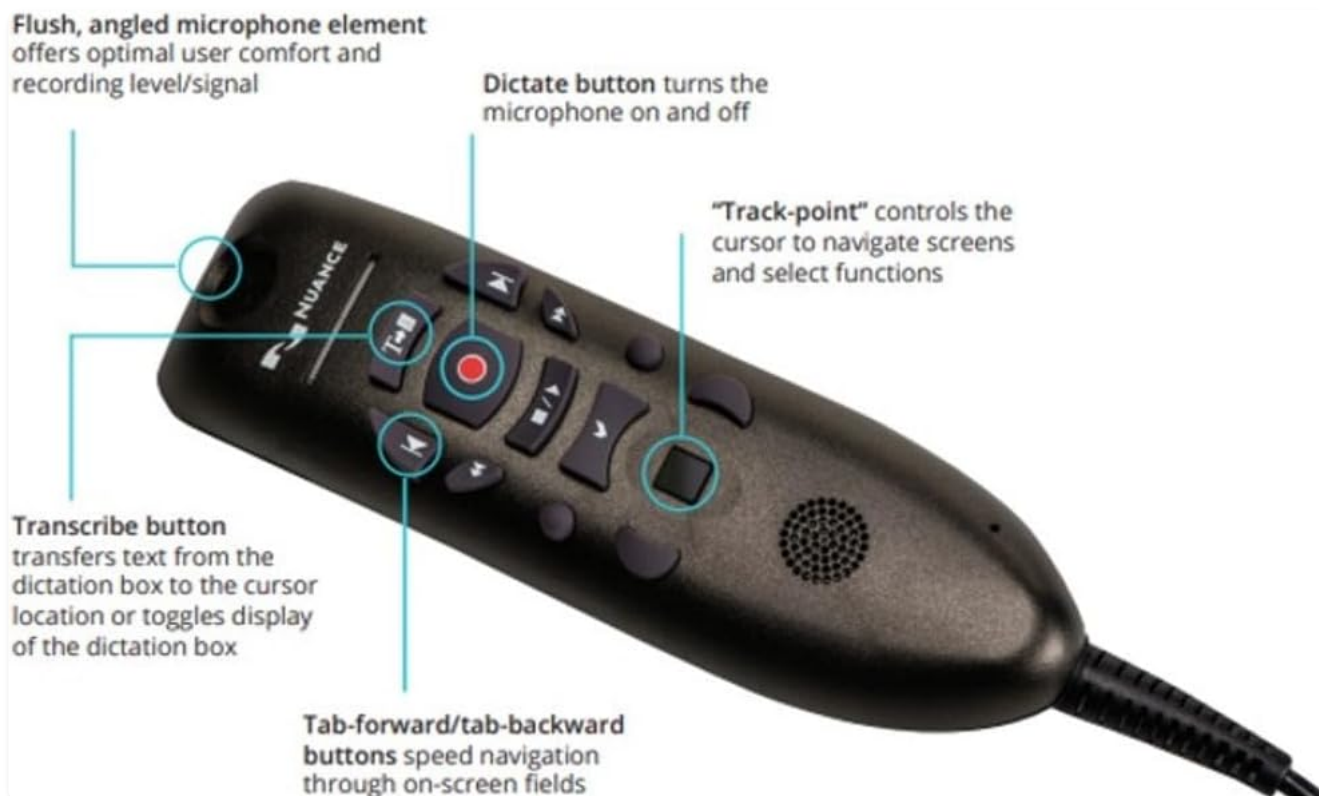


Figure 1: Nuance PowerMic III with labeled controls for dictation and mouse functions.

2. SETUP INSTRUCTIONS

The Nuance PowerMic III offers simple plug-and-play installation for compatible Windows operating systems.

2.1 System Requirements:

- **Operating System:** Windows 7, Windows 8.1, Windows 10.
- **USB Port:** USB 1.1 or higher (must deliver a minimum of 500mA for power).
- **Software:** Compatible with Dragon products.

2.2 Connecting the Microphone:

1. Locate an available USB port on your computer.
2. Plug the USB connector of the PowerMic III into the USB port.
3. The operating system will automatically detect the device and install necessary drivers. This process may take a few moments.
4. Once drivers are installed, the device is ready for use with your Dragon speech recognition software.



Figure 2: The Nuance PowerMic III connected via its USB cable, shown with optional mounting accessories.

3. OPERATING INSTRUCTIONS

The PowerMic III is designed for intuitive operation, combining dictation and mouse functionalities.

3.1 Dictation Controls:

- **Record Button (Red Circle):** Press and hold to begin dictation. Release to pause. A red indicator light will illuminate when recording is active.
- **Play/Pause Button:** Controls playback of recorded audio.
- **Fast Forward/Rewind Buttons:** Navigate through recorded audio or text.
- **Tab-Forward/Tab-Backward Buttons:** Quickly move between fields in on-screen templates.
- **Transcribe Button:** Transfers text from the dictation box to the cursor location or toggles the display of the dictation box.

3.2 Integrated Mouse Functions:

- **Track-point:** Use the track-point to control the on-screen cursor for navigation and selecting functions.
- **Left/Right Mouse Buttons:** Dedicated buttons for standard left and right-click actions.

3.3 Sound Quality and Noise Cancellation:

The unidirectional microphone with noise-cancellation technology ensures high accuracy by focusing on your voice and minimizing ambient background noise. This feature is crucial for clear and precise speech recognition, even in busy environments.

Video 1: A user demonstrates the Nuance PowerMic III, highlighting its ease of use and accuracy for dictation.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Nuance PowerMic III, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the microphone. Avoid abrasive cleaners or solvents.
- **Storage:** Store the microphone in a clean, dry place away from extreme temperatures and direct sunlight.
- **Cable Care:** Avoid bending or twisting the USB cable excessively to prevent internal damage.
- **Avoid Liquids:** Do not expose the device to water or other liquids.



Figure 3: Rear view of the Nuance PowerMic III, showing its ergonomic design for comfortable handling.

5. TROUBLESHOOTING

If you encounter issues with your Nuance PowerMic III, refer to the following common solutions:

- **Microphone Not Responding:**
 - Ensure the USB cable is securely connected to both the microphone and the computer.

- Try plugging the microphone into a different USB port.
- Restart your computer.
- Verify that the necessary drivers are installed and updated through your operating system's Device Manager.

- **Poor Dictation Accuracy:**

- Ensure you are speaking clearly and directly into the microphone.
- Check for excessive background noise in your environment. The noise-cancellation feature works best when direct speech is prominent.
- Confirm that your Dragon speech recognition software is properly configured and your user profile is optimized for your voice.

- **Mouse Functions Not Working:**

- Check USB connection as described above.
- Ensure no other mouse devices are conflicting with the PowerMic III's integrated mouse functions.

6. SPECIFICATIONS

Feature	Detail
Model Number	0POWM3N9-E01
Microphone Form Factor	Handheld
Connectivity Technology	USB (Wired)
Cable Length	9 ft
Operating System Compatibility	Windows 7, Windows 8.1, Windows 10
USB Requirement	1.1 or higher (min 500mA power delivery)
Signal-to-Noise Ratio	70 dB
Frequency Response (Microphone)	20 - 16,000 Hz
Frequency Response (Speaker)	500 - 5,000 Hz
Power Consumption	Max 500mA
Item Weight	10.2 ounces (0.64 Pounds)
Product Dimensions (L x W x H)	8.86 x 7.2 x 2.13 inches
Color	Black
Included Components	Microphone
Polar Pattern	Unidirectional



- **Color
Black**
- **Connector Type
USB**
- **Connectivity
Technology
USB**
- **Power Source
Corded Electric**

Figure 4: The Nuance PowerMic III alongside a summary of its technical specifications.

7. WARRANTY AND SUPPORT

7.1 Warranty Information:

The Nuance PowerMic III typically comes with a 2-year manufacturer's warranty. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation included with your product or visit the official Nuance website.

7.2 Technical Support:

For technical assistance, driver updates, or further information regarding your Nuance PowerMic III, please visit the official Nuance website at www.nuance.com. The website provides resources for system requirements and software support.



Figure 5: The included mounting holder for convenient storage of the PowerMic III.

© 2026 Nuance Communications. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question