

[Manuals.plus](#) /

› [JAYEGT](#) /

› JAYEGT Motorized Rotating Display Stand User Manual

JAYEGT B08K35HPJ4

JAYEGT Motorized Rotating Display Stand User Manual

Model: B08K35HPJ4 (Black/Button Control)

1. INTRODUCTION

Thank you for choosing the JAYEGT Motorized Rotating Display Stand. This electronic turntable is designed to provide a 360-degree panoramic display for various items such as jewelry, watches, digital products, bags, models, and collectibles. It is ideal for use in shops, studios, exhibition halls, and for product photography or video shoots. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image 1.1: The JAYEGT Motorized Rotating Display Stand in black, showcasing its compact design and control buttons. A battery icon indicates its power capability.

2. SAFETY INFORMATION

Please read all safety instructions before using the product to prevent injury or damage.

- Do not expose the device to water or excessive moisture.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified personnel for service.
- Ensure the load placed on the turntable does not exceed the maximum weight capacity of 10 kg (22 lbs).
- Keep out of reach of children.
- Use only the provided USB cable for charging.

3. PRODUCT OVERVIEW AND COMPONENTS

The JAYEGT Motorized Rotating Display Stand features a simple, intuitive design with essential controls for versatile operation.

3.1 Main Components

- Rotating Platform
- Control Panel (R/L, SR, ASA buttons)
- USB Power Interface (IN-5V)
- Power Prompt Light
- Built-in Rechargeable Battery



Image 3.1: Close-up of the control panel showing the R/L (Rotation Direction), SR (Speed Regulation), and ASA (Angle Adjustment) buttons, along with the IN-5V USB power interface.

4. SETUP

The display stand offers flexible power options for convenience.

4.1 Power Supply

The JAYEGT Motorized Rotating Display Stand can be powered in two ways:

1. **USB Cable:** Connect the provided USB cable to the IN-5V port on the stand and to a USB power source (e.g., computer, wall adapter, power bank).
2. **Built-in Rechargeable Battery:** The stand includes a built-in rechargeable lithium-ion battery, allowing for wireless operation.

TWO WAYS TO POWER THE DISPLAY STAND



Image 4.1: Illustration of the two power supply methods: using the USB cable connected to the IN-5V port or utilizing the internal rechargeable battery, accessible via the battery compartment on the underside.

4.2 Initial Use

Before first use, it is recommended to fully charge the built-in battery. Connect the USB cable to a power source until the power prompt light indicates a full charge.



Image 4.2: The JAYEGT Motorized Rotating Display Stand shown with its packaging and the included USB cable, ready for initial setup and charging.

5. OPERATING INSTRUCTIONS

The display stand is designed for easy operation with its intuitive button controls.

5.1 Power On/Off

- **To Power On:** Click any one of the control buttons (R/L, SR, or ASA). The power prompt light will illuminate.
- **To Power Off:** Long press any one of the control buttons for 3 seconds. The power prompt light will turn off.

5.2 Rotation Direction (R/L Button)

Press the **R/L** button to switch the rotation direction:

- One press: Rotates clockwise.
- Second press: Rotates counter-clockwise.

5.3 Speed Adjustment (SR Button)

Press the **SR** button to adjust the rotation speed. There are two gear speed regulations, typically resulting in 1-2

revolutions per minute. The turntable rotates one full round at speeds of 8, 15, or 30 seconds per rotation. Cycle through these options by pressing the SR button.

5.4 Angle Adjustment (ASA Button)

Press the **ASA** button to adjust the rotation angle. The stand can be set to automatically rotate back and forth at angles of 90 or 180 degrees. Cycle through these options by pressing the ASA button.



Image 5.1: The JAYEGT display stand showcasing an item with a 360-degree panoramic display, suitable for mobile phone live streaming and product presentations.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your display stand.

6.1 Cleaning

Wipe the surface of the display stand with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.

6.2 Battery Care

To maximize battery life:

- Charge the battery fully before first use.
- Avoid completely draining the battery frequently.
- If storing the device for an extended period, charge the battery to about 50% and store in a cool, dry place.



Charge to use

A 3-hour fast charge
lasts about 8 hours

— SO BEAUTIFUL, AND SO LOVE —



Image 6.1: An illustration showing the JAYEGT display stand being charged. A 3-hour fast charge provides approximately 8 hours of operation.

7. TROUBLESHOOTING

If you encounter issues with your JAYEGT Motorized Rotating Display Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand does not power on.	Battery is depleted or USB cable is not connected properly.	Ensure the USB cable is securely connected to a power source. If using battery, charge the stand fully.
Stand is not rotating.	Overload, obstruction, or incorrect setting.	Check if the weight on the stand exceeds 10 kg. Remove any obstructions. Ensure the stand is powered on and not in a paused state.
Rotation is unstable or jerky.	Uneven load distribution or surface.	Distribute the item's weight evenly on the platform. Place the stand on a flat, stable surface.
Buttons are unresponsive.	Temporary software glitch.	Try powering off the device by long-pressing any button for 3 seconds, then power it back on.

8. SPECIFICATIONS

Detailed technical specifications for the JAYEGT Motorized Rotating Display Stand.

Feature	Specification
Brand	JAYEGT
Model	B08K35HPJ4
Shape	Round
Base Type	Pedestal
Assembly Required	No
Load Capacity	10 kg (22.1 Pounds)
Number of Levels	1
Product Dimensions (L x W x H)	5.74 x 5.74 x 1.38 inches (14.6 x 14.6 x 3.5 cm)
Item Weight	8.8 ounces (0.25 Kilograms)
Batteries	1 Lithium Ion battery (included)
Color	Black/Button Control
Material	Ceramic
UPC	675234607471





Boot up: Click Any key to open!

Power off: any key long press 3 seconds to power off!

10KG LOAD

High quality primary raw
materials for movement
Just for you to use more comfortable



White primary raw material



Black primary raw material





Image 8.1: The JAYEGT display stand demonstrating its robust 10KG (22lbs) load capacity, suitable for heavier items like dumbbells.

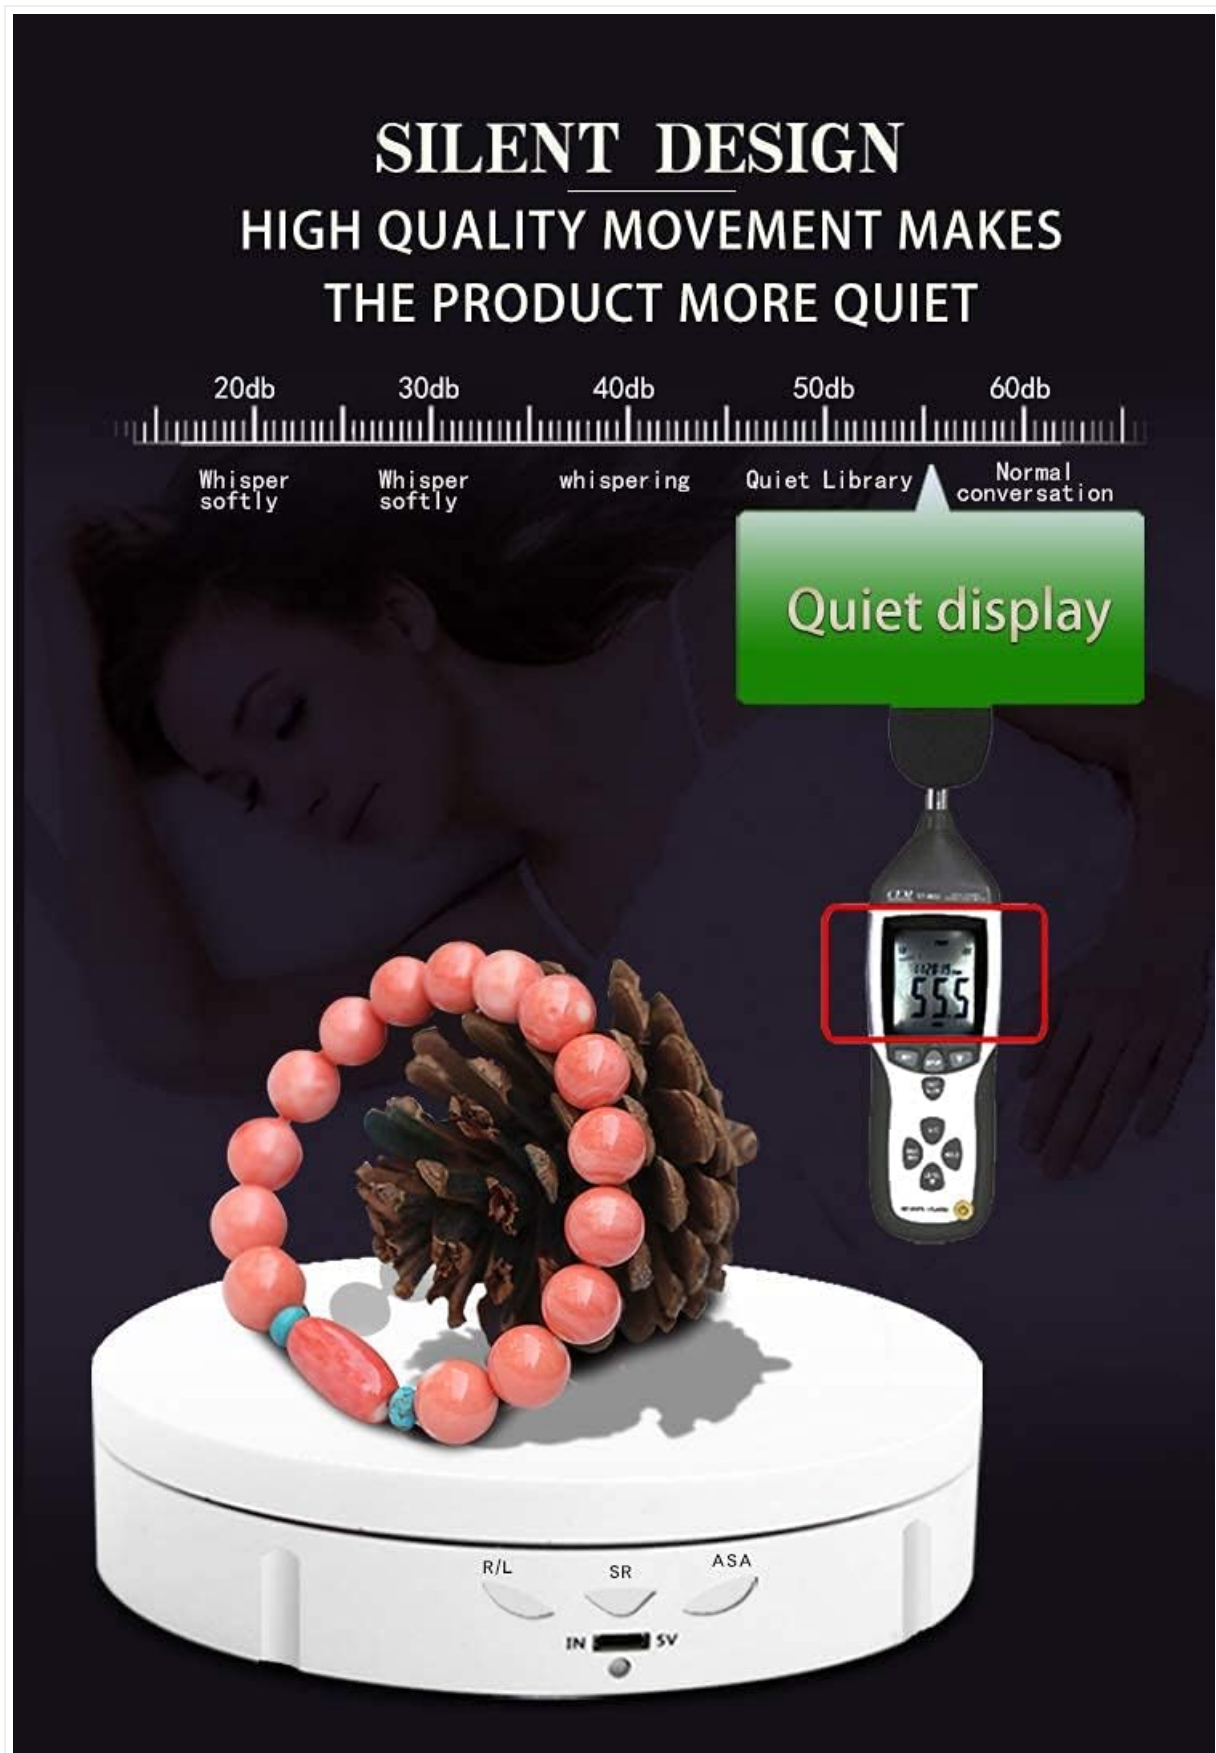


Image 8.2: An illustration highlighting the silent design of the JAYEGT display stand, indicating low noise levels suitable for quiet

9. WARRANTY AND SUPPORT

No specific warranty information is provided in this manual. For details regarding warranty coverage, terms, and conditions, please refer to the product packaging, the seller's website, or contact JAYEGT customer support directly. For technical support or further assistance, please visit the official JAYEGT store on Amazon or contact the seller through your purchase platform.

10. OFFICIAL PRODUCT VIDEOS

No official product videos were provided in the product data for this model. Please check the product listing on Amazon for any available video demonstrations or tutorials.

© 2024 JAYEGT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question