

[Manuals.plus](#) /

› [TEHOME](#) /

› TEHOME 16x24 Inch Black Metal Framed Recessed Bathroom Medicine Cabinet Instruction Manual

TEHOME TE-00150

TEHOME 16x24 Inch Black Metal Framed Recessed Bathroom Medicine Cabinet Instruction Manual

Model: TE-00150

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your TEHOME 16x24 inch Black Metal Framed Recessed Bathroom Medicine Cabinet. Please read these instructions carefully before installation and use to ensure proper function and longevity of your product.



Image: The TEHOME 16x24 inch Black Metal Framed Recessed Bathroom Medicine Cabinet, featuring a beveled mirror and matte black finish, installed in a modern bathroom setting above a sink.

SAFETY INFORMATION

Always follow the assembly and installation instructions provided with the product. Use appropriate safety gear when handling and installing the cabinet. Ensure the wall surface is secure and can support the weight of the cabinet before installation. Do not force the cabinet into place; if it does not fit, check the measurements and try again. Keep hands and fingers away from pinch points during assembly and installation.

PRODUCT FEATURES


- **Metal Framed Design:** Premium metal door with a matte black finish, framed with an elegantly beveled mirror. The door is equipped with strong magnetic hinges.
- **Tempered Adjustable Glass Shelves:** Includes two adjustable tempered-glass shelves. Tempered glass is manufactured through a process of extreme heating followed by rapid cooling, making it much harder than normal glass and resistant to breakage.

- **Reversible Installation:** The door is hinged on the left side only, but the entire unit can be flipped for reverse installation, allowing for right-hand opening.
- **Minimal Assembly:** This bathroom medicine cabinet comes 95% assembled. Users only need to set the two glass shelves into the cabinet.

SPECIFICATIONS

Feature	Detail
Brand	TEHOME
Model Number	TE-00150
Color	Matt Black
Product Dimensions	4.72"D x 16"W x 24"H
Wall Cutout Dimensions	13.74"W x 18.3"H x 3.25"D
Mounting Type	Recessed Wall Mount
Number of Shelves	2 (Adjustable Tempered Glass)
Frame Material	Metal
Item Weight	15 Pounds

UNIT CAN ONLY BE RECESSED MOUNTED

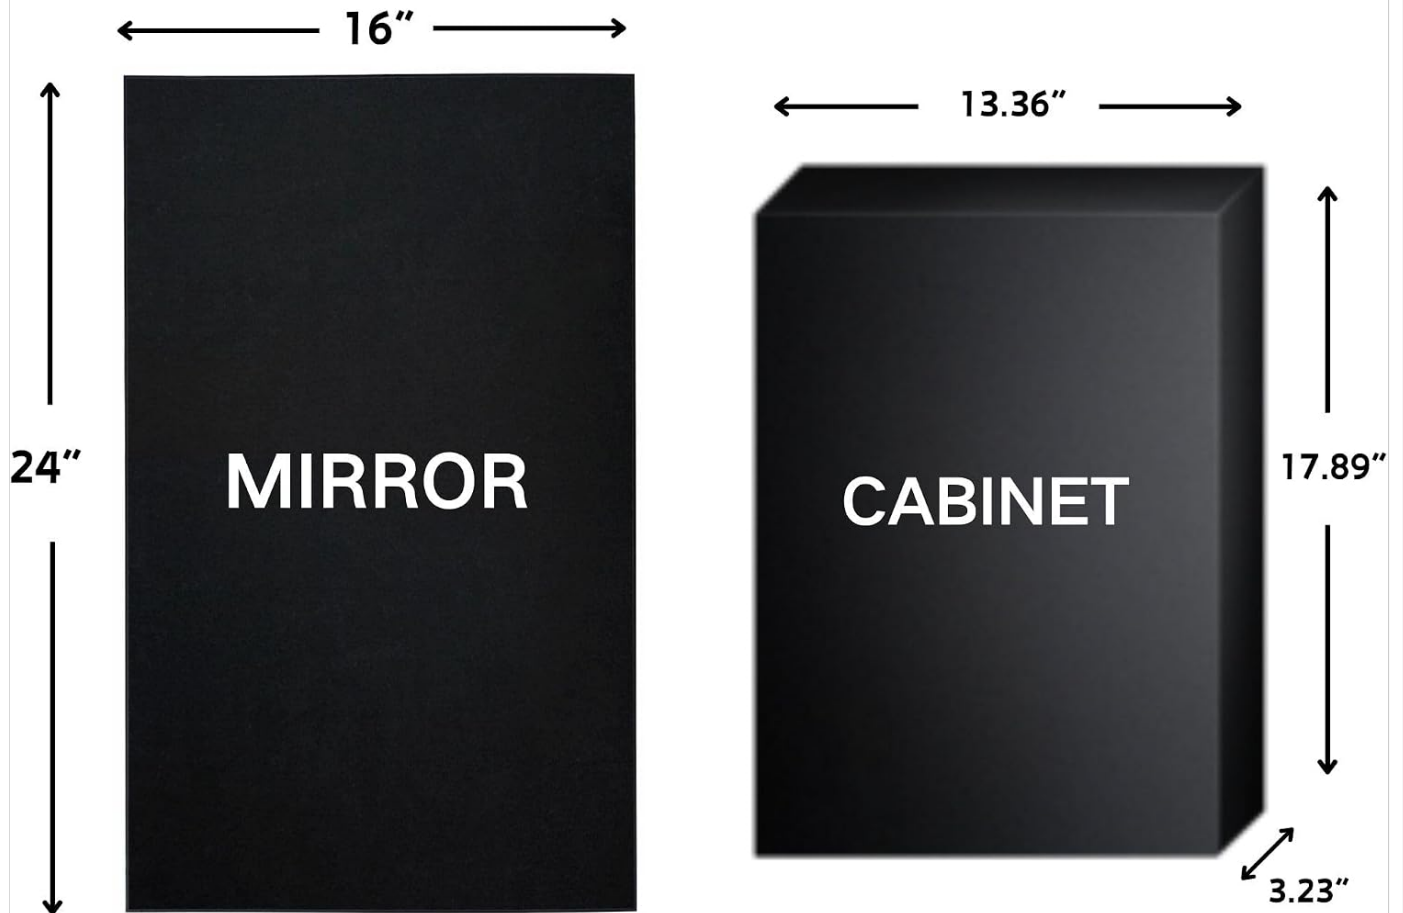

WHEN RECESSING THE UNIT THE WALL CUT SIZE WILL NEED TO BE WIDTH 13.74" HEIGHT 18.3" DEPTH 3.25".

Image: Detailed dimensions for the mirror (16"W x 24"H) and the cabinet body (13.36"W x 17.89"H x 3.23"D), with a note indicating the wall cutout size for recessed mounting.



Image: An additional diagram illustrating the overall dimensions of the mirror (16"W x 24"H) and the recessed cabinet, including the depth of the cabinet body (3.23").

INSTALLATION GUIDE

The TEHOME medicine cabinet is designed for recessed mounting only. It is crucial to prepare the wall opening accurately for a secure and flush installation.


1. Prepare the Wall Opening

- Identify the desired location for the cabinet. Ensure there are no electrical wires, plumbing, or other obstructions within the wall cavity.
- Measure and mark the wall cutout area. The required wall cutout dimensions are **13.74 inches wide x 18.3 inches**


high x 3.25 inches deep.

- Carefully cut the opening in the drywall or wall material according to the marked dimensions.

Mounting Option

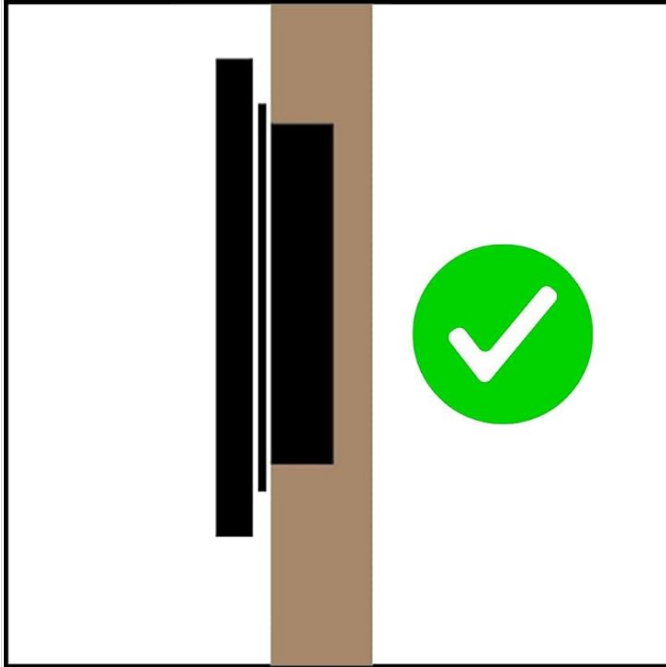

RECESS MOUNT

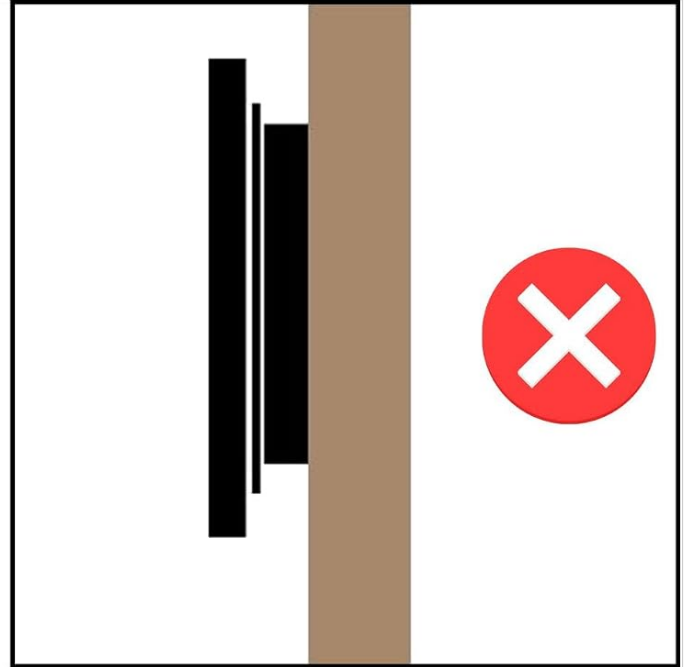

SURFACE MOUNT



SEE INSTALLATION GUIDE AND WALL CUT OUT SIZES

Image: A visual guide showing that the unit is designed for recessed mounting (correct) and not surface mounting (incorrect). The recessed mount shows the cabinet body fitting into the wall, with the mirror frame flush against the wall surface.

2. Mount the Cabinet Body

- Insert the cabinet body into the prepared wall opening.
- Secure the cabinet to the wall studs using appropriate fasteners (anchors and screws are typically included). Ensure the cabinet is level and flush with the wall surface.

3. Install Glass Shelves

- The cabinet includes two tempered-glass shelves.
- Insert the shelf pins into the desired height adjustment holes inside the cabinet.
- Carefully place the glass shelves onto the installed pins.



Image: The interior of the medicine cabinet, showcasing its black metal construction and two adjustable tempered-glass shelves, currently holding various bathroom items.

4. Door Orientation

The cabinet door is pre-hinged on the left side. If a right-hand opening is desired, the entire cabinet unit can be flipped during installation before securing it to the wall.

Door could open from either left OR right side



- Door is hinged on the left side only
- However, the entire unit can be flipped for reverse installation
- Including 2 adjustable tempered-glass shelves

Image: This image demonstrates the flexibility of the TEHOME medicine cabinet, showing how it can be installed to open from either the left or the right side by simply flipping the entire unit.

Your browser does not support the video tag.

Video: A brief demonstration of the TEHOME Black Metal Framed Recessed Bathroom Medicine Cabinet, highlighting its smooth door operation and interior storage capacity.

OPERATION

Opening and Closing the Door

The cabinet door features strong magnetic hinges that ensure a secure and smooth closure. To open, gently pull the door from the side opposite the hinges. To close, push the door until the magnets engage, holding it firmly in place.

Adjusting Shelves

The two tempered-glass shelves are adjustable. To change their height, carefully remove any items from the shelf, lift the shelf off its pins, and then reposition the pins into a different set of holes along the cabinet's interior side walls. Place the shelf back onto the pins, ensuring it is stable before loading items.

CARE AND MAINTENANCE

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping behind the frame.
- **Cleaning the Frame and Interior:** Wipe the matte black metal frame and interior surfaces with a soft, damp cloth.

Avoid harsh chemicals or abrasive cleaners, as these can damage the finish.

- **Glass Shelves:** The tempered glass shelves can be removed for thorough cleaning. Wash with mild soap and water, then dry completely before reinserting.
- **Hinges:** Periodically check the hinges for tightness. If they become loose, gently tighten the screws.

TROUBLESHOOTING

- **Door Does Not Stay Closed:** Ensure the magnetic hinges are clean and free of debris. Check if the cabinet is installed level and flush with the wall, as misalignment can affect the magnetic closure.
- **Shelves Appear Uneven:** Verify that the shelf pins are inserted completely and securely into corresponding holes on both sides of the cabinet. Ensure the pins are at the same height on both sides.
- **Difficulty Opening/Closing Door:** Check for any obstructions around the door or hinges. If the door feels stiff, ensure the hinges are not overtightened.

WARRANTY AND SUPPORT

TEHOME offers hardware replacement for its products. Customers who have purchased TEHOME mirrors are eligible for free hardware replacement. For support or to request replacement parts, please contact TEHOME customer service through their official channels.

© 2023 TEHOME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

