

[Manuals.plus](#) /

› [AIRTHEREAL](#) /

› Airthereal H13 HEPA Medical Grade Replacement Air Filter Instruction Manual

AIRTHEREAL AGH430 (Filter Model: 531-20-430F)


Airthereal H13 HEPA Medical Grade Replacement Air Filter

For Glory Days AGH430 Air Purifier

Model: 531-20-430F | Brand: AIRTHEREAL

PRODUCT OVERVIEW

This manual provides instructions for the Airthereal H13 HEPA Medical Grade Replacement Air Filter, designed specifically for the Airthereal Glory Days AGH430 Air Purifier. This filter is crucial for maintaining optimal air quality in your indoor environment by capturing various airborne particles and odors.

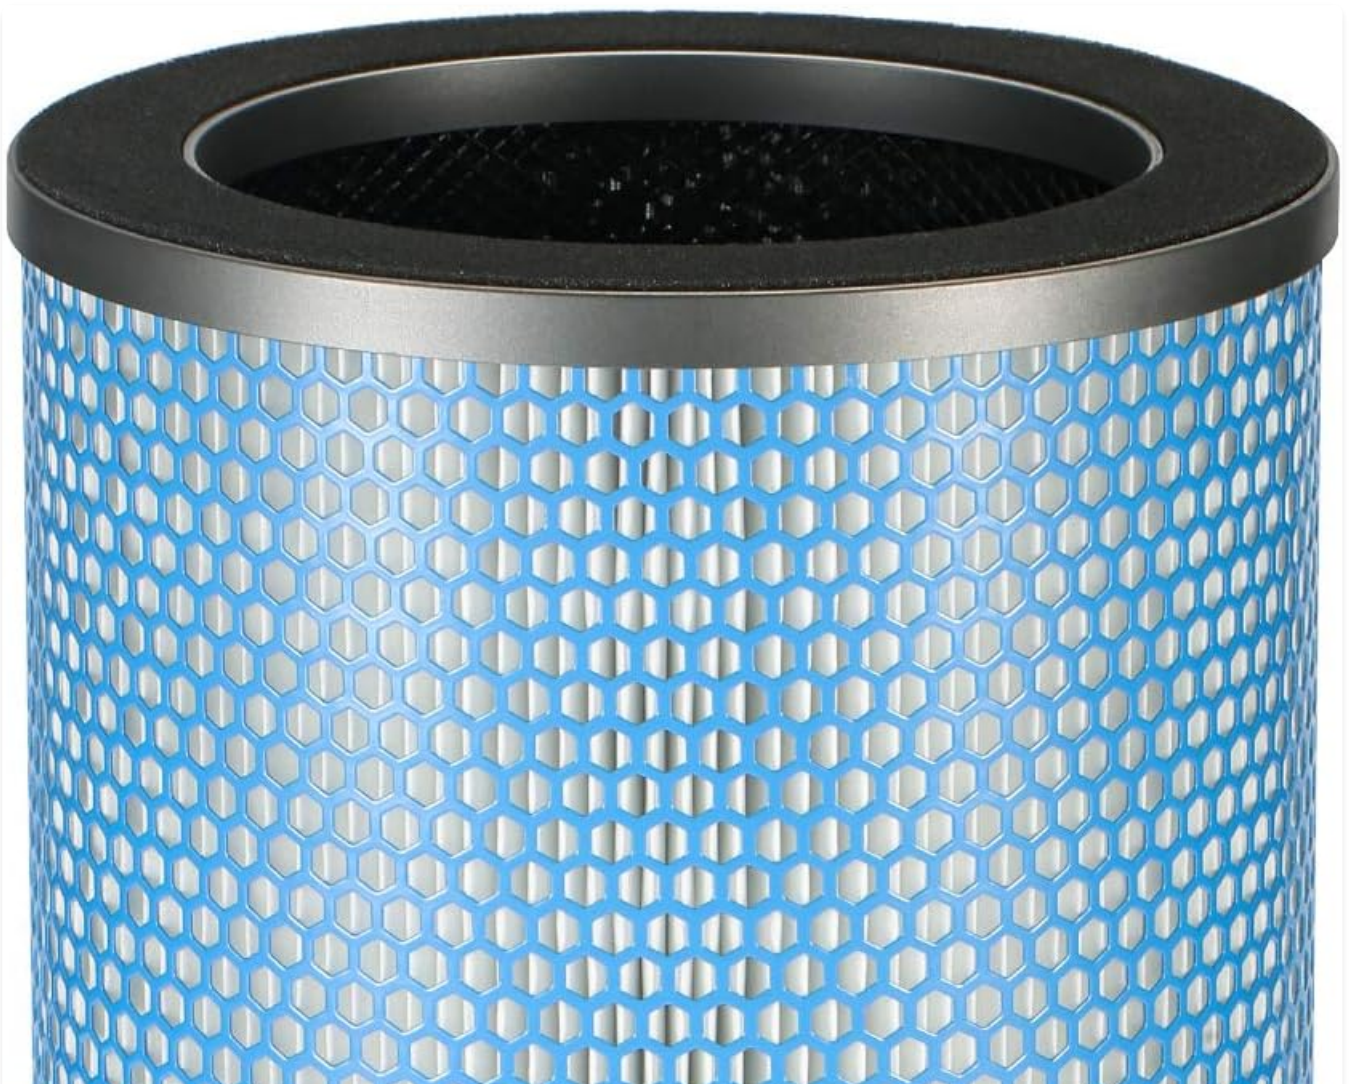



A cylindrical Airthereal H13 HEPA Medical Grade Replacement Air Filter, featuring a blue and white honeycomb pattern on its surface, designed for optimal air purification.

KEY FEATURES

- **Medical Grade Filtration:** A true HEPA filter can filter up to 99.97% of airborne particles 0.1 microns or larger, such as dust, pollen, smoke, odors, and dander.
- **3-Stage Filtration System:** Includes a pre-filter to capture dust and hair, an activated carbon filter to capture and eliminate odors, and an H13 HEPA filter to remove even the smallest particles from the air, ensuring cleaner, healthier air.
- **Optimized Design:** Thanks to the larger surface area provided by its cylindrical design, this replacement filter can capture more airborne particles than traditional flat filters.
- **Extended Durability:** Based on average daily use, the AGH430 medical filter can last up to 6 to 8 months, providing long-lasting performance.



① Vorfilter

fängt große Partikel, Tierhaare sowie Staub



② Echter HEPA H13 Filter medizinischer Qualität

Entfernt 99,97% der in der Luft befindlichen Partikel mit 0,1 Mikrometer oder größer



③ Kohlefilter

(mit Nano-Mineral, Kalkkatalysator, Photokatalysator und Molekularsieb)

filtert flüchtige Gerüche und entfernt diese




An exploded diagram showing the three layers of the Airthereal filter: a pre-filter for large particles, an activated carbon filter for odors, and an H13 HEPA filter for fine particles.

SPECIFICATIONS

Brand	AIRTHEREAL
Model Number	531-20-430F
Compatible Air Purifier	Airthereal Glory Days AGH430
Filter Type	H13 HEPA with Activated Carbon and Pre-filter

Dimensions (L x W x H)	20.5 x 20.5 x 30 cm (8.07 x 8.07 x 11.81 inches)
Weight	1.1 Kilograms (2.43 lbs)
Material	Glass Fiber Reinforced Plastic
UPC	816621023461

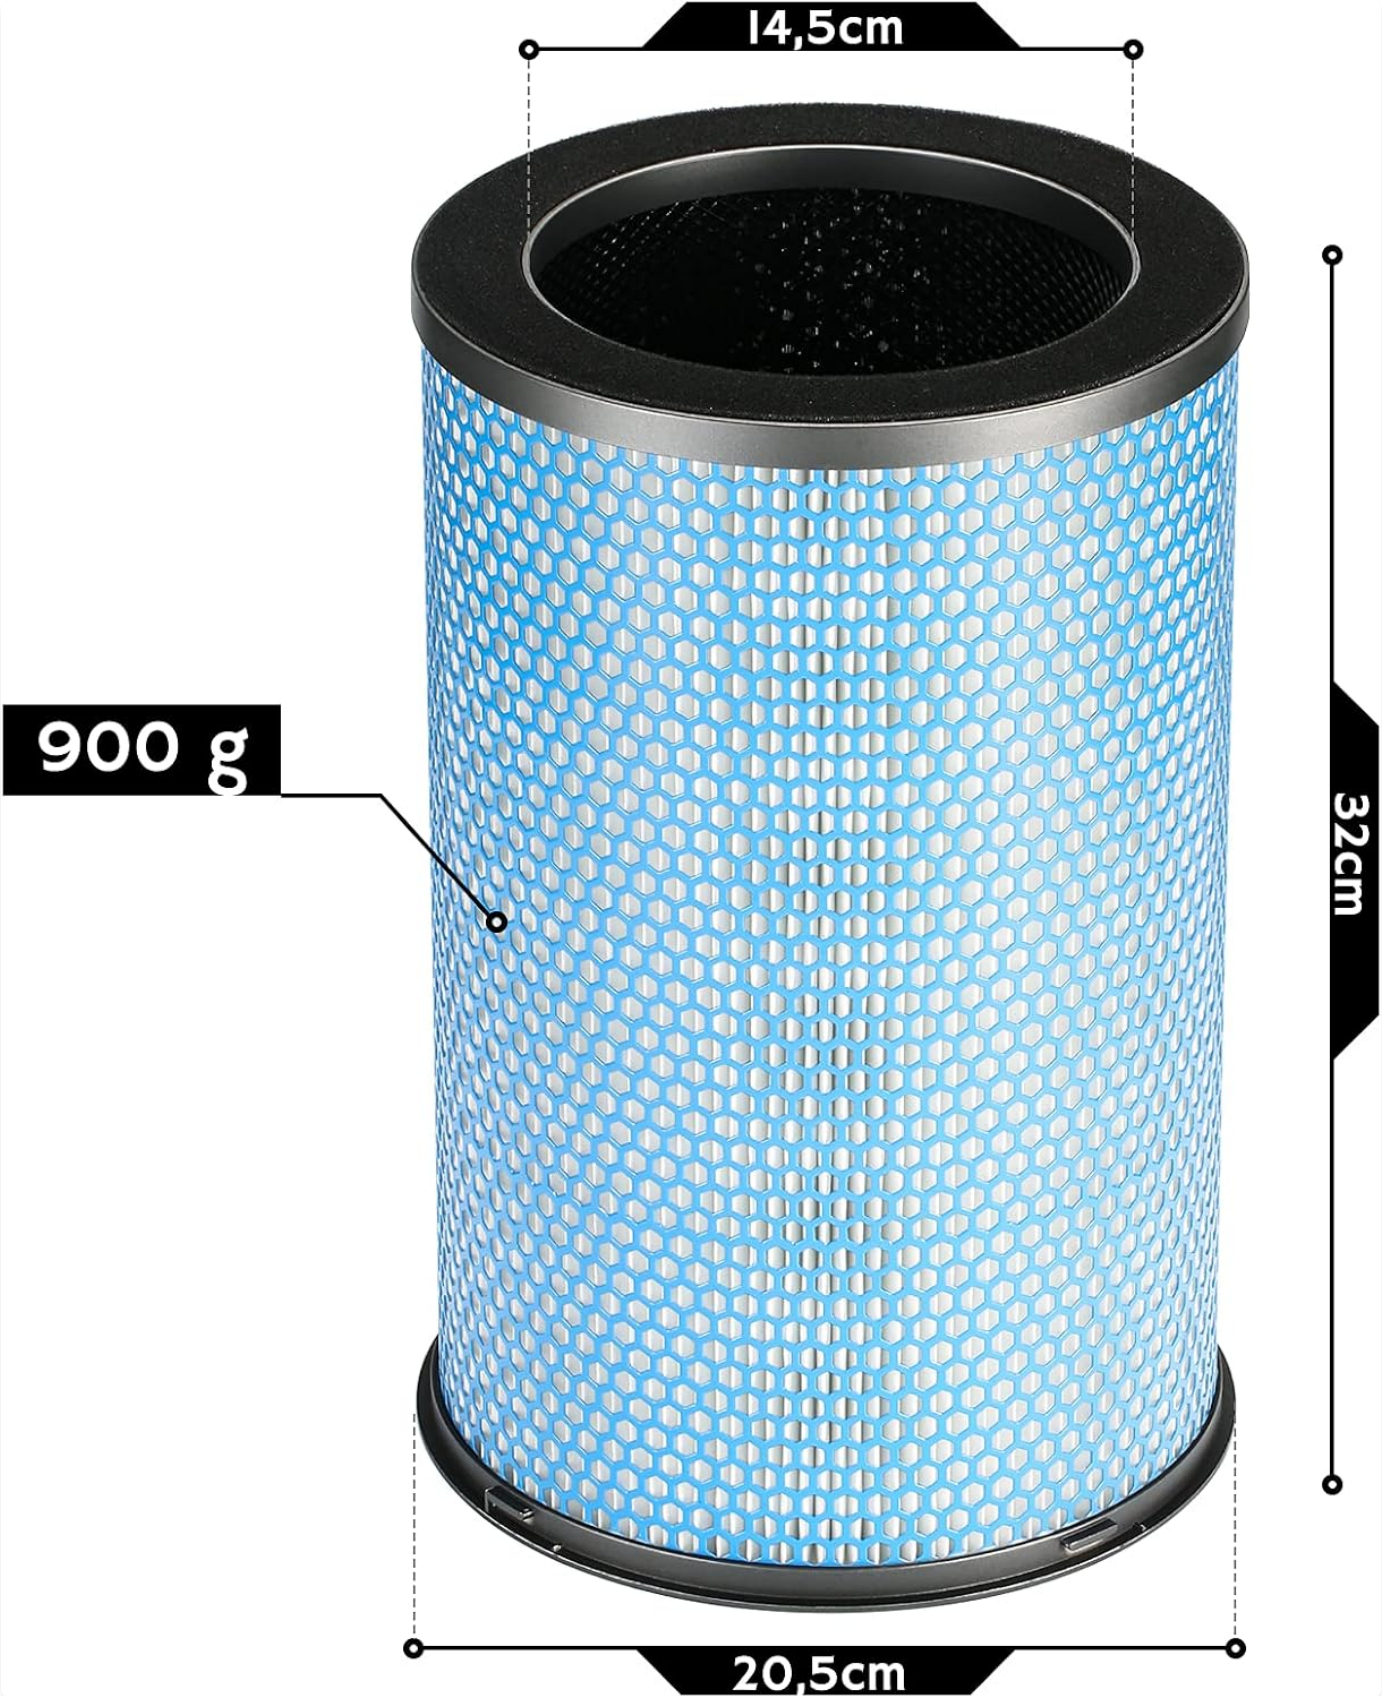

An image of the cylindrical filter with measurements indicating its height (32cm), diameter (20.5cm), and top opening diameter (14.5cm),

along with its weight (900g).



The Airthereal AGH430 Air Purifier stands beside its compatible H13 HEPA replacement filter, showcasing their intended pairing.

INSTALLATION AND REPLACEMENT

When to Replace Your Filter

Based on average daily use, the AGH430 medical filter can last up to 6 to 8 months or approximately 2500 operating hours. It is recommended to replace the filter when you observe any of the following signs:

- Increased noise from the air purifier.
- Reduced airflow from the air purifier.
- Visible clogging of the filter.
- Presence of unpleasant odors emanating from the device.

How to Replace Your Filter

1. Turn off the device and unplug the power cord before changing the filter.
2. Turn the bottom cover counter-clockwise to remove the old filter.
3. Remove the plastic bag from the new filter.
4. Insert the new filter into the device and lock the cover by turning the bottom cover clockwise.
5. Plug in the power cord and turn on the device.
6. Press and hold the power button for 10 seconds to reset the replacement reminder.

Einfaches Auswechseln des Luftfilters

1. Schalten Sie das Gerät aus und ziehen Sie den Netzstecker, bevor Sie den Filter wechseln. Drehen Sie die untere Abdeckung gegen den Uhrzeigersinn, um den alten Filter herauszunehmen. Entfernen Sie die Plastiktüte vom neuen Filter.

2. Setzen Sie den neuen Filter in das Gerät ein und verriegeln Sie die Abdeckung wieder durch Drehen der unteren Abdeckung im Uhrzeigersinn.

3. Stecken Sie den Netzstecker wieder ein und schalten Sie das Gerät ein. Halten Sie die Einschalttaste 10 Sekunden lang gedrückt, um die Austausch-Erinnerung zurückzusetzen.



A series of three images demonstrating the filter replacement process: 1. Turning the bottom cover counter-clockwise to open, 2. Removing the old filter and inserting the new one, 3. Turning the bottom cover clockwise to secure the new filter.

H13 HEPA Luftfilter medizinischer Qualität

Automatische Erinnerung für Filterwechsel
Filtert bis zu 99,97% der in der Luft befindlichen Partikel mit 0,1 Mikrometer oder größer wie Staub, Pollen, Rauch, Gerüche, Schimmelpilzsporen und Tierhaare heraus



A close-up view of the Airthereal H13 HEPA filter being carefully placed into the base of the Airthereal AGH430 air purifier.

Note: This replacement filter is only compatible with the Airthereal Glory Days AGH430 Air Purifier.

TROUBLESHOOTING

While this product is a replacement filter, issues can sometimes arise related to its installation or the air purifier's performance after replacement. Here are some common troubleshooting tips:

- **Air Purifier Not Turning On After Filter Replacement:** Ensure the filter is correctly seated and the bottom cover is securely locked. Also, verify the power cord is fully plugged into a working outlet.
- **Filter Change Indicator Still On:** After replacing the filter, it is essential to reset the filter change reminder. Press and hold the power button on your AGH430 air purifier for 10 seconds until the indicator light turns off.
- **Reduced Airflow or Persistent Odors After Replacement:** Double-check that the plastic bag has been completely removed from the new filter before installation. If the issue persists, inspect the air purifier's intake and output vents for any obstructions.

WARRANTY AND SUPPORT

For specific warranty information regarding your Airthereal AGH430 Air Purifier or the replacement filter, please refer to the original air purifier's user manual or visit the official Airthereal website.

For technical support, product inquiries, or further assistance, please contact Airthereal customer service through their official channels. Contact information is typically provided with the product packaging or on the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question