

Schellenberg 50501

Schellenberg 50501 Roller Shutter Winder Instruction Manual

Model: 50501 | Brand: Schellenberg

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Schellenberg 50501 Roller Shutter Winder. Please read this manual carefully before installation and use to ensure safe and efficient operation of the product. Keep this manual for future reference.



Figure 1: Side view of the Schellenberg 50501 Roller Shutter Winder. This image shows the compact design of the winder, which is designed for wall mounting and features a pre-assembled cord.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the product:

- Ensure the mounting surface is stable and suitable for the weight of the winder and the forces exerted during operation.
- Do not attempt to modify the product in any way. Unauthorized modifications can lead to malfunction and void the warranty.
- Keep children and pets away from the roller shutter system during operation.

- Use only the specified cord diameter (max. 5 mm) to ensure proper winding and prevent damage.
- If you encounter any issues or are unsure about any step, consult a qualified professional.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Schellenberg 50501 Roller Shutter Winder with pre-assembled 5m cord (white/black)

4. SETUP AND INSTALLATION

The Schellenberg 50501 Roller Shutter Winder is designed for wall mounting. Its foldable and 180° swiveling housing allows for flexible installation and the continued use of an existing cable.

1. **Preparation:** Identify the ideal mounting position on the wall, window frame, or reveal. Ensure there is sufficient space for the winder to operate freely and for the cord to run smoothly to the roller shutter. The hole spacing for mounting is 155 mm.
2. **Marking Drill Holes:** Hold the winder in the desired position and mark the drilling points for the mounting screws. Use a spirit level to ensure the winder is installed straight.
3. **Drilling:** Drill holes at the marked points. Use an appropriate drill bit for your wall material (e.g., masonry, wood, plasterboard). Insert wall plugs if necessary.
4. **Mounting the Winder:** Screw the roller shutter winder securely onto the wall using suitable screws. Ensure it is firmly attached and does not wobble.
5. **Cord Routing:** The winder comes with a pre-assembled 5m cord. If you are replacing an old winder and wish to use an existing cord, the housing can be opened and swiveled 180° to facilitate this. Ensure the cord diameter does not exceed 5 mm. Route the cord through the winder's opening and connect it to your roller shutter mechanism.
6. **Testing:** Gently pull the cord to ensure the roller shutter moves up and down smoothly without obstruction. Check that the winder mechanism operates correctly.



Figure 2: The roller shutter winder installed on a wall next to a window. This image illustrates a typical installation scenario, showing the winder's discreet placement and how the cord integrates with the window frame.



Figure 3: Detailed view of the winder's internal mechanism and its 180° swiveling capability. This image highlights the design feature that allows the housing to open and rotate, making cord replacement or adjustment easier.

5. OPERATING INSTRUCTIONS

The Schellenberg 50501 Roller Shutter Winder operates manually:

- To raise the roller shutter, pull the cord downwards smoothly and steadily.
- To lower the roller shutter, release the cord slowly, allowing the shutter to descend under control.
- Ensure the cord is always guided properly through the winder's opening to prevent tangling or excessive wear.

6. MAINTENANCE

Regular maintenance will prolong the life of your roller shutter winder:

- **Cleaning:** Wipe the winder's exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cord Inspection:** Periodically check the cord for signs of fraying, wear, or damage. Replace the cord if any damage is observed to ensure safe operation.
- **Mechanism Check:** Occasionally check that the internal winding mechanism operates smoothly. If it becomes stiff, a small amount of silicone spray lubricant can be applied, avoiding contact with the cord itself.
- **Mounting Security:** Ensure the winder remains securely fastened to the wall. Tighten screws if they become loose.

7. TROUBLESHOOTING

If you encounter issues with your roller shutter winder, try the following solutions:

- **Roller Shutter Not Moving Smoothly:**
 - Check if the cord is tangled or obstructed within the winder or along its path.
 - Inspect the roller shutter itself for any obstructions in its tracks or damage to the slats.
 - Ensure the winder is securely mounted and not misaligned.
- **Cord Fraying or Breaking:**
 - This indicates wear. The cord needs to be replaced. Ensure the replacement cord has a diameter of no more than 5 mm.
 - Check for sharp edges on the winder or the roller shutter's cord guide that might be causing

excessive wear.

- **Winder Mechanism Stiff:**

- Clean any dust or debris from the mechanism.
- Apply a small amount of silicone-based lubricant to the moving parts, avoiding the cord.

If the problem persists after attempting these solutions, please contact Schellenberg customer support or a qualified technician.

8. SPECIFICATIONS


Feature	Specification
Manufacturer	Schellenberg
Product Dimensions (L x W x H)	16.6 x 13 x 2.4 cm; 320 grams
Reference / Item Model Number	50501
Color	White
Style	Cord Winder
Material	Plastic Resin
Installation Method / Type	Wall Mounting
Quantity of Items	1
Components Included	1 roller shutter cable winder with pre-assembled cable
Battery(ies) Included	No
Battery(ies) Required	No
Operating Mode	Manual
Capacity	5 Meters (cord length)
Max. Cable Diameter	5 mm
Hole Spacing	155 mm
Country of Origin	Germany

9. WARRANTY AND SUPPORT

Schellenberg products are known for their quality and durability. This product comes with **1-year spare parts availability** guarantee.

For technical support, warranty claims, or questions regarding your Schellenberg 50501 Roller Shutter Winder, please contact Schellenberg customer service through their official website or your point of purchase. Please have your model number (50501) and purchase details ready when contacting support.

Documents - Schellenberg – 50501

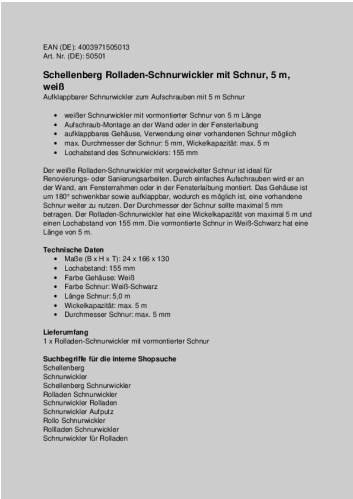


[\[pdf\]](#) User Manual Datasheet

50501 Beschreibung reichmann Schellenberg Rolladen Schnurwickler mit Schnur 5 m weißDE weiß Aufklappbarer zum Aufschrauben weißer mit as 36225315media hornbach at hb eek productdatasheet as 36225315 |||

EAN DE : 4003971**505013** Art. Nr. DE : **50501** Schellenberg Rolladen-Schnurwickler mit Schnur, 5 m, wei Aufklappbarer Schnurwickler zum Aufschrauben mit 5 m Schnur weier Schnurwickler mit vormontierter Schnur von 5 m Lnge Aufschraub-Montage an der Wand oder in der Fensterlaibung aufklappbares Gehus...

lang:de **score:26** filesize: 16.44 K page_count: 1 document date: 2021-02-03

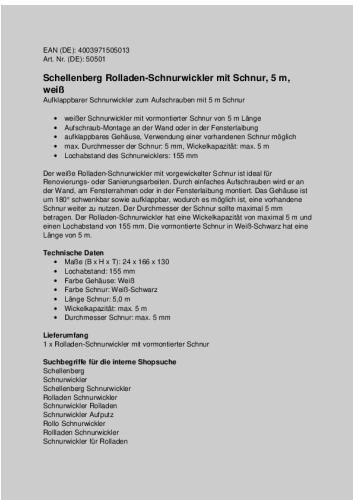


[\[pdf\]](#) User Manual Declaration of Conformity

50501 Beschreibung reichmann EEK Produktdatenblatt Rollladen Schnurwickler Schellenberg schwenkbar weiß bei HORNBACH kaufen 10404730 Doc 01 AT 20210222131656 cdn hornbach de data shop D04 001 780 491 986 246 |||

EAN DE : 4003971**505013** Art. Nr. DE : **50501** Schellenberg Rolladen-Schnurwickler mit Schnur, 5 m, wei Aufklappbarer Schnurwickler zum Aufschrauben mit 5 m Schnur weier Schnurwickler mit vormontierter Schnur von 5 m Lnge Aufschraub-Montage an der Wand oder in der Fensterlaibung aufklappbares Gehus...

lang:de **score:25** filesize: 16.44 K page_count: 1 document date: 2021-02-03

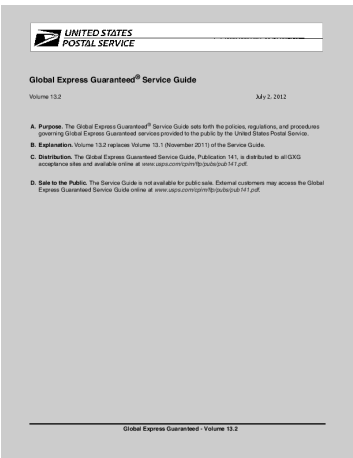

[Global Express Guaranteed Service Guide - International Shipping Policies](#)

Comprehensive guide detailing policies, regulations, and procedures for Global Express Guaranteed (GXG) international expedited delivery services offered by the United States Postal Service in partnership with FedEx Express. Covers shipping requirements, prohibited items, insurance, and form instructions.

lang:en **score:23** filesize: 19.87 M page_count: 1159 document date: 2012-06-12