

Chicco 00007390100000

Chicco Bottle Warmer and Sterilizer Instruction Manual

Model: 00007390100000



1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Chicco Bottle Warmer and Sterilizer. This device is designed to quickly heat milk and baby food, and to sterilize baby bottles and small accessories, ensuring hygiene and convenience for parents.



Image 1.1: The Chicco Bottle Warmer and Sterilizer, showing both the warming unit (left) and the sterilizing unit (right).

2. IMPORTANT SAFETY INSTRUCTIONS

Please read and retain these instructions for future reference. Failure to follow these safety guidelines may result in injury or damage to the product.

- Always place the appliance on a stable, heat-resistant, and level surface, away from the reach of children.
- Do not immerse the main electrical unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Unplug the appliance from the electrical outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Always check the temperature of the warmed milk or food before feeding your baby. Stir thoroughly and test a

small amount on the back of your hand.

- Use only distilled water for sterilization and warming to minimize limescale buildup and ensure optimal performance.
- Keep hands and face away from steam vents during operation to avoid burns.
- This appliance is for household use only. Do not use outdoors.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Chicco Bottle Warmer and Sterilizer:

- **Main Unit:** The base containing the heating element and control panel.
- **Bottle Basket/Support:** Used to hold bottles and jars during warming or sterilization.
- **Lid:** Covers the unit during operation to retain heat and steam.
- **Control Panel:** Features a touch interface for selecting functions and displaying time.



Image 3.1: The sterilizer unit with its transparent lid, illustrating the main components.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the bottle basket and lid with warm soapy water, rinse thoroughly, and dry. Wipe the main unit with a damp cloth.
3. **Placement:** Place the main unit on a clean, dry, stable, and heat-resistant surface. Ensure it is within reach of a power outlet.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet. The display will illuminate, indicating the device is ready for use.

5. OPERATING INSTRUCTIONS

5.1. Warming Bottles and Baby Food

The device offers a gradual warming process that helps preserve the natural nutrients in breast milk and baby food.

1. **Prepare:** Place the bottle or food jar into the bottle basket and then into the main unit.
2. **Add Water:** Pour the recommended amount of distilled water into the unit. Refer to the markings or manual for specific volumes based on bottle size and desired temperature.
3. **Select Settings:** Use the touch panel to select the type of milk/food, the size of the bottle, and the starting temperature (e.g., room temperature, refrigerated, frozen).
4. **Start Warming:** Press the start button. The display will show the remaining warming time. A 150ml bottle starting at room temperature can be warmed in approximately 3 minutes.
5. **Completion:** An audible alarm will sound when the warming cycle is complete. The device automatically switches off for safety.
6. **Keep Warm Function:** The device can keep milk or food warm for up to 1 hour after the heating cycle ends.
7. **Check Temperature:** Always stir the contents and check the temperature before feeding.



Image 5.1: The Chicco Bottle Warmer in operation, warming a baby bottle.

5.2. Sterilizing Bottles and Small Items

The sterilizer effectively eliminates up to 99.9% of common household germs in a single cycle.

1. **Prepare Items:** Wash bottles, teats, and other small accessories thoroughly before placing them in the sterilizer.
2. **Load:** Place the cleaned items into the bottle basket, ensuring they are arranged to allow steam circulation.
3. **Add Water:** Pour the recommended amount of distilled water into the main unit.
4. **Cover:** Place the lid securely on the unit.
5. **Start Sterilization:** Select the sterilization function on the touch panel and press start. A sterilization cycle typically takes approximately 5 minutes (warming time excluded).
6. **Completion:** An audible alarm will indicate the end of the cycle, and the device will automatically switch off.
7. **Cool Down:** Allow the unit to cool before carefully removing the lid and sterilized items. Use tongs to handle hot items.



Image 5.2: The Chicco Sterilizer in use, sterilizing a baby bottle.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance ensure the longevity and optimal performance of your appliance.

- **Daily Cleaning:** After each use, unplug the unit and allow it to cool. Empty any remaining water. Wash the bottle basket and lid with warm soapy water and rinse thoroughly. Wipe the main unit with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- **Descaling:** Over time, mineral deposits (limescale) can build up, especially if tap water is used. Descale the unit regularly (e.g., monthly or as needed) to maintain efficiency. Mix 50ml of white vinegar with 100ml of water and pour into the heating plate. Let it stand for 30 minutes, then empty and rinse thoroughly. Do not turn on the unit during descaling.
- **Storage:** When not in use, ensure the appliance is clean and dry. Store it in a cool, dry place, out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device not turning on	Not plugged in; power outage; faulty outlet.	Check power cord connection; test outlet with another appliance; ensure power is on.
Warming/Sterilization not effective	Insufficient water; limescale buildup; incorrect settings.	Ensure correct water volume; descale the unit; verify selected settings on the touch panel.
Milk/Food too hot or too cold	Incorrect initial temperature setting; incorrect bottle size setting.	Adjust the initial temperature and bottle size settings on the control panel. Always test temperature before feeding.
Device shuts off unexpectedly	Safety feature activated (e.g., overheating); limescale buildup.	Allow unit to cool down; descale the unit. If problem persists, contact customer support.

If the problem persists after attempting these solutions, please contact Chicco customer support.

8. TECHNICAL SPECIFICATIONS

Specification	Detail
Model Number	00007390100000
Product Dimensions (LxWxH)	19.5 x 15 x 25 cm
Item Weight	529 g
Batteries Required	No
Manufacturer	Artsana S.p.A. via Saldarini Catelli, 1-22070 Grandate (COMO), Italy

9. WARRANTY AND SUPPORT







Your Chicco Bottle Warmer and Sterilizer is manufactured by Artsana S.p.A. and imported by Artsana India Private Limited. For warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or contact Chicco customer service directly.

Manufacturer: Artsana S.p.A. via Saldarini Catelli, 1-22070 Grandate (COMO), Italy

Importer (India): Artsana India Private Limited, 7th Floor, Paras Twin Towers, Golf Course Road, Sector-54, Gurgaon 122002, Haryana.

Please have your model number (00007390100000) and date of purchase ready when contacting support.

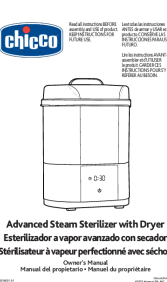

	<p>Chicco Digital Bottle Warmer and Sterilizer Owner's Manual</p> <p>Comprehensive owner's manual for the Chicco Digital Bottle Warmer and Sterilizer, detailing setup, operation, safety instructions, troubleshooting, and maintenance.</p>
	<p>Chicco 3-in-1 Steam Sterilizer: Owner's Manual and Operating Guide</p> <p>This owner's manual provides comprehensive instructions for the Chicco 3-in-1 Steam Sterilizer. It includes safety warnings, parts identification, operating procedures for electric and microwave modes, care and maintenance guidelines, and troubleshooting tips. Ensure safe and effective sterilization of baby bottles and accessories.</p>
	<p>Chicco Advanced Steam Sterilizer with Dryer Owner's Manual</p> <p>Comprehensive owner's manual for the Chicco Advanced Steam Sterilizer with Dryer, detailing safety instructions, usage, care, and troubleshooting.</p>
	<p>Chicco Sterilizzatore a Vapore Modulare Elettrico: Guida all'Uso Sicuro ed Efficace</p> <p>Scopri come utilizzare al meglio il tuo sterilizzatore a vapore modulare elettrico Chicco (modello 06951_S). Questo manuale fornisce istruzioni dettagliate per una sterilizzazione sicura ed igienica di biberon e accessori per neonati, disponibile su www.chicco.com.</p>
	<p>Chicco Sterilizer + Dryer: User Guide and Features</p> <p>Discover the Chicco Sterilizer + Dryer, a convenient appliance for sterilizing and drying baby bottles and accessories. Learn about its features, usage, and benefits for maintaining hygiene.</p>
	<p>Chicco Microwave Steam Sterilizer: User Guide and Safety Instructions</p> <p>Detailed instructions for using the Chicco Microwave Steam Sterilizer, including safety warnings, step-by-step usage, sanitizing times, cleaning advice, and contact information for Chicco USA.</p>

