

TEHOME 16x24" Matt Black

TEHOME Farmhouse Black Metal Framed Recessed Bathroom Medicine Cabinet User Manual

Model: 16x24" Matt Black

Brand: TEHOME

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your TEHOME Farmhouse Black Metal Framed Recessed Bathroom Medicine Cabinet. Please read this manual thoroughly before installation and retain it for future reference. This medicine cabinet is designed to offer practical storage and a stylish mirror solution for your bathroom, featuring a durable metal frame and adjustable tempered glass shelves.





Image: The TEHOME Farmhouse Black Metal Framed Recessed Bathroom Medicine Cabinet in its closed state, showcasing the matte black frame and beveled mirror.

IMPORTANT SAFETY INFORMATION

Always ensure the cabinet is securely mounted to the wall. Be cautious when handling the cabinet to avoid injury. Keep the cabinet away from water sources to prevent damage or electrical hazards. Do not exceed the weight limit of the shelves.


Warning: Improper installation can lead to product damage or personal injury. If you are unsure about any step, consult a qualified professional.

PRODUCT FEATURES

- **Metal Framed Medicine Cabinet:** Premium metal door with matte black finish, framed with an elegantly beveled mirror. Door is equipped with strong magnetic hinges for secure closure.
- **Tempered Adjustable Glass Shelves:** Includes 2 adjustable tempered-glass shelves, manufactured through a process of extreme heating followed by rapid cooling, making them much harder than normal glass and resistant to breakage.
- **Dimensions:** Overall: 16" wide x 4.89" deep x 24" high. Wall Cutout: 13.74" wide x 18.3" high x 3.25" deep.

- **Reversible Installation:** The door is hinged on the left side only, but the entire unit can be flipped for reverse installation, allowing the door to open from the right.
- **Minimal Assembly Required:** This bathroom medicine cabinet comes 95% assembled. Customers only need to set the 2 glass shelves into the cabinet.

UNIT CAN ONLY BE RECESSED MOUNTED

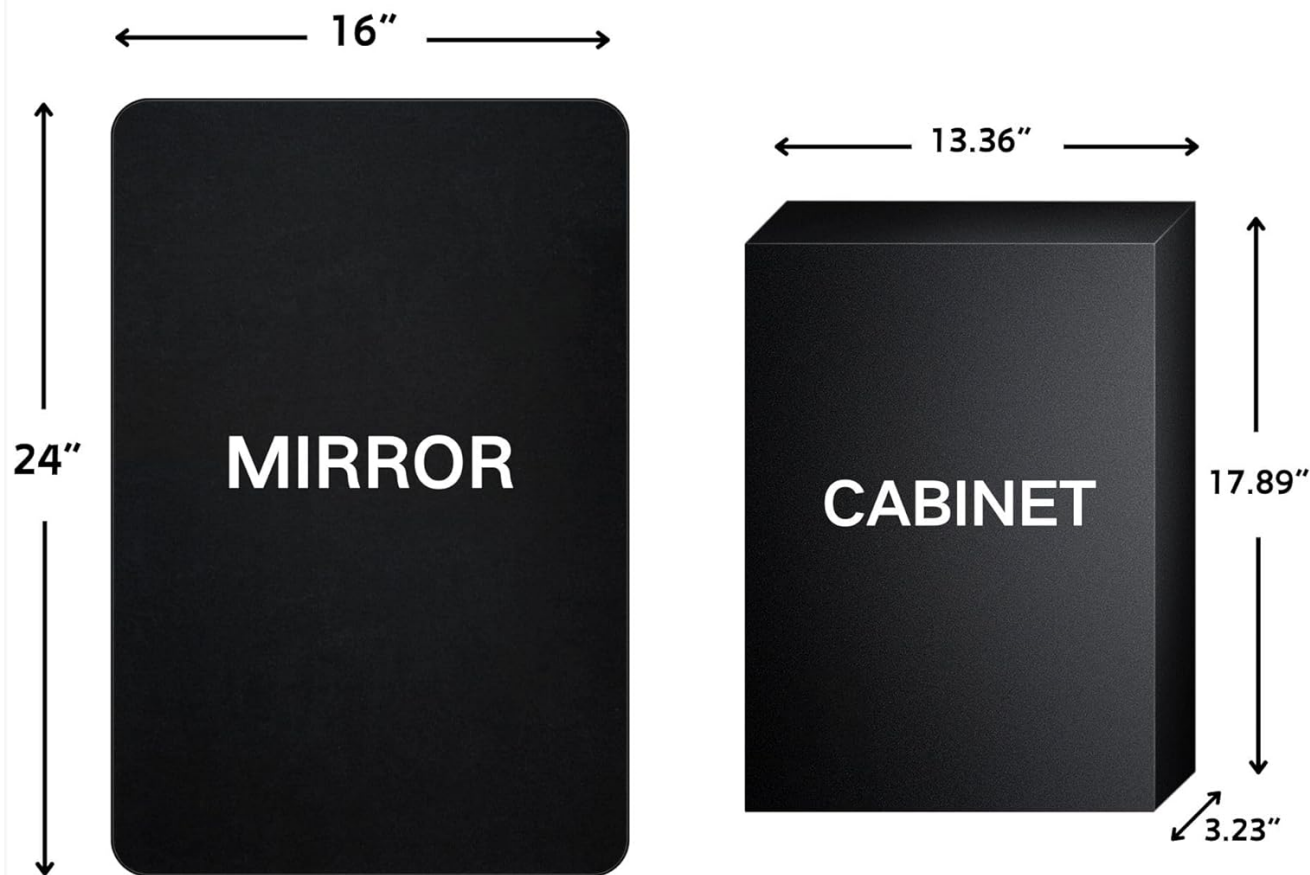

WHEN RECESSING THE UNIT THE WALL CUT SIZE WILL NEED TO BE WIDTH 13.74" HEIGHT 18.30" DEPTH 3.25".


Image: The TEHOME medicine cabinet seamlessly integrated into a modern bathroom setting, showcasing its aesthetic appeal.

SPECIFICATIONS


Attribute	Value
Brand	TEHOME
Color	Matt Black
Product Dimensions	4.89"D x 16"W x 24"H
Mounting Type	Wall Mount (Recessed)
Room Type	Bathroom

Attribute	Value
Included Components	Mirror, 2 Adjustable Tempered Glass Shelves
Finish Type	Matte
Shape	Rectangular
Item Weight	15 Pounds
Frame Material	Aluminum
Number of Compartments	3 (with 2 shelves)

Mounting Option

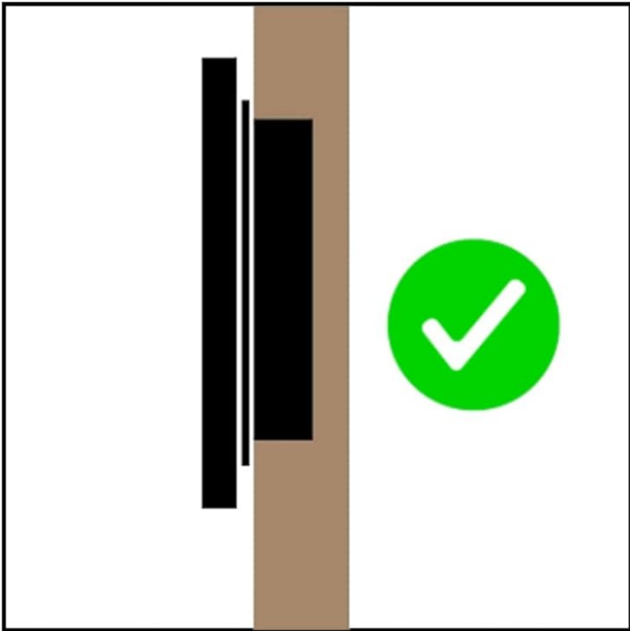

RECESS MOUNT

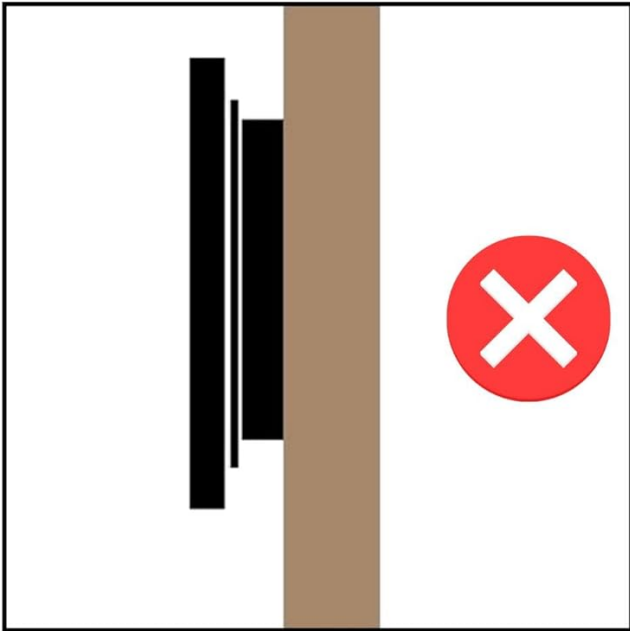

SURFACE MOUNT



Wall Cut Out Size for Recessed Mounting:
WIDTH 13.74" HEIGHT 18.30" DEPTH 3.25"

Image: Detailed diagram illustrating the overall dimensions of the mirror and cabinet, along with the required wall cutout dimensions for recessed mounting.

Parts Included in the Package



2 adjustable
tempered-glass shelves



4 screws, 4 anchors,
8 L-shaped clips

Image: Comprehensive dimensional drawing showing various measurements including overall, cabinet, and wall cutout sizes.

SETUP AND INSTALLATION

Pre-Installation Checklist:

- Verify all parts are present: Medicine cabinet unit, 2 adjustable tempered glass shelves, 4 screws, 4 anchors, 8 L-shaped clips.
- Ensure the wall area for installation is clear of electrical wires, plumbing, and studs where the cutout will be made.
- Gather necessary tools: Measuring tape, level, pencil, stud finder, drywall saw, drill, screwdriver.



Image: Visual representation of the components included in the package: the medicine cabinet, two adjustable tempered glass shelves, and a hardware kit containing screws, anchors, and L-shaped clips.

Recessed Mounting Instructions:

This unit is designed for recessed mounting only. Surface mounting is not supported.

1. **Determine Location:** Choose a suitable location on your bathroom wall, ensuring it is free from obstructions.
2. **Mark Wall Cutout:** Using a level and pencil, mark the exact dimensions for the wall cutout: **Width 13.74" x Height 18.30" x Depth 3.25"**. Double-check measurements before cutting.
3. **Cut Opening:** Carefully cut the marked opening in the wall using a drywall saw.
4. **Insert Cabinet:** Gently slide the cabinet body into the wall opening. Ensure it fits snugly and is level.
5. **Secure Cabinet:** Use the provided screws and anchors to secure the cabinet to the wall studs or drywall. Ensure the cabinet is firmly attached and does not wobble.
6. **Install Shelves:** Place the L-shaped clips into the desired slots inside the cabinet. Carefully slide the tempered glass shelves onto the clips. Adjust shelf height as needed.







Image: Illustration distinguishing between the correct recessed mounting method and the unsupported surface mounting method for the medicine cabinet.

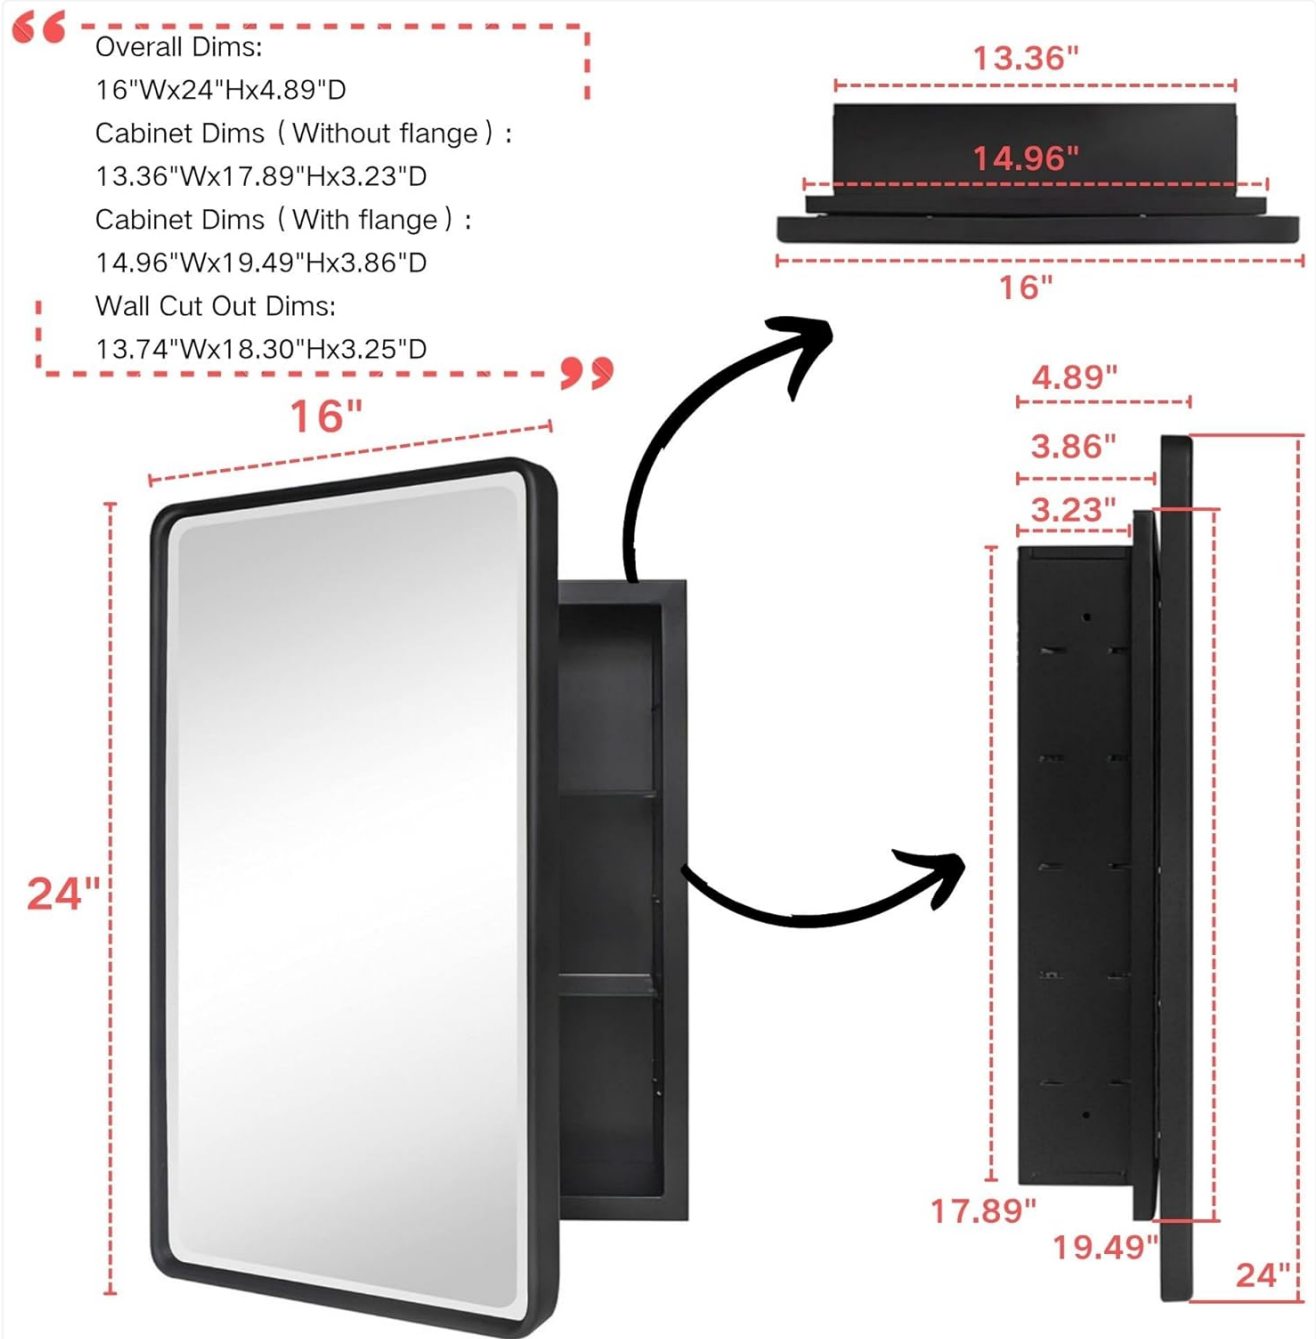


Image: Diagram illustrating that while the door is hinged on the left, the entire unit can be flipped to allow for right-side opening, demonstrating installation flexibility.

OPERATION

Opening and Closing the Door:

The cabinet door features strong magnetic hinges for smooth and secure operation. Gently pull the door to open

and push it firmly to close until the magnets engage.

Adjusting Shelves:

The two tempered glass shelves are adjustable. To change their height, carefully remove items from the shelf, lift the shelf out, reposition the L-shaped clips into different slots, and then reinsert the shelf. Ensure clips are securely seated before placing items on the shelf.



Image: An interior view of the medicine cabinet, demonstrating the adjustable tempered glass shelves holding various bathroom essentials.

CARE AND MAINTENANCE

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a standard glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into the frame edges.
- **Cleaning the Frame and Cabinet:** Wipe the matte black metal frame and interior cabinet surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cleaning Glass Shelves:** The tempered glass shelves can be cleaned with glass cleaner or mild soap and water. Ensure they are completely dry before reinserting them.
- **Regular Inspection:** Periodically check the mounting hardware to ensure the cabinet remains securely attached to the wall. Tighten screws if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cabinet feels loose or wobbly after installation.	Mounting screws are not fully tightened or not properly secured into studs/anchors.	Ensure all mounting screws are tightened. If installed into drywall, verify anchors are correctly expanded. If the issue persists, consult a professional for re-installation.
Door does not close completely or magnets do not engage.	Cabinet is not perfectly level or hinges are misaligned.	Check if the cabinet is level. Minor adjustments to the cabinet's position during installation may be needed. Ensure no debris is obstructing the magnetic catch.
Glass shelves are difficult to install or adjust.	L-shaped clips are not fully inserted or aligned.	Ensure the L-shaped clips are fully and correctly inserted into the shelf slots. Gently guide the glass shelf onto the clips, ensuring it sits evenly.

WARRANTY AND SUPPORT

TEHOME is committed to providing high-quality products. For any questions, concerns, or assistance with your medicine cabinet, please contact TEHOME customer support. While specific warranty details for this product are not provided in this manual, TEHOME generally offers support for product defects and hardware replacement. Please refer to your purchase documentation or the official TEHOME website for the most current warranty information.

Contact Information:

Website: [Visit the TEHOME Store on Amazon](#)

For further assistance, please refer to the contact details provided with your purchase or on the product packaging.


PRODUCT VIDEOS







No official product videos from the seller were found to be relevant for inclusion in this manual.

© 2024 TEHOME. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

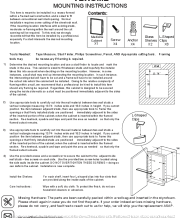Related Documents - 16x24" Matt Black

	<p>TEHOME Medicine Cabinet Mounting Instructions and Installation Guide</p> <p>Comprehensive mounting instructions for the TEHOME medicine cabinet, detailing installation steps, required tools, and care guidelines. Learn how to securely install your cabinet for optimal use.</p>
---	--

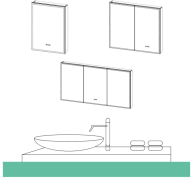	<p>TEHOME Mirror Mounting Instructions: Step-by-Step Guide</p> <p>Follow these easy TEHOME mirror mounting instructions to securely install your mirror. Includes hardware details, step-by-step guide, and cleaning tips.</p>
<p>Owner Manual</p> <p>Mirror Medicine Cabinet SIZE: 16" WIDE X 24" D (SMALL)</p>  <p>Installation Manual</p>	<p>Ebern Designs 16x24 Inch Mirror Medicine Cabinet Installation Guide</p> <p>Installation guide for the Ebern Designs 16x24 inch (SMALL) Mirror Medicine Cabinet (Model: bbui1655). This manual provides step-by-step assembly instructions, including exploded diagrams, parts and hardware lists, wall-mount and recessed-mount options, care and maintenance tips, and warranty information.</p>
 	<p>QueenFun MFMD Metal Frame Mirror Installation Guide</p> <p>Step-by-step installation instructions for the QueenFun MFMD Metal Frame Mirror, including packing list, required tools, and safety tips. Contact QueenFun for support.</p>
<p>LED Lighted Medicine Cabinet</p> <p>Installation and Operating Manual</p>  <p>Please do not return the product to the store. Contact us with any questions.</p>	<p>ExBrite LED Lighted Medicine Cabinet: Installation and Operating Manual</p> <p>Comprehensive guide for installing and operating the ExBrite LED Lighted Medicine Cabinet, including model specifications, safety precautions, parts list, tools required, and detailed installation steps for surface and embedded mounting.</p>
<p>MEDICINE CABINET Instruction Manual</p> 	<p>Orren Ellis Tyrise Medicine Cabinet Installation and Operation Manual</p> <p>Comprehensive instruction manual for Orren Ellis Tyrise LED Medicine Cabinets, covering surface and recessed mount installation, specifications, packing list, safety guidelines, electrical connections, operation, and adjustments.</p>