

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Misiki](#) /
- › [Misiki Foot Spa Bath Massager Instruction Manual - Model 107e43b6-10de-44cf-bd65-865fdcab1be3](#)

Misiki 107e43b6-10de-44cf-bd65-865fdcab1be3

Misiki Foot Spa Bath Massager Instruction Manual

Model: 107e43b6-10de-44cf-bd65-865fdcab1be3

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Misiki Foot Spa Bath Massager. Please read this manual thoroughly before operating the device and retain it for future reference.



Image: The Misiki Foot Spa Bath Massager, ready for use.

SAFETY INFORMATION

Always use the product with caution when handling hot water. Do not submerge the electrical components in water. Always ensure feet are properly positioned and do not place the product on unstable surfaces. Consult a physician before use if you have any medical conditions or are pregnant. Unplug the product when not in use and allow it to cool down before storing.

PRODUCT FEATURES

- **Professional Foot Spa:** Features motorized massage, heating, vibration, and bubbles to relax soles, promote blood circulation, and metabolism. Includes 3 automatic massage modes: Shiatsu, Pressing, and Kneading.
- **Relaxing Massage:** Equipped with 6 motorized massage rollers and 6 rotatable mini gears for deep massages, stimulating acupuncture points, and improving metabolism and sleep.
- **Rapid Heating & Constant Temperature:** Efficiently heats water to a set temperature (95°F~118°F) and maintains

it throughout the foot soak.

- **Bubbles & Vibration:** Multi-functional combination to promote blood circulation and pamper feet. Includes a pedicure stone for dead skin removal.
- **Carry Handle & Easy Cleaning:** Designed with a sleek, portable handle for easy transport. Features a drainage tube and a dust-proof full cover for convenient emptying and cleaning.



Image: Overview of the Misiki Foot Spa's key features, including massage modes, temperature control, bubbles, red light, timer, and pedicure stone.

SETUP INSTRUCTIONS

1. Place the foot spa on a flat, stable surface.
2. Fill the basin with a proper amount of water. Do not overfill.
3. Connect the product to a power supply. The display screen will show "OF".

3 AUTOMATIC MASSAGE MODES

Professional massage experience superior to a non-automatic foot bath



Shiatsu



Pressing



Kneading



Image: The foot spa filled with water, indicating the initial "OF" display.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **Power button** (🔌) to turn the unit on. The current water temperature will be displayed. Press again to turn off.

2. Temperature Adjustment

Press the **Heating button** (🔥) to activate the heating function. The bubble function will also turn on simultaneously. Use the **Temperature Up** (⬆️) and **Temperature Down** (⬇️) buttons to set your desired water temperature between 95°F and 118°F. The unit will maintain this temperature.

Fast Heating Up and Keep Warm

95°F-118°F Adjustment, get a more efficient and stable heating experience

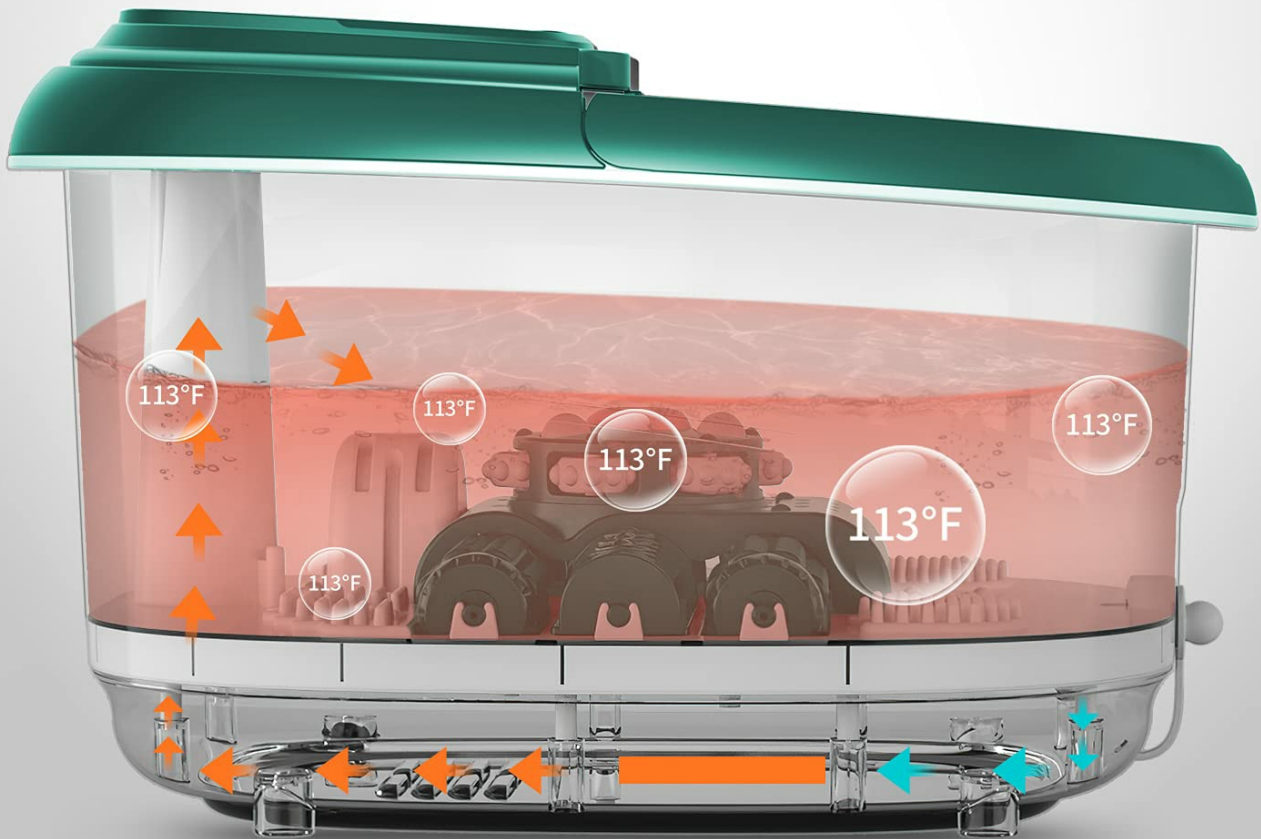


Image: Illustration of the rapid heating and constant temperature maintenance system.

3. Massage Modes

The foot spa offers 3 automatic massage modes: Shiatsu, Pressing, and Kneading. Press the **Massage button** (👉) to cycle through the different modes. The 6 motorized rollers and 6 rotatable mini gears will provide a deep massage to your soles.



Image: Visual representation of the three automatic massage modes.

4. Bubbles and Red Light

The **Red Light & Bubble button** (🌊) activates the bubble jets and the red light function. The bubbles enhance circulation and relaxation, while the red light is designed to ease muscle tension and stimulate cell regeneration.

BUBBLE FOOT SPA

Helps soothe fatigue for added comfort



Infrared Lights
ease muscle tension and stimulate
cell regeneration

Image: The foot spa with active bubbles and red light, highlighting the infrared light feature.

5. Timer Function

Press the **Timing button** (🕒) to set the desired duration for your foot spa session. Available settings typically range from 10 to 60 minutes.

6. Pedicure Stone

The integrated pedicure stone, located in the front middle of the foot bath, can be used to remove dead skin from the toes and forefoot. Gently rub your feet against the stone during your session.



6 Motorized Rollers, 6 Mini Rotatable Gears

Let you enjoy professional foot massage



press



shiatsu



push



roll

Image: Before and after comparison illustrating the effect of using the pedicure stone.

MAINTENANCE AND CLEANING

- After each use, unplug the unit and allow the water to cool.
- Use the drainage tube to empty the water from the basin.
- Wipe the interior and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- Ensure the unit is completely dry before replacing the dust-proof full cover and storing.

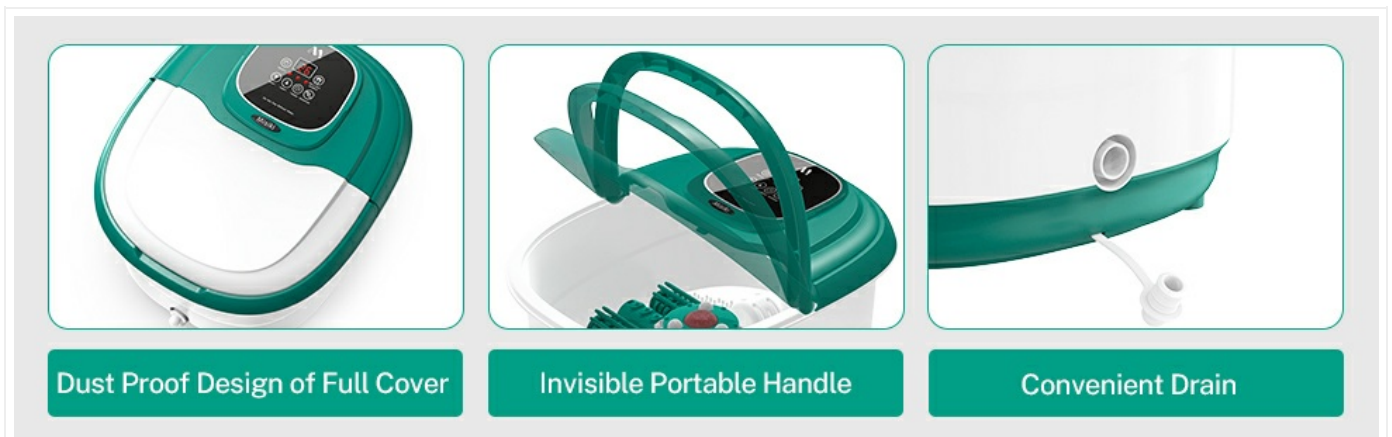


Image: Features designed for easy cleaning and portability, including the dust-proof cover, portable handle, and drainage system.

SPECIFICATIONS

Feature	Detail
Product Dimensions	16.14 x 14.17 x 8.27 inches

Item Weight	9.57 Pounds
Model Number	107e43b6-10de-44cf-bd65-865fdcab1be3
Manufacturer	Misiki
Use for	Feet
Power Source	Corded Electric
Material	Plastic
Brand	Misiki
Color	Green
Temperature Range	95°F - 118°F
Max Feet Size	13in



Image: Product dimensions and maximum foot size capacity.

