

WALI GSDM001-P

WALI Single Monitor Mount User Manual

Model: GSDM001-P

Brand: WALI

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before installation and use. If you do not understand these instructions or have doubts about the safety of the installation, assembly, or use of this product, please contact customer support. WALI is not responsible for damage or injury caused by incorrect assembly or use.

- Ensure the mounting surface can safely support the combined weight of the equipment and all attached hardware and components.
- Use this product only for its intended purpose as described in this manual. Do not exceed the maximum load capacity.
- Do not use this product if it is damaged or if any parts are missing.
- Keep children and pets away from the product during installation.
- Check that all screws are tightened securely before using the mount.
- Periodically check the mount for any signs of wear or loosening.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- 1 x WALI Single Monitor Gas Spring Stand
- Mounting Hardware Kit (various screws, washers, spacers, Allen keys)
- User Manual

3. PRODUCT OVERVIEW AND FEATURES

The WALI Single Monitor Mount (GSDM001-P) is designed to provide a versatile and ergonomic solution for your monitor setup. It features a gas spring arm for smooth adjustments and supports a wide range of monitor sizes and weights.

- **Application:** Upgraded Mount for Large and Heavy Monitors up to 35 inches.
- **Weight Capacity:** Supports monitors up to 26.4 lbs (12 kg).
- **VESA Compatibility:** Mounting Holes Fits 75 x 75mm or 100 x 100 mm.
- **Mounting Options:** Two-stage locking system for 3.3-inch C-clamp and 3.3-inch Grommet Base.
- **Full Adjustability:** Gas spring arm allows tilt $+45^{\circ}/-45^{\circ}$, swivel $+90^{\circ}/-90^{\circ}$, and rotate $+90^{\circ}/-90^{\circ}$.
- **Extended Reach:** Max height is up to 21.5 inches, and max extension is up to 21 inches.
- **Cable Management:** Integrated cable management system helps keep your workspace tidy.
- **Durable Construction:** Made from high-grade alloy steel for a strong and stable connection.

Display Compatibility



Weight Capacity
26.4 lbs



Mounting Holes
75x75/100x100mm



Screen Size
Max 35"



Image: This graphic illustrates the display compatibility, showing a maximum weight capacity of 26.4 lbs, VESA mounting holes of 75x75mm or 100x100mm, and a maximum screen size of 35 inches.

Durable and Reliable in Quality



Image: This image highlights the durable and reliable quality of the monitor mount, emphasizing its long-term usability.

4. SPECIFICATIONS

Attribute	Value
Product Dimensions	2.72 x 12.52 x 15.42 inches
Item Weight	9 pounds
Item Model Number	GSDM001-P
Manufacturer	WALI
Mounting Type	Tabletop Mount (C-clamp or Grommet)
Movement Type	Articulating, Rotate, Swivel, Tilt
Material	Alloy Steel

Attribute	Value
Maximum Compatible Size	35 Inches
Minimum Compatible Size	17 Inches
Maximum Tilt Angle	45 Degrees

5. SETUP AND INSTALLATION

This monitor mount offers two installation options: C-clamp and Grommet base. Choose the method that best suits your desk setup.

5.1. C-Clamp Installation

1. Attach the C-clamp bracket to the bottom of the pole base using the provided screws and Allen key. Ensure it is securely fastened.
2. Place the pole assembly onto the edge of your desk.
3. Tighten the C-clamp screw until the mount is firmly secured to the desk. Ensure the clamp is stable and does not wobble.

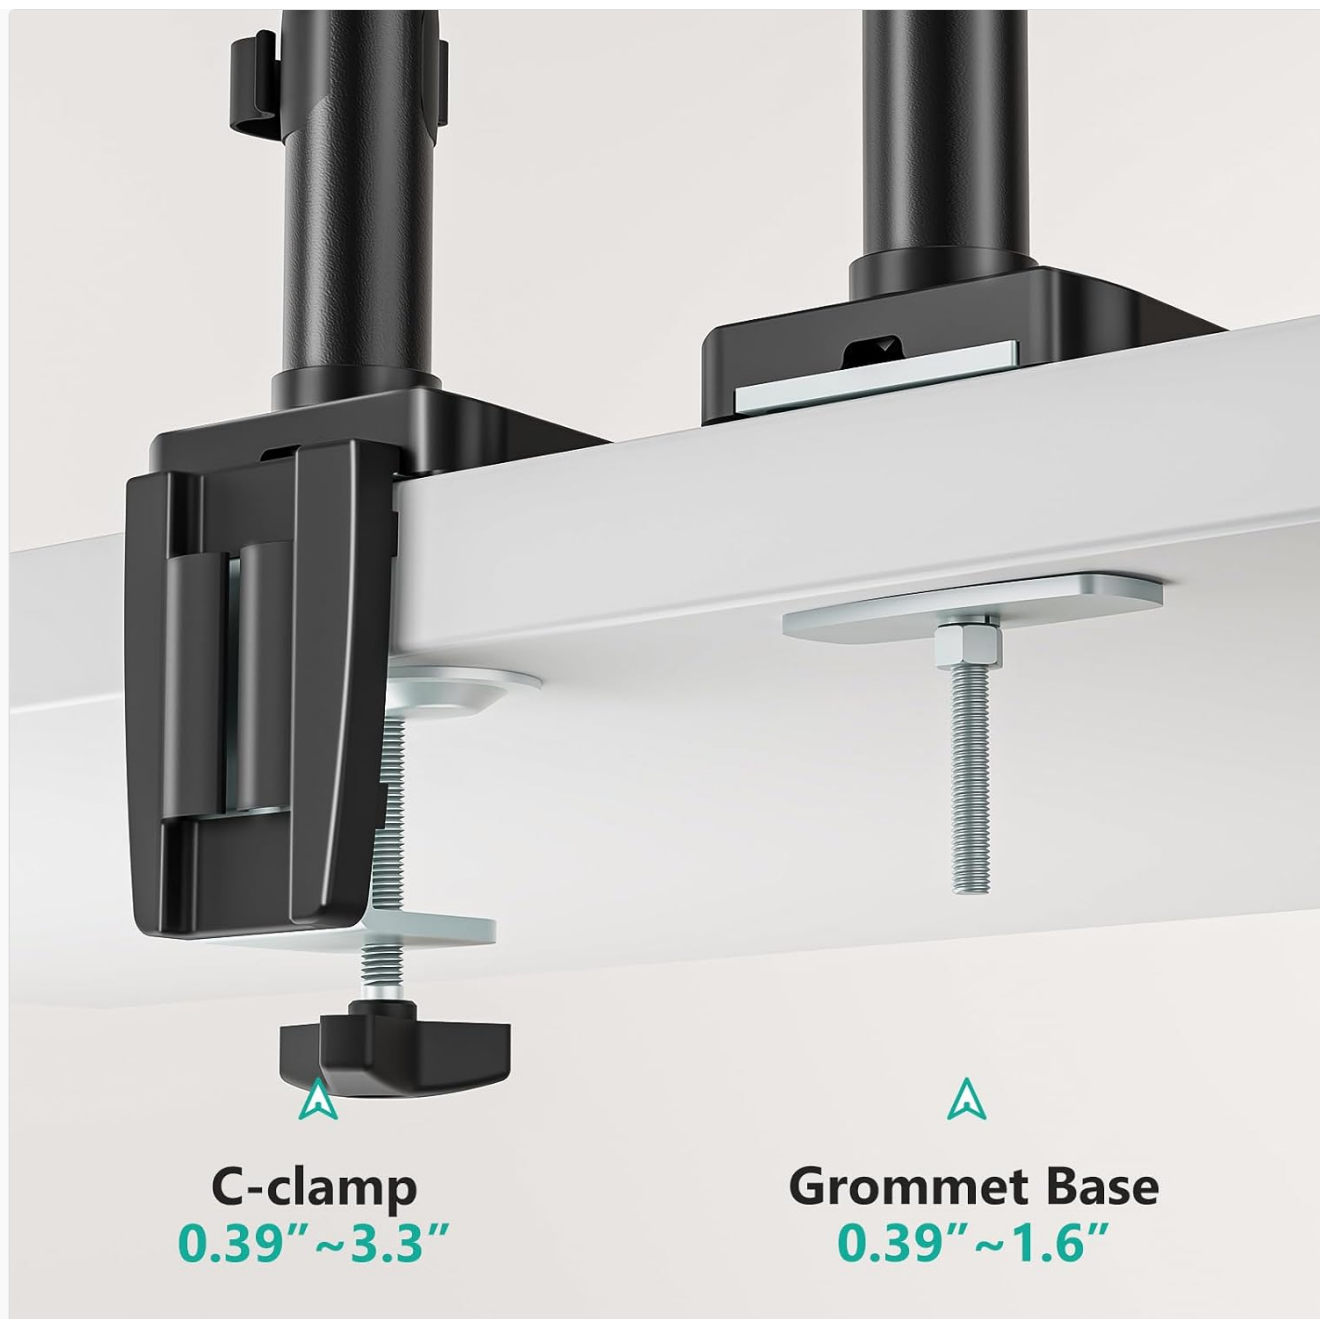


Image: This graphic shows both the C-clamp installation (left) and the Grommet Base installation (right), detailing the compatible desk thickness for each method.

Your browser does not support the video tag.

Video: This official product video demonstrates the step-by-step installation process for the WALI Single Monitor Mount, including both C-clamp and grommet base options, and how to attach the monitor.

5.2. Grommet Base Installation

1. If your desk has an existing grommet hole, ensure it is within the compatible size range (0.39" to 1.6"). If not, you may need to drill a hole.
2. Insert the grommet base bolt through the hole in your desk.
3. From underneath the desk, secure the grommet base plate and tighten the nut onto the bolt until the mount is stable.

5.3. Attaching the Monitor

1. Attach the VESA plate to the back of your monitor using the appropriate screws from the hardware kit. Ensure the VESA plate is oriented correctly (usually with "TOP" arrow pointing upwards).

2. Carefully slide the monitor with the attached VESA plate onto the arm's mounting head. Ensure it clicks into place securely.
3. Tighten the security screw on the VESA plate to prevent accidental detachment.

6. OPERATING INSTRUCTIONS

6.1. Gas Spring Tension Adjustment

The gas spring tension needs to be adjusted according to the weight of your monitor to ensure smooth and stable movement. Use the provided Allen key to adjust the tension screw located on the arm.

- Turn **clockwise** for lighter monitors (to decrease tension).
- Turn **counter-clockwise** for heavier monitors (to increase tension).

Adjust until the monitor stays in position when moved and can be moved with minimal effort.

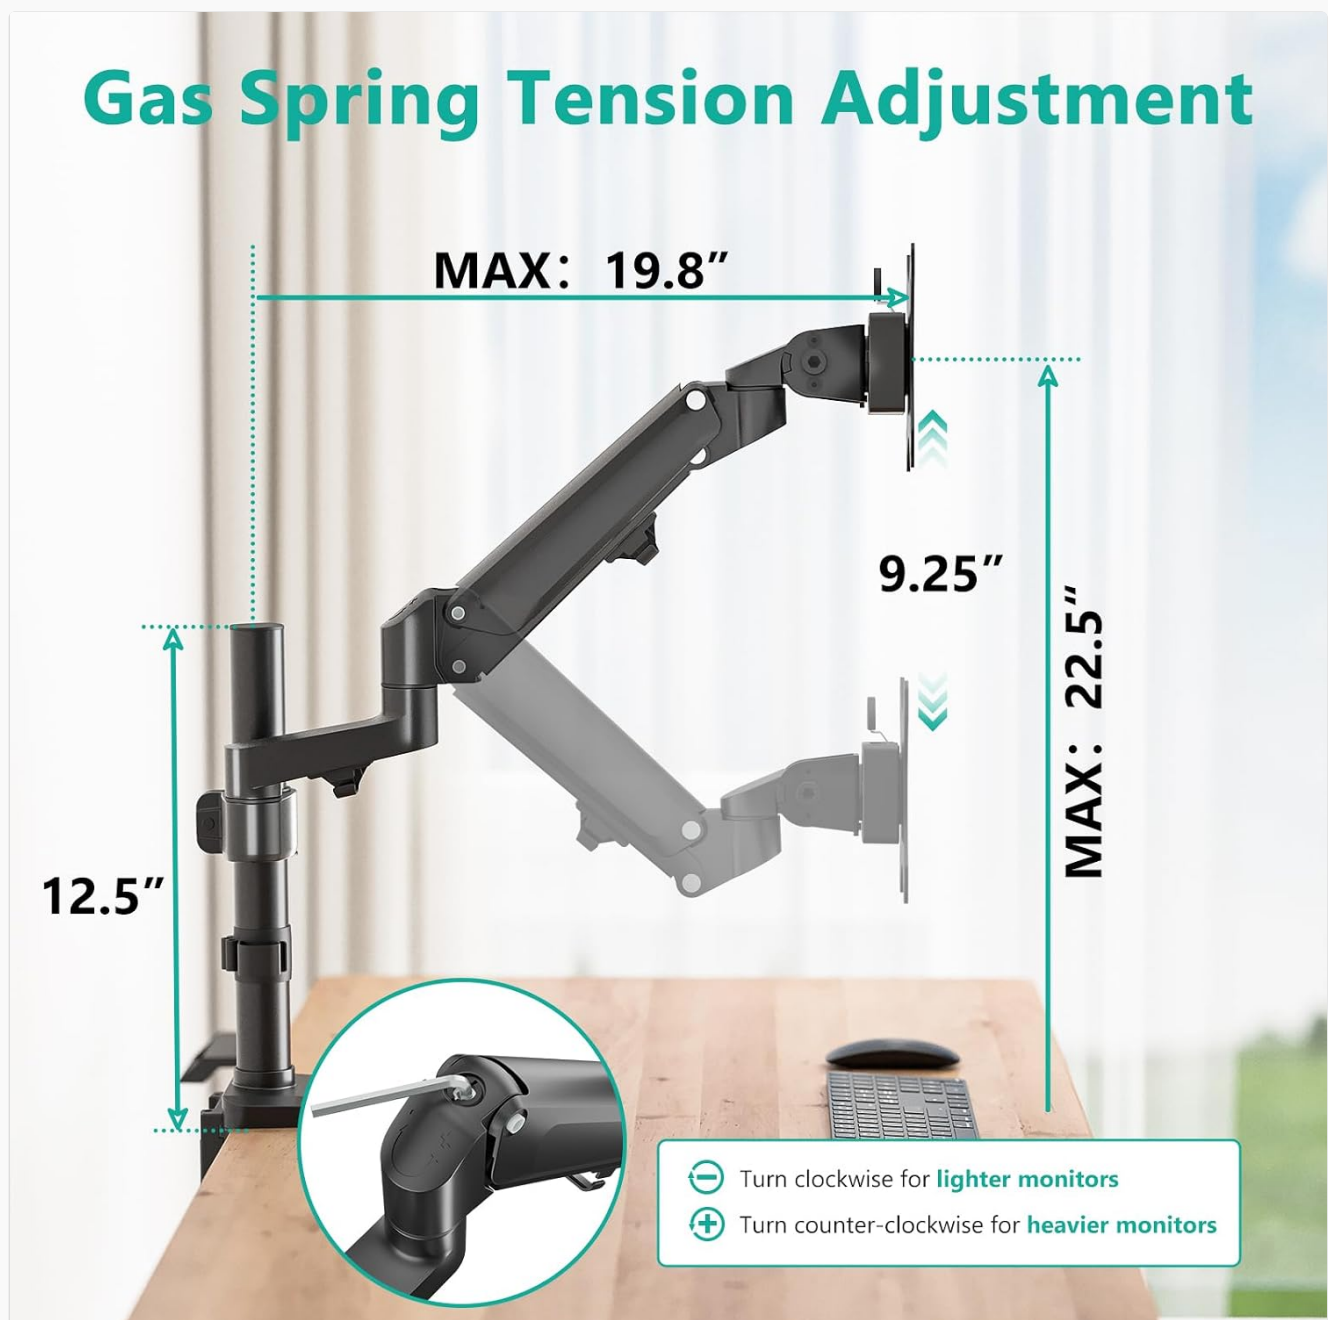


Image: This graphic illustrates the gas spring tension adjustment mechanism, showing how to turn the screw clockwise for lighter monitors and counter-clockwise for heavier monitors, along with the maximum height and extension.

6.2. Angle Adjustment (Tilt, Swivel, Rotate)

The mount allows for various adjustments to achieve your desired viewing angle:

- **Tilt:** Adjust the monitor screen up or down ($+45^{\circ}/-45^{\circ}$).
- **Swivel:** Rotate the monitor horizontally left or right ($+90^{\circ}/-90^{\circ}$).
- **Rotate:** Change the monitor orientation from landscape to portrait or vice versa ($+90^{\circ}/-90^{\circ}$).



Image: This graphic demonstrates the various angle adjustment capabilities of the monitor mount, including tilt ($+75^{\circ}/-45^{\circ}$), swivel ($+90^{\circ}/-90^{\circ}$), and rotation ($+90^{\circ}/-90^{\circ}$).

6.3. Cable Management

Route your monitor cables through the integrated cable management clips on the arm and pole to maintain a clean and organized workspace.

Clean Cable Management



Image: This image shows a monitor mounted on the arm with cables neatly routed through the integrated cable management system, contributing to a clean desk setup.

7. MAINTENANCE

To ensure the longevity and proper functioning of your WALI Single Monitor Mount, follow these maintenance guidelines:

- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Cleaning:** Wipe the mount with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Gas Spring Adjustment:** If your monitor's weight changes (e.g., upgrading to a heavier or lighter model), re-adjust the gas spring tension as described in Section 6.1.
- **Lubrication:** The gas spring mechanism is sealed and does not require lubrication. Do not attempt to open or lubricate it.

8. TROUBLESHOOTING

If you encounter issues with your WALI Single Monitor Mount, refer to the following common problems and solutions:

- **Monitor Sags or Drifts Down:**

- The gas spring tension is too low for your monitor's weight. Increase the tension by turning the adjustment screw counter-clockwise (refer to Section 6.1).
- Ensure the VESA plate screws attaching the monitor to the mount are securely tightened.

- **Monitor is Difficult to Move Up or Down:**

- The gas spring tension is too high for your monitor's weight. Decrease the tension by turning the adjustment screw clockwise (refer to Section 6.1).

- **Mount is Unstable or Wobbles:**

- Ensure the C-clamp or grommet base is securely tightened to the desk. Check the desk thickness compatibility.
- Verify that all assembly screws on the mount itself are tightened.
- Ensure the desk surface is stable and not prone to wobbling.

- **Monitor Does Not Stay Tilted:**

- The tilt mechanism might need tightening. Locate the tilt adjustment screw on the VESA head and tighten it with the appropriate Allen key.

If the issue persists after trying these solutions, please contact customer support.

9. WARRANTY AND CUSTOMER SUPPORT

WALI provides experienced and friendly US-based customer support available to assist 7 days a week. For any questions, concerns, or assistance with your WALI Single Monitor Mount, please do not hesitate to contact us. Please refer to your product packaging or the WALI official website for the most up-to-date warranty information and contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question