

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SP CONNECT](#) /
- › [SP CONNECT Universal Bicycle Mobile Phone Holder Instruction Manual](#)

SP CONNECT 53906 or 53937

SP CONNECT Universal Bicycle Mobile Phone Holder Instruction Manual

Model: 53906 or 53937

Brand: SP CONNECT

INTRODUCTION

This instruction manual provides detailed guidance for the installation, operation, and maintenance of your SP CONNECT Universal Bicycle Mobile Phone Holder. Please read this manual thoroughly before use to ensure proper functionality and safety.



Image: The SP CONNECT Universal Bicycle Mobile Phone Holder, including the universal phone clamp, micro bike mount, and product packaging, shown alongside a smartphone.

What's Included

Your SP CONNECT Universal Bicycle Mobile Phone Holder package includes the following components:

- Bike Mount
- Universal Clamp

WHATS INCLUDED



UNIVERSAL
PHONE CLAMP MAX



MICRO BIKE MOUNT



INSERTS

Image: A visual breakdown of the components included: the Universal Phone Clamp Max, the Micro Bike Mount, and various inserts for different handlebar sizes.

SETUP & INSTALLATION

Mounting the Micro Bike Mount

1. Select the appropriate rubber inserts for your handlebar diameter.
2. Place the Micro Bike Mount around your bicycle's handlebar, ensuring the inserts provide a snug fit.
3. Tighten the screw on the mount until it is firmly secured to the handlebar. Do not overtighten.

MICRO BIKE MOUNT



Image: Step-by-step diagram illustrating the installation of the Micro Bike Mount onto a bicycle handlebar, including the use of different sized inserts.

Attaching the Universal Phone Clamp

1. Adjust the Universal Phone Clamp to fit the width of your smartphone (compatible with devices 58-85mm wide and up to 14.5mm thick).
2. Carefully insert your smartphone into the clamp, ensuring it is held securely by all four corners.

UNIVERSAL PHONE CLAMP MAX

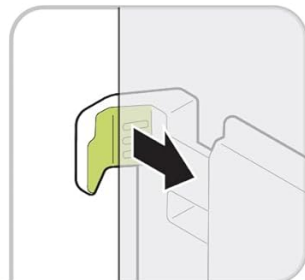
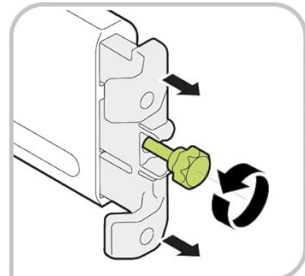
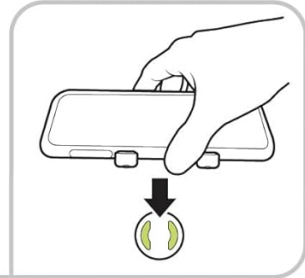
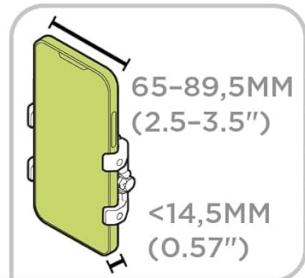


Image: Detailed view of the Universal Phone Clamp Max, showing its adjustable mechanism for various phone sizes and how to properly insert a smartphone.

OPERATION

Using the Patented Twist Lock Mechanism

1. Align the Universal Phone Clamp (with your phone inserted) with the Micro Bike Mount. The four tabs on the clamp should align with the slots on the mount.
2. Gently press the phone clamp onto the bike mount.
3. Rotate the phone clamp 90 degrees clockwise until you hear and feel a distinct click. This indicates that the phone is securely locked in place.
4. To remove, rotate the phone clamp 90 degrees counter-clockwise until it unlocks, then lift it off the mount.

SP CONNECT SYSTEM

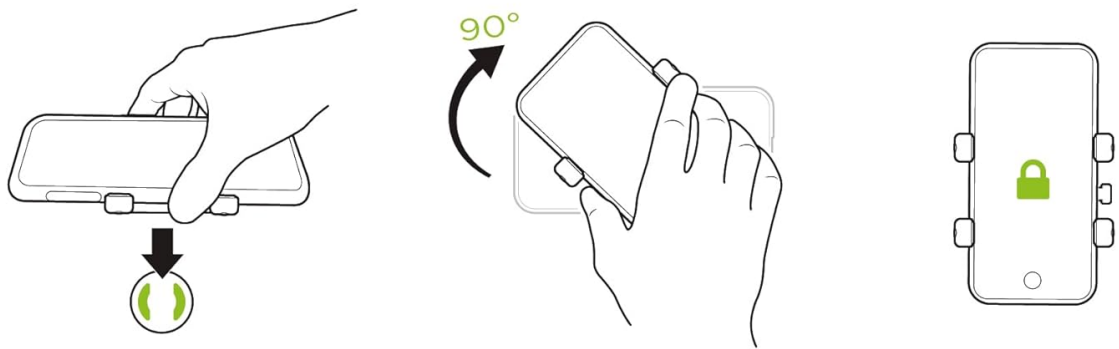


Image: A visual guide demonstrating the patented SP Connect twist lock system, showing the alignment, insertion, and 90-degree rotation required to secure and release the phone clamp from the bike mount.

Adjusting Phone Orientation

The SP CONNECT system allows for quick adjustment of your phone's orientation. Once mounted, you can rotate your phone to either portrait or landscape view by simply twisting it 90 degrees and ensuring it clicks into the desired position.



Image: A collage showcasing the SP CONNECT phone mount installed on a bicycle handlebar, demonstrating its compact design and how a smartphone appears when securely attached in different orientations.

MAINTENANCE

To ensure the longevity and optimal performance of your SP CONNECT Universal Bicycle Mobile Phone Holder, follow these maintenance guidelines:

- **Cleaning:** Wipe the mount and clamp with a damp cloth to remove dirt and dust. Avoid using harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect all components for signs of wear, damage, or loose connections. Ensure the twist-lock mechanism operates smoothly and securely.
- **Storage:** When not in use, store the mount and clamp in a clean, dry place away from extreme temperatures.

TROUBLESHOOTING

Phone Not Securely Attached

- Ensure the phone clamp is fully rotated 90 degrees clockwise until an audible click is heard.
- Verify that your smartphone is properly seated within the universal clamp and that the clamp's arms are adjusted snugly around the device.
- Check for any obstructions between the phone clamp and the bike mount that might prevent a full connection.

Mount Slipping on Handlebar

- Confirm that the correct rubber inserts were used for your handlebar's diameter.
- Tighten the screw on the Micro Bike Mount. Ensure it is firm but do not overtighten, as this can damage the mount or handlebar.
- Clean the handlebar surface and the inside of the mount/inserts to remove any grease or dirt that might cause slippage.

SPECIFICATIONS



Brand	SP CONNECT
Manufacturer	SP CONNECT
Item Model Number	53906 or 53937
Mounting Type	Handlebar
Compatible Devices	Smartphones
Compatible Phone Models	Most Smartphones (58-85mm wide, <14.5mm thick)
Color	Black
Item Weight	4.2 ounces
Package Dimensions	5.04 x 3.98 x 1.65 inches
Special Features	Compact
What's in the Box	Bike Mount, Universal Clamp





WARRANTY & SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official SP CONNECT website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

© 2024 SP CONNECT. All rights reserved.

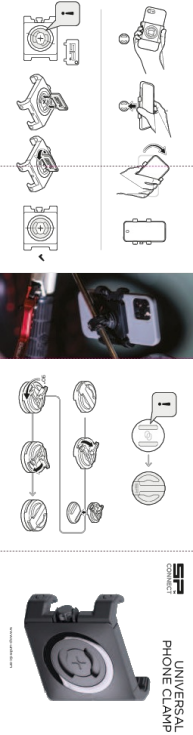Related Documents - 53906 or 53937

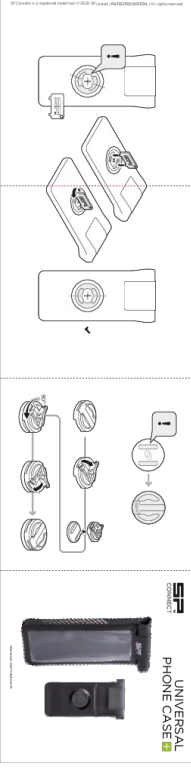 <p>The image contains several diagrams and a photograph related to the SP Connect Universal Phone Clamp. At the top, there are two columns of diagrams showing the clamp being attached to different smartphone models. Below these is a photograph of the clamp mounted on a smartphone. Further down, there are more diagrams showing the clamp's internal mechanism and how it secures the phone. At the bottom, there is a large image of the clamp with the text 'UNIVERSAL PHONE CLAMP' and the SP Connect logo.</p>	<p>SP Connect Universal Phone Clamp Instructions and Features</p> <p>Detailed instructions and overview of the SP Connect Universal Phone Clamp, a patented system for securely mounting smartphones.</p>
 <p>The image shows diagrams for the SP Connect Stem Mount Pro. It includes a diagram of the mount being attached to a bicycle stem and another diagram showing a smartphone being inserted into the mount. The SP Connect logo is also present.</p>	<p>SP Connect Stem Mount Pro: Bicycle Smartphone Mount Instructions</p> <p>Official mounting instructions for the SP Connect Stem Mount Pro, detailing how to securely attach your smartphone to your bicycle stem. Includes safety warnings and step-by-step guidance.</p>

 The diagram illustrates the steps for attaching the SP Connect Universal Phone Case. It shows a top-down view of the case being opened, a side view of the case with a phone inside, and a bottom-up view of the case. Below these, a sequence of five circular icons shows the process of inserting the phone into the case. At the bottom, there is a photograph of the black 'UNIVERSAL PHONE CASE' with the 'SP CONNECT' logo.	<p>SP Connect Universal Phone Case Instructions</p> <p>Step-by-step guide on how to use and attach the SP Connect Universal Phone Case.</p>
 The diagram shows a small black device, the SP Connect E-Cap Universal Charging Phone Clamp, next to a list of technical specifications and setup tips.	<p>SP Connect E-Cap Universal Charging Phone Clamp User Guide</p> <p>Instructions and specifications for the SP Connect E-Cap Universal Charging Phone Clamp, including setup tips for outdoor navigation and technical details.</p>
 The diagram shows a phone being inserted into a case that is mounted on a bracket. It includes visual indicators for correct and incorrect locking.	<p>SP Connect Phone Case Mounting Instructions</p> <p>Step-by-step guide for mounting the SP Connect Phone Case, featuring a patented twist-lock system for secure phone attachment to various mounts. Includes visual indicators for correct and incorrect locking.</p>
 The diagram shows the SP CONNECT Stand Tool, the phone case, and a phone being attached to the case. It includes a list of instructions for use and installation.	<p>SP CONNECT Phone Case & Mount: User Manual and Installation Guide</p> <p>Step-by-step instructions for using the SP CONNECT Stand Tool and mounting your phone with the SP CONNECT Phone Case. Covers landscape/portrait orientation and secure attachment.</p>