

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [AZLA](#) /
- > [AZLA SednaEarfit Crystal Standard Earbud Tips \(ML\) Instruction Manual](#)

AZLA AZLASTD05

AZLA SednaEarfit Crystal Standard Earbud Tips (ML)

Instruction Manual

INTRODUCTION

The AZLA SednaEarfit Crystal Standard earbud tips are designed to enhance the audio experience and comfort of your in-ear headphones. Crafted from premium German Liquid Silicone Rubber (LSR), these tips provide a secure fit, superior noise cancellation, and improved sound performance. This manual will guide you through the proper installation, sizing, and care of your new earbud tips.



Image: A pair of AZLA SednaEarfit Crystal Standard ML size earbud tips.

COMPATIBILITY

These earbud tips are compatible with a wide range of wireless headphones and in-ear monitors. Key compatible models include:

- Shure (with included adapter)
- Sony WF-1000XM5, WF-1000XM4, WF-1000XM3, WF-XB700, WFH800, LinkBuds S, INZONE Buds
- Beats Power Beats Pro
- Sennheiser Momentum True Wireless 1, MTW2, MTW 1, 2, 3, CX True Wireless, CX400BT, CX PLUS TW
- Jabra Elite 85T
- JBL WAVE100, JBL Streak
- Skullcandy PUSH
- JLAB Epic Air Sport, JLAB Epic Air ANC
- Jaybird RUN
- ANKER Liberty 3 Pro, Life Dot 2 ANC
- BRITZ BR-TWS202

- Bowers & Wilkins Pi7, Pi7 S2, Pi5
- Devialet Gemini
- DENON Perl Pro
- Harman Kardon Fly TWS
- Lypertek Tevi, Z3
- Noble Audio Falcon, Fokus Pro, Noble Fokus Prestige
- Nuheara IQBuds2 MAX
- Philips TAT4556
- SUDIO TOLV
- Urbanears Alby
- YAMAHA TW-E3B, TW-E8B, TW-E3C

For Shure earbuds, an adapter is included to ensure proper fit and function.

Compatible with SHURE earbuds with adapter included



**EAR TIPS ONLY,
DOES NOT Include Earbuds**

Image: AZLA SednaEarfit Crystal tips installed on a Shure earbud using the provided adapter.

Compatible with SONY WF-1000XM4



EAR TIPS ONLY, DOES NOT Include Earbuds

Image: AZLA SednaEarfit Crystal tips installed on a Sony WF-1000XM4 earbud.

FEATURES

- **Premium Material:** Crafted from high-quality German Liquid Silicone Rubber (LSR) for maximum safety and comfort.
- **Superior Noise Cancellation:** Engineered based on scientific ear canal analysis to provide effective passive noise isolation, enhancing the listening experience.
- **Secure and Comfortable Fit:** Unique design ensures the tips remain securely in place during various activities, offering both stability and comfort.
- **Improved Audio Performance:** Designed to maintain and enhance sound and audio performance, delivering clear and rich sound without loss.
- **Durable Construction:** Made from robust materials for long-lasting use.

INSTALLATION GUIDE

Follow these steps to properly install the AZLA SednaEarfit Crystal Standard earbud tips onto your headphones:

1. **Remove Existing Tips:** Gently twist and pull off the current ear tips from your earbud nozzles.
2. **Prepare New Tips:** Select the appropriate size of AZLA SednaEarfit Crystal tips (refer to the Sizing and Fit section).

3. **Attach Tips:** Align the opening of the SednaEarfit Crystal tip with the earbud nozzle. Push the tip onto the nozzle, twisting gently until it is fully seated and secure. Ensure the tip is firmly attached and does not wobble.
4. **For Shure Earbuds:** If using Shure earbuds, first attach the provided adapter to the earbud nozzle, then attach the SednaEarfit Crystal tip to the adapter.



Image: A hand demonstrating the installation of an earbud tip onto an earbud nozzle.

Compatible with SONY WF-1000XM4



EAR TIPS ONLY, DOES NOT Include Earbuds


Image: Sony WF-1000XM4 earbuds with AZLA SednaEarfit Crystal tips fitted, placed inside their charging case, demonstrating proper fit within the case.

SIZING AND FIT GUIDE

Achieving the correct fit is crucial for optimal sound quality and noise cancellation. The AZLA SednaEarfit Crystal tips are available in various sizes (SS, S, MS, M, ML, L). Consider the following to find your ideal size:

- **Eartip Core Length:** Ensure the eartip core length is compatible with your earbud's nozzle. The SednaEarfit Crystal tips are designed for core lengths between 4.4mm and 10.0mm.
- **Eartip Umbrella Diameter:** The diameter of the eartip umbrella should comfortably seal your ear canal without causing discomfort. Diameters range from 9.6mm to 14.0mm across the available sizes.
- **Trial and Error:** If unsure, it is recommended to try different sizes to determine which provides the best seal, comfort, and sound. A good seal will result in enhanced bass response and effective noise isolation.

SednaEarfit Crystal

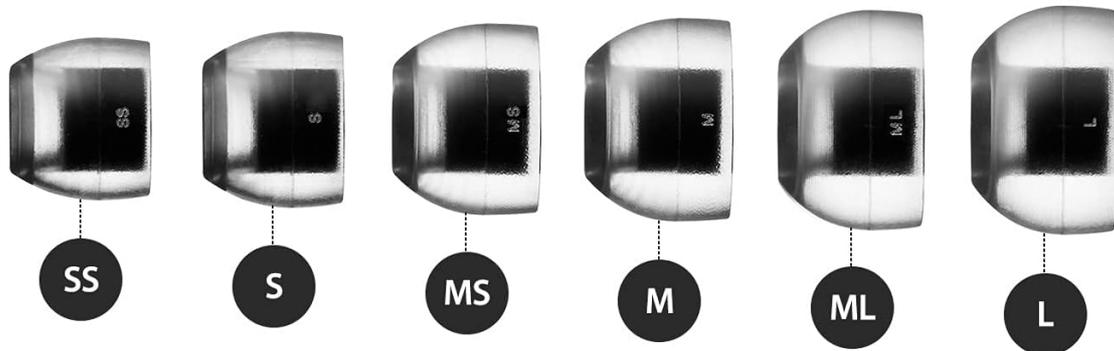

	SS	S	MS	M	ML	L
size(mm)						
	∅ 10.4	∅ 11.2	∅ 11.9	∅ 12.6	∅ 13.3	∅ 14

Image: Detailed size chart illustrating the dimensions (height and diameter) for all available AZLA SednaEarfit Crystal tip sizes (SS, S, MS, M, ML, L).



Image: Diagram illustrating how to determine if the eartip core length is suitable for your earbuds, showing different SednaEarfit models and their core lengths.



Image: Diagram detailing the diameter of the eartip umbrella for various sizes and a comparison with typical stock eartip tips.

CARE AND MAINTENANCE

To ensure the longevity and hygiene of your AZLA SednaEarfit Crystal Standard eartip tips, follow these maintenance guidelines:

- **Regular Cleaning:** The silicone material can attract dust and earwax. Clean the tips periodically with warm water and a mild soap. Rinse thoroughly and allow them to air dry completely before reattaching to your earbuds.
- **Avoid Harsh Chemicals:** Do not use alcohol-based cleaners or abrasive materials, as these can damage the silicone.
- **Storage:** When not in use, store the ear tips in a clean, dry place, preferably in a small container to prevent dust accumulation.

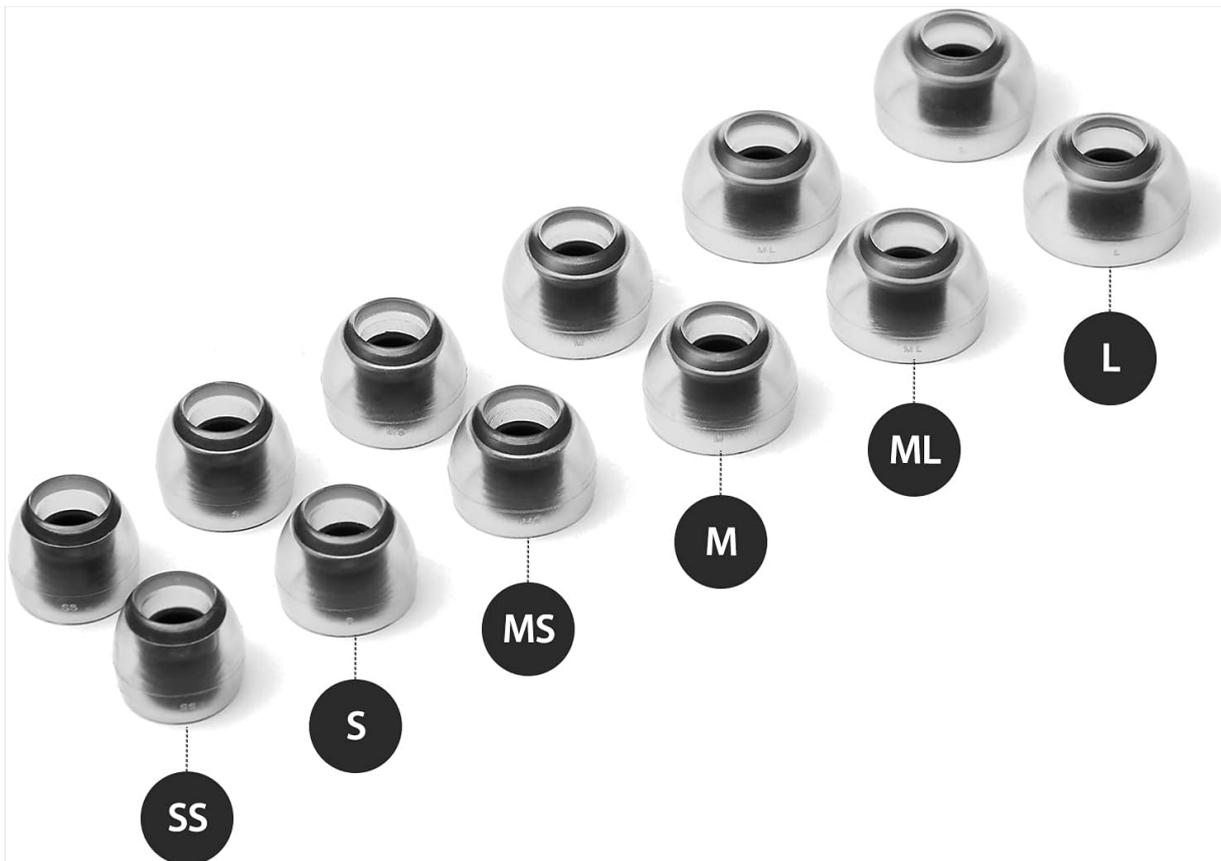


Image: An assortment of AZLA SednaEarfit Crystal eartip tips in different sizes, highlighting their clear silicone material.

TROUBLESHOOTING

If you encounter issues with your eartip tips, consider the following common solutions:

- **Poor Noise Cancellation or Sound Quality:** This is often due to an improper seal.
 - Ensure the ear tips are fully seated on the earbud nozzles.
 - Re-evaluate your chosen size. A size that is too small will not create an adequate seal, leading to sound leakage and reduced bass. A size that is too large may cause discomfort or prevent a proper fit.
 - Try a different size from the available range to find the best seal for your ear canal.
- **Discomfort or Ear Fatigue:**
 - The ear tips may be too large. Try a smaller size.
 - Ensure the ear tips are inserted correctly and not pressing against sensitive parts of your ear.
- **Ear Tips Falling Out:**
 - The ear tips may be too small or not properly seated. Ensure they are pushed firmly onto the earbud nozzle.
 - Consider trying a larger size to achieve a more secure fit.

SPECIFICATIONS

Brand	AZLA
Model Number	AZLASTD05
Material	LSR (Liquid Silicone Rubber)
Color	Clear
Item Weight	0.493 ounces
Package Dimensions	3.7 x 2.8 x 0.7 inches
Compatible Headphone Models	Beats Powerbeats Pro, Sony WF-1000XM4, Sony WF-1000XM5, Sennheiser, Shure, Jabra, JBL, and others listed in Compatibility section.

SUPPORT INFORMATION

For further assistance, product inquiries, or warranty information, please contact the manufacturer, AZLA Inc., or refer to the official AZLA website. Support contact details are typically available on the product packaging or the manufacturer's official online channels.

Manufacturer: AZLA Inc.

Seller: AZLA Official Store