

[Manuals.plus](#) /

› [9 DIGITAL](#) /

› 9 DIGITAL N1 Bone Conduction Headphones User Manual

9 DIGITAL N1

9 DIGITAL N1 Bone Conduction Headphones User Manual

Model: LITE (N1)

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your 9 DIGITAL N1 Bone Conduction Headphones. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The 9 DIGITAL N1 Bone Conduction Headphones in black, shown with a pair of orange foam earplugs.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x 9 DIGITAL N1 Bluetooth Headset
- 1 x USB Charging Cable
- 2 x Sponge Earplugs
- 1 x User Manual (this document)

PRODUCT OVERVIEW

The 9 DIGITAL N1 headphones utilize bone conduction technology to transmit sound through your cheekbones, allowing you to remain aware of your surroundings. They feature a lightweight and durable design.

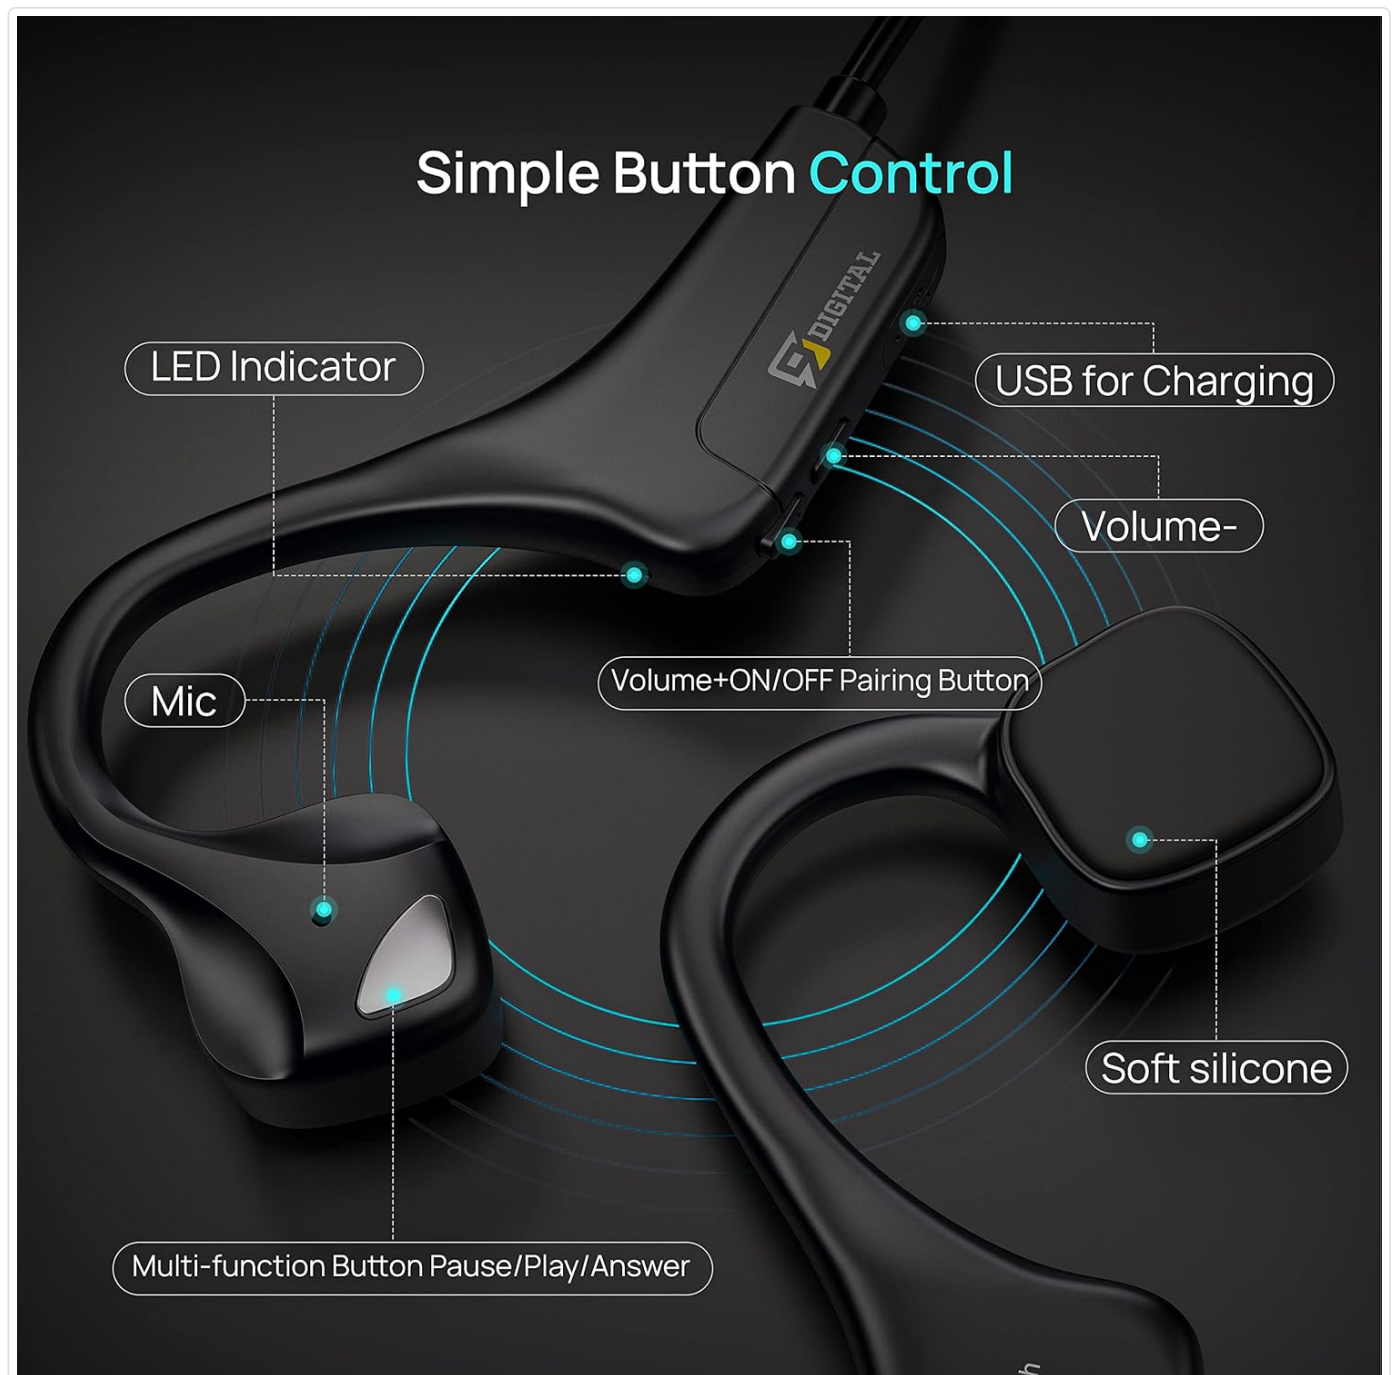


Image: A detailed diagram illustrating the location of buttons, LED indicator, microphone, and USB charging port on the 9 DIGITAL N1 headphones.

Controls and Indicators:

- **Multi-function Button:** Pause/Play music, Answer/End calls.
- **Volume + / ON/OFF / Pairing Button:** Increase volume, Power on/off, Initiate Bluetooth pairing.
- **Volume - Button:** Decrease volume.
- **Microphone (MIC):** For voice calls.
- **LED Indicator:** Displays device status (e.g., charging, paired, low battery).
- **USB Charging Port:** For connecting the charging cable.

SETUP

1. Charging the Headphones

1. Connect the USB charging cable to the charging port on the headphones.
2. Connect the other end of the USB cable to a standard USB power adapter (5V) or a computer's USB port.
3. The LED indicator will show the charging status. A full charge typically takes approximately 2 hours.
4. Once fully charged, disconnect the charging cable.

Lightweight but Large Battery Capacity



25g

200mAh
Large Capacity Battery

<2H
Fast Charging

480H
Long Standby Time

6.5H
Working Time

Image: An illustration highlighting the battery capacity (200mAh), charging time (less than 2 hours), standby time (480 hours), and working time (6.5 hours) of the headphones.

2. Pairing with a Bluetooth Device

1. Ensure the headphones are powered off.
2. Press and hold the **Volume + / ON/OFF / Pairing Button** for approximately 5-7 seconds until the LED indicator flashes red and blue alternately. This indicates pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings.
4. Search for available devices and select "N1" from the list.
5. Once connected, the LED indicator will typically show a solid blue light or flash blue slowly.
6. If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the **Volume + / ON/OFF / Pairing Button** for 3 seconds until the LED indicator flashes blue.
- **Power Off:** Press and hold the **Volume + / ON/OFF / Pairing Button** for 5 seconds until the LED indicator flashes red and then turns off.

Music Playback

- **Play/Pause:** Press the **Multi-function Button** once.
- **Volume Up:** Press the **Volume + Button**.
- **Volume Down:** Press the **Volume - Button**.
- **Next Track:** Press and hold the **Volume + Button** for 2 seconds.
- **Previous Track:** Press and hold the **Volume - Button** for 2 seconds.

Call Management

- **Answer/End Call:** Press the **Multi-function Button** once.
- **Reject Call:** Press and hold the **Multi-function Button** for 2 seconds.
- **Redial Last Number:** Double-press the **Multi-function Button**.

Wearing the Headphones

Place the headphones with the transducers resting on your cheekbones, just in front of your ears. The band should rest comfortably behind your head. Adjust for a secure and comfortable fit.

Using Earplugs

In very noisy environments, inserting the provided sponge earplugs can enhance the sound quality of the bone conduction headphones by reducing ambient noise. This allows you to focus more on the audio transmitted through your bones.

MAINTENANCE

- **Cleaning:** Wipe the headphones with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The headphones have an IP53 waterproof rating, meaning they are resistant to light splashes and sweat. Do not submerge them in water.
- **Durability:** The titanium frame is designed to be flexible and resilient. Avoid excessive bending or twisting beyond its natural range of motion.

Resilient and Durable

Made of high-strength titanium alloy can be bent at will and quickly restored to its original shape.



Image: An illustration demonstrating the 360-degree flexibility and durability of the titanium alloy frame of the 9 DIGITAL N1 headphones.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect to a power source and check the LED indicator.
Cannot pair with device.	◦ Ensure headphones are in pairing mode (LED flashing red and blue). ◦ Turn off and on your device's Bluetooth. ◦ Move headphones closer to the device (within 10 meters). ◦ Forget "N1" from your device's Bluetooth list and try pairing again.

Problem	Possible Solution
No sound or low volume.	◦ Increase volume on both the headphones and your connected device. ◦ Ensure the headphones are properly positioned on your cheekbones. ◦ Check if the headphones are connected to the correct device.
Sound quality is poor in noisy environments.	Use the provided sponge earplugs to block out ambient noise, which can improve the perceived sound quality of bone conduction audio.
Headphones disconnect frequently.	◦ Ensure the headphones are within the 10-meter Bluetooth range of your device. ◦ Check for interference from other wireless devices. ◦ Recharge the headphones if the battery is low.

SPECIFICATIONS

Feature	Detail
Model	N1 (LITE)
Material	PC, ABS, Titanium, Silicone
Bluetooth Technology	V5.0 (Qualcomm 8635 Chip)
Bluetooth Range	Up to 10 meters (33 feet)
Battery Type	Li-polymer
Battery Capacity	200 mAh
Charging Voltage	5V
Charging Time	Approximately 2 hours
Music Playback Time	Approximately 6.5 hours
Talk Time	Approximately 8 hours
Standby Time	Approximately 480 hours
Waterproof Rating	IP53
Microphone	Built-in (1)
Product Weight	25g (0.88 oz)

Bluetooth 5.0, High-fidelity Sound



Image: A diagram illustrating the Bluetooth 5.0 technology, highlighting a 33ft sensing distance, 99% compatibility with Bluetooth devices, and low energy consumption.

WARRANTY AND SUPPORT

The 9 DIGITAL N1 Bone Conduction Headphones come with a 1-year warranty from the date of purchase, covering manufacturing defects. Additionally, a 45-day free return and quick refund policy is available, along with a 2-year free replacement for product quality issues.

For technical support or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official 9 DIGITAL website.

© 2023 9 DIGITAL. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09BJJTKLK>

More documents and user manuals: <https://manuals.plus/>